

PARTS LIST No. D58743 01004I

部 品 表  
**PARTS LIST**

型 式  
MODEL **DCW-480ESW**

*EVO III Limited Edition*

 **デンヨー株式会社**  
**Denyo Co., Ltd.**

適用製造番号  
SERIAL No. 5717852~

## HOW TO USE THE PARTS LIST

1. This parts list covers the parts for Engine Welder/Generator Model DCW-480ESW.
2. When placing orders, specify the following details;
  - 1) Model Number and Serial Number.
  - 2) Parts Number and Parts Name.
  - 3) Quantity required.
3. The parts listed with a serial number are new parts.  
Please place an order with us after confirmation of serial number for machine at your side.
4. The sequence of this parts list is by machine structure. Each group of parts has an illustration on the first page of the parts list. Parts can be identified on the parts list, using the key number on the illustration. These key number, on the illustration, are also shown on the left-hand column in the parts list.
5. The parts number are shown as 10 digits and alphabet. The parts number of the parts makers are shown in the remark column.
6. The parts marked with an asterisk and the parts not listed are not available as a single part, and orders must be placed for them as an assembly.
7. This parts list uses the following abbreviations and symbols:

|       |                                         |      |                                                                                  |
|-------|-----------------------------------------|------|----------------------------------------------------------------------------------|
| All   | :Some parts differ<br>from unit to unit | p.   | :Page                                                                            |
| Ass'y | :Assembly                               | Re.  | :Rear                                                                            |
| Fr.   | :Front                                  | R.H. | :Right                                                                           |
| L.H.  | :Left                                   | STD  | :Standard                                                                        |
| No.   | :Number                                 | →    | :Indication of the page<br>where the modified or additional<br>parts are listed. |
| O.P.  | :Optional Parts                         |      |                                                                                  |



Each symbol 「A」 「B」 「C」 listed in a part of Q'ty shows the appropriate parts number for the unit you purchased. The meaning of the symbol 「A」 「B」 「C」 is listed on the first top place of each assembly group.

Please check the specification of the unit such as frequency, voltage, model No. etc. before placing orders.

8. Left (L.H.) and Right (R.H.) used in this parts list show the direction when you look at the engine from the generator side.
9. For the engine parts not listed in this parts list, refer to "KUBOTA Corporation V1505 Diesel Engine Parts Catalogue".


# I N D E X

| N a m e                                    | Page    |
|--------------------------------------------|---------|
| Engine-Driven DC Welder/Generator Set..... | 1 — 1   |
| Generator Ass'y.....                       | 2 — 1   |
| Control Panel Ass'y.....                   | 3 — 1   |
| Electric Parts Ass'y (Part 1).....         | 4 — 1   |
| Electric Parts Ass'y (Part 2).....         | 5 — 1   |
| Engine & Radiator Ass'y.....               | 6 — 1   |
| Battery Ass'y.....                         | 7 — 1   |
| Muffler Ass'y.....                         | 8 — 1   |
| Fuel Tank Ass'y.....                       | 9 — 1   |
| Bonnet Ass'y (Part 1).....                 | 1 0 — 1 |
| Bonnet Ass'y (Part 2).....                 | 1 1 — 1 |
| Name Plate Ass'y.....                      | 1 2 — 1 |

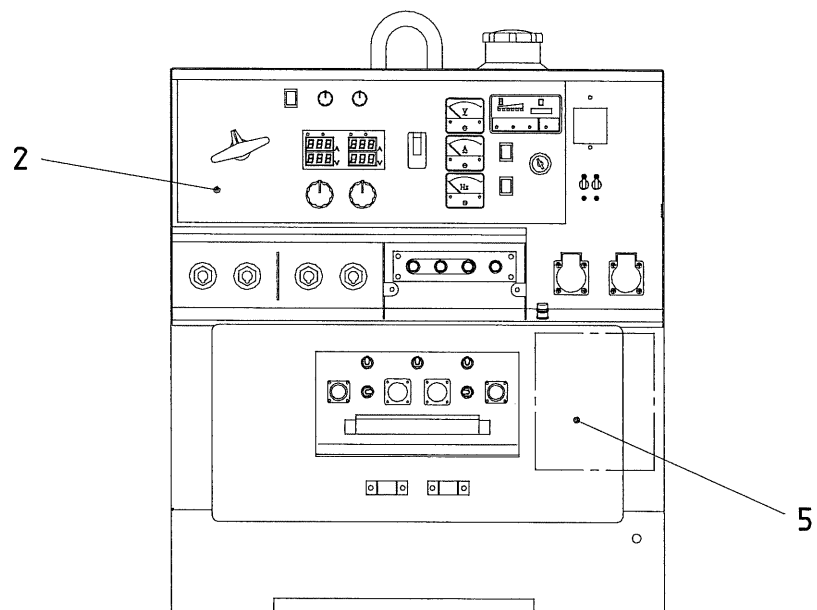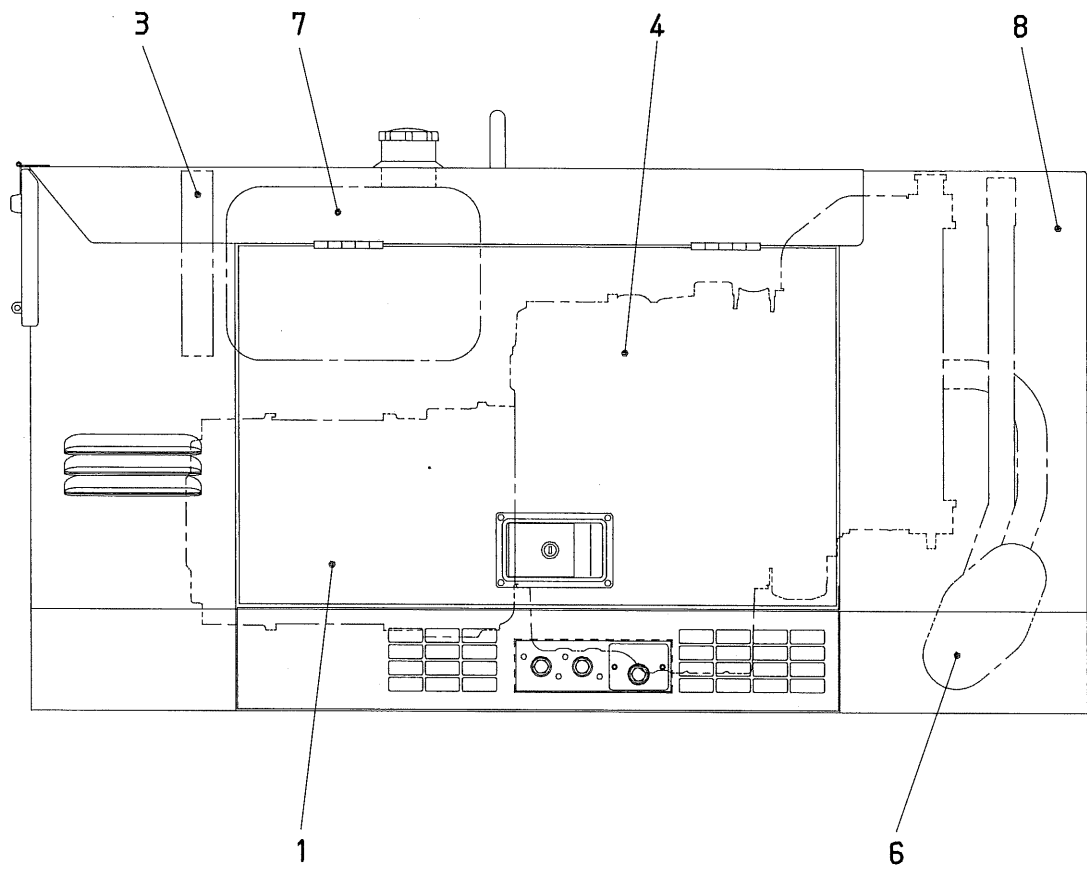


| Key No. | Parts No. | Parts Name                    | Remarks                | Q'ty |   |   |   | Symbol | Serial No.          |
|---------|-----------|-------------------------------|------------------------|------|---|---|---|--------|---------------------|
|         |           |                               |                        | All  | A | B | C |        |                     |
| 1       |           | Generator Ass'y               | Refer to p. 2-1        |      |   |   |   |        |                     |
| 2       |           | Control Panel Ass'y           | Refer to p. 3-1, 3-2   |      |   |   |   |        | ~5771782            |
|         |           | Control Panel Ass'y           | Refer to p. 3-1-1, 3-2 |      |   |   |   |        | 5771783~<br>5784940 |
|         |           | Control Panel Ass'y           | Refer to p. 3-1-2, 3-2 |      |   |   |   |        | 5784941~<br>5812029 |
|         |           | Control Panel Ass'y           | Refer to p. 3-1-3, 3-2 |      |   |   |   |        | 5812030~<br>5836132 |
|         |           | Control Panel Ass'y           | Refer to p. 3-1-4, 3-2 |      |   |   |   |        | 5836133~            |
| 3       |           | Electric Parts Ass'y (Part 1) | Refer to p. 4-1        |      |   |   |   |        |                     |
|         |           | Electric Parts Ass'y (Part 2) | Refer to p. 5-1        |      |   |   |   |        |                     |
| 4       |           | Engine & Radiator Ass'y       | Refer to p. 6-1        |      |   |   |   |        | ~5771782            |
|         |           | Engine & Radiator Ass'y       | Refer to p. 6-1-1      |      |   |   |   |        | 5771783~            |
| 5       |           | Battery Ass'y                 | Refer to p. 7-1        |      |   |   |   |        |                     |
| 6       |           | Muffler Ass'y                 | Refer to p. 8-1        |      |   |   |   |        | ~5806414            |
|         |           | Muffler Ass'y                 | Refer to p. 8-1-1      |      |   |   |   |        | 5806415~            |
| 7       |           | Fuel Tank Ass'y               | Refer to p. 9-1        |      |   |   |   |        |                     |
| 8       |           | Bonnet Ass'y (Part 1)         | Refer to p. 10-1       |      |   |   |   |        |                     |
|         |           | Bonnet Ass'y (Part 2)         | Refer to p. 11-1       |      |   |   |   |        |                     |
| 9       |           | Name Plate Ass'y              | Refer to p. 12-1       |      |   |   |   |        | ~5725312            |
|         |           | Name Plate Ass'y              | Refer to p. 12-1-1     |      |   |   |   |        | 5725313~<br>5758658 |
|         |           | Name Plate Ass'y              | Refer to p. 12-1-2     |      |   |   |   |        | 5758659~<br>5762222 |
|         |           | Name Plate Ass'y              | Refer to p. 12-1-3     |      |   |   |   |        | 5762223~<br>5771782 |
|         |           | Name Plate Ass'y              | Refer to p. 12-1-4     |      |   |   |   |        | 5771783~<br>5812029 |
|         |           | Name Plate Ass'y              | Refer to p. 12-1-5     |      |   |   |   |        | 5812030~<br>5816625 |
|         |           | Name Plate Ass'y              | Refer to p. 12-1-6     |      |   |   |   |        | 5816626~            |


| Key No. | Parts No.     | Parts Name                         | Remarks | Q'ty |   |   |   | Symbol | Serial No.          |
|---------|---------------|------------------------------------|---------|------|---|---|---|--------|---------------------|
|         |               |                                    |         | All  | A | B | C |        |                     |
|         | D 62411 02002 | Generator Wiring Diagram(Japanese) |         |      |   |   |   |        | ~5836132            |
|         | D 62411 02012 | Generator Wiring Diagram(Japanese) |         |      |   |   |   |        | 5836133~            |
|         | D 68140 01403 | Generator Wiring Diagram(English)  |         |      |   |   |   |        | ~5836132            |
|         | D 68140 01413 | Generator Wiring Diagram(English)  |         |      |   |   |   |        | 5836133~            |
|         | D 63580 00903 | Engine Wiring Diagram(Japanese)    |         |      |   |   |   |        | ~5762222            |
|         | D 63580 00913 | Engine Wiring Diagram(Japanese)    |         |      |   |   |   |        | 5762223~<br>5771782 |
|         | D 63580 00923 | Engine Wiring Diagram(Japanese)    |         |      |   |   |   |        | 5771783~<br>5812029 |
|         | D 63580 01203 | Engine Wiring Diagram(Japanese)    |         |      |   |   |   |        | 5812030~            |
|         | D 68141 00703 | Engine Wiring Diagram(English)     |         |      |   |   |   |        | ~5762222            |
|         | D 68141 00713 | Engine Wiring Diagram(English)     |         |      |   |   |   |        | 5762223~<br>5771782 |
|         | D 68141 00723 | Engine Wiring Diagram(English)     |         |      |   |   |   |        | 5771783~<br>5812029 |
|         | D 68141 00733 | Engine Wiring Diagram(English)     |         |      |   |   |   |        | 5812030~            |
|         | D 68443 00404 | Instruction Manual                 |         |      |   |   |   |        | ~5762222            |
|         | D 68443 00414 | Instruction Manual                 |         |      |   |   |   |        | 5762223~<br>5795394 |
|         | D 68443 00424 | Instruction Manual                 |         |      |   |   |   |        | 5795395~<br>5812029 |
|         | D 68443 00434 | Instruction Manual                 |         |      |   |   |   |        | 5812030~            |

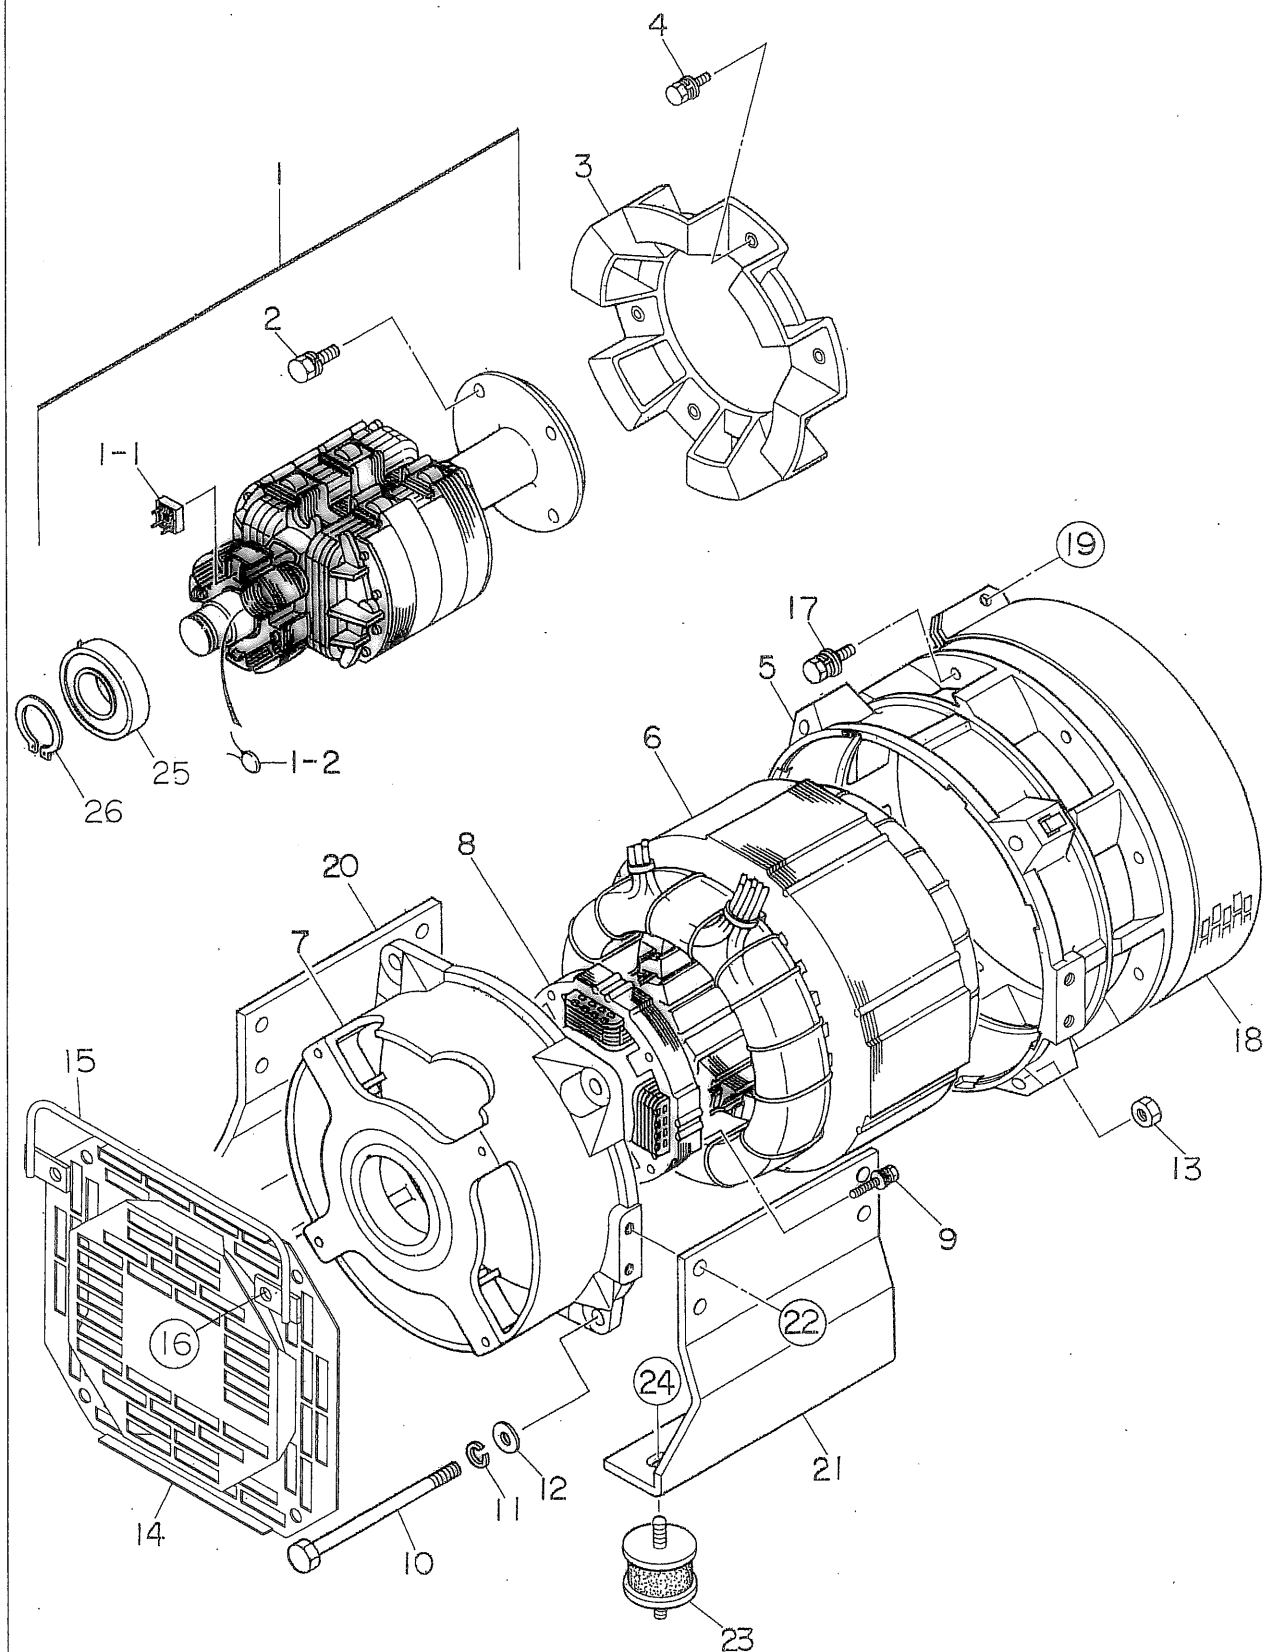



| Key No. | Parts No.     | Parts Name           | Remarks     | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|----------------------|-------------|------|---|---|---|--------|------------|
|         |               |                      |             | All  | A | B | C |        |            |
| 1       | D 41100 00403 | Rotor Ass'y          |             | 1    |   |   |   |        |            |
| 1- 1    | Y 06018 20037 | Rectifier            | S10VB60     | (1)  |   |   |   |        |            |
| 1- 2    | Y 06018 22638 | Surge Absorber       | TNR15G 431K | (1)  |   |   |   |        |            |
| 2       | Y 00124 10030 | Hex. Head Bolt       |             | 4    |   |   |   |        |            |
| 3       | D 41111 00103 | Fan                  |             | 1    |   |   |   |        |            |
| 4       | Y 00171 08025 | Hex. Head Bolt       |             | 6    |   |   |   |        |            |
| 5       | W 78113 15102 | End Bracket          |             | 1    |   |   |   |        |            |
| 6       | D 61350 00703 | Armature Ass'y       |             | 1    |   |   |   |        |            |
| 7       | D 41530 00202 | End Bracket          |             | 1    |   |   |   |        |            |
| 8       | D 41390 00003 | Field Ass'y, exciter |             | 1    |   |   |   |        |            |
| 9       | Y 00171 05035 | Hex. Head Bolt       |             | 4    |   |   |   |        |            |
| 10      | D 41315 00004 | Set Bolt             |             | 4    |   |   |   |        |            |
| 11      | Y 00400 12000 | Spring Washer        |             | 4    |   |   |   |        |            |
| 12      | Y 00412 12000 | Plain Washer         |             | 4    |   |   |   |        |            |
| 13      | Y 00300 12000 | Hex. Nut             |             | 4    |   |   |   |        |            |
| 14      | D 51544 00003 | Cover                |             | 1    |   |   |   |        |            |
| 15      | D 41853 00004 | Bracket              |             | 1    |   |   |   |        |            |
| 16      | Y 00171 08016 | Hex. Head Bolt       |             | 4    |   |   |   |        |            |
| 17      | Y 00124 10025 | Hex. Head Bolt       |             | 8    |   |   |   |        |            |
| 18      | D 41554 00104 | Cover, fan           |             | 1    |   |   |   |        |            |
| 19      | Y 03404 06040 | Hex. Head Bolt       |             | 1    |   |   |   |        |            |
|         | Y 00379 06000 | U Nut                |             | 1    |   |   |   |        |            |
|         | Y 00412 06000 | Plain Washer         |             | 1    |   |   |   |        |            |


| Key No. | Parts No.     | Parts Name        | Remarks    | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|-------------------|------------|------|---|---|---|--------|------------|
|         |               |                   |            | All  | A | B | C |        |            |
| 20      | D 51321 00103 | Generator Foot    |            | 1    |   |   |   |        |            |
| 21      | D 51321 00003 | Generator Foot    |            | 1    |   |   |   |        |            |
| 22      | Y 00123 10025 | Hex. Head Bolt    |            | 8    |   |   |   |        |            |
| 23      | W 76054 19004 | Rubber Suspension |            | 2    |   |   |   |        |            |
| 24      | Y 02070 10000 | Hex. Nut          |            | 2    |   |   |   |        |            |
| 25      | Y 00712 06307 | Bearing           | 6307DDU C3 | 1    |   |   |   |        |            |
| 26      | Y 00800 00035 | Snap Ring         |            | 1    |   |   |   |        |            |

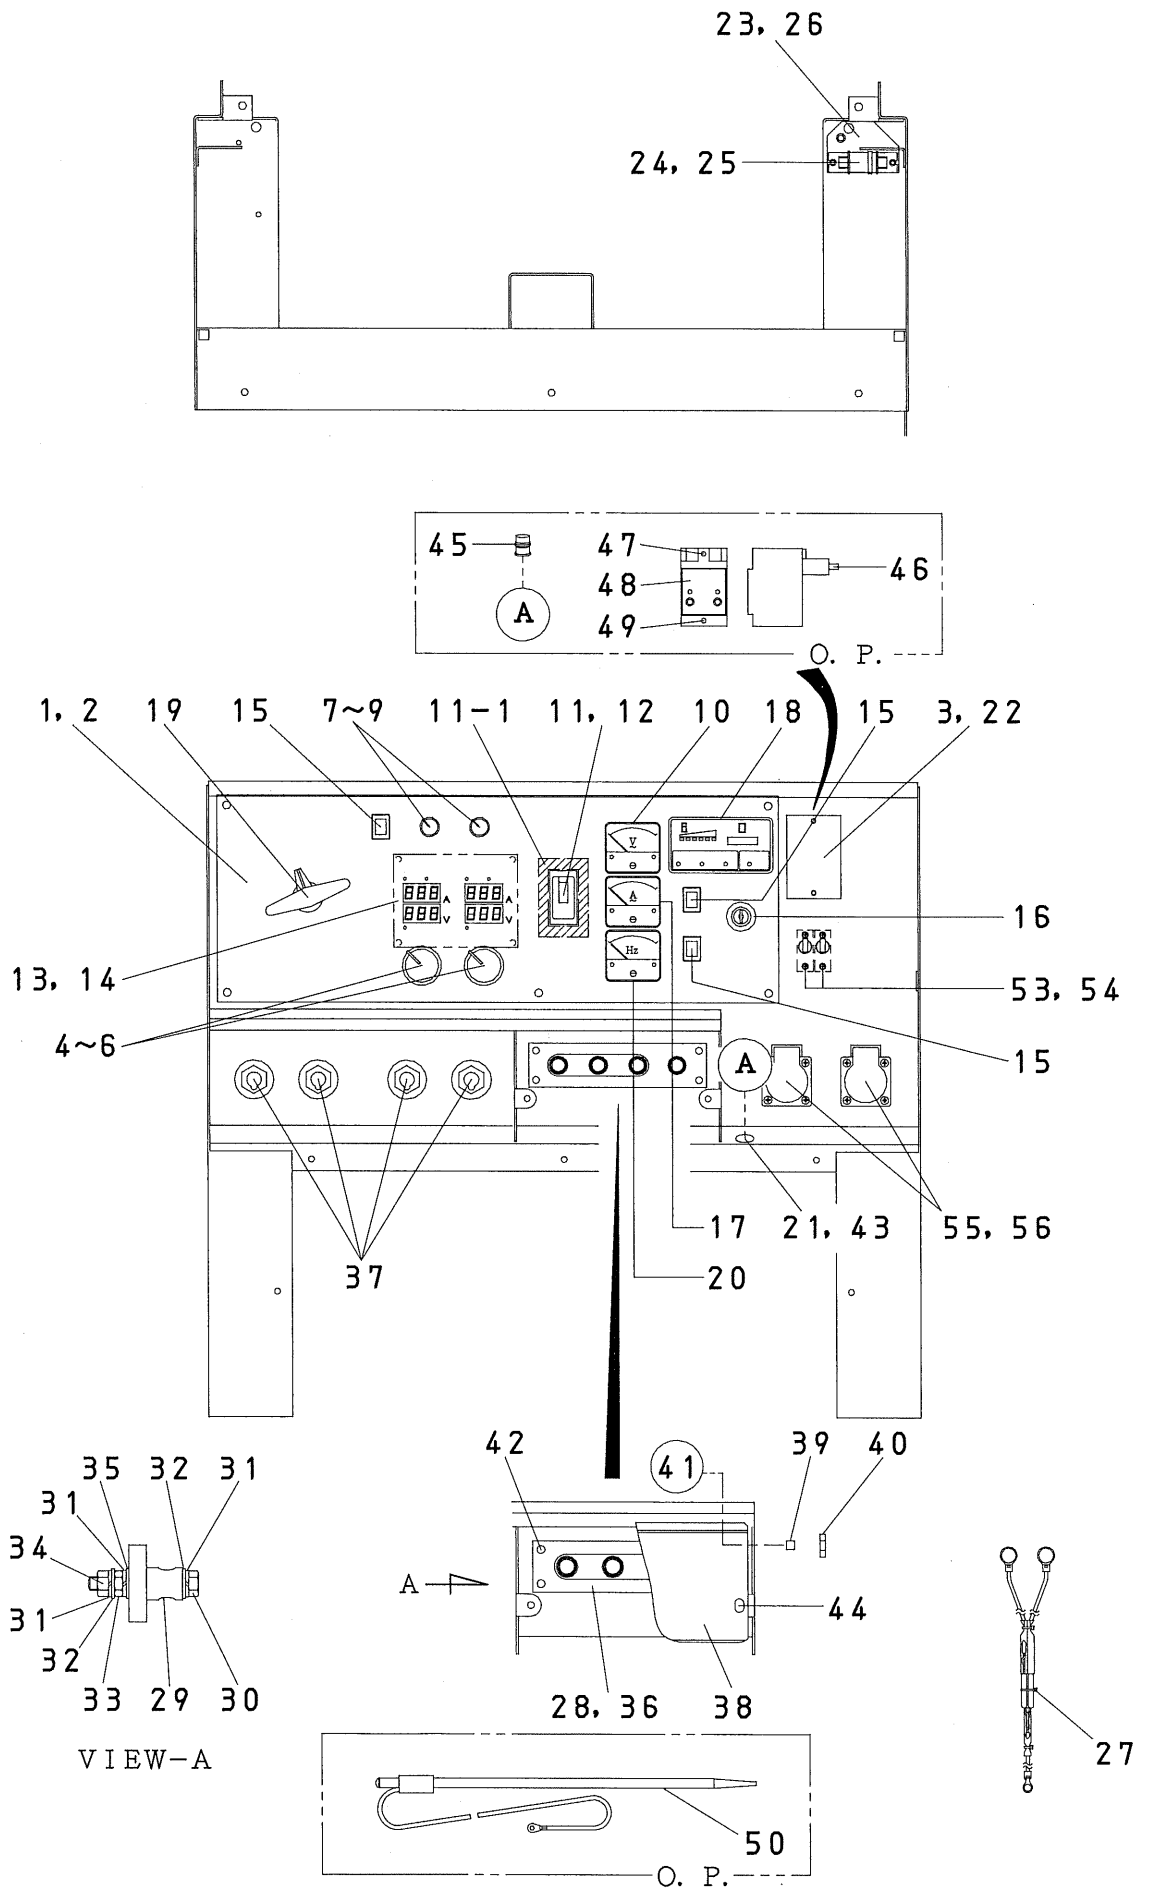


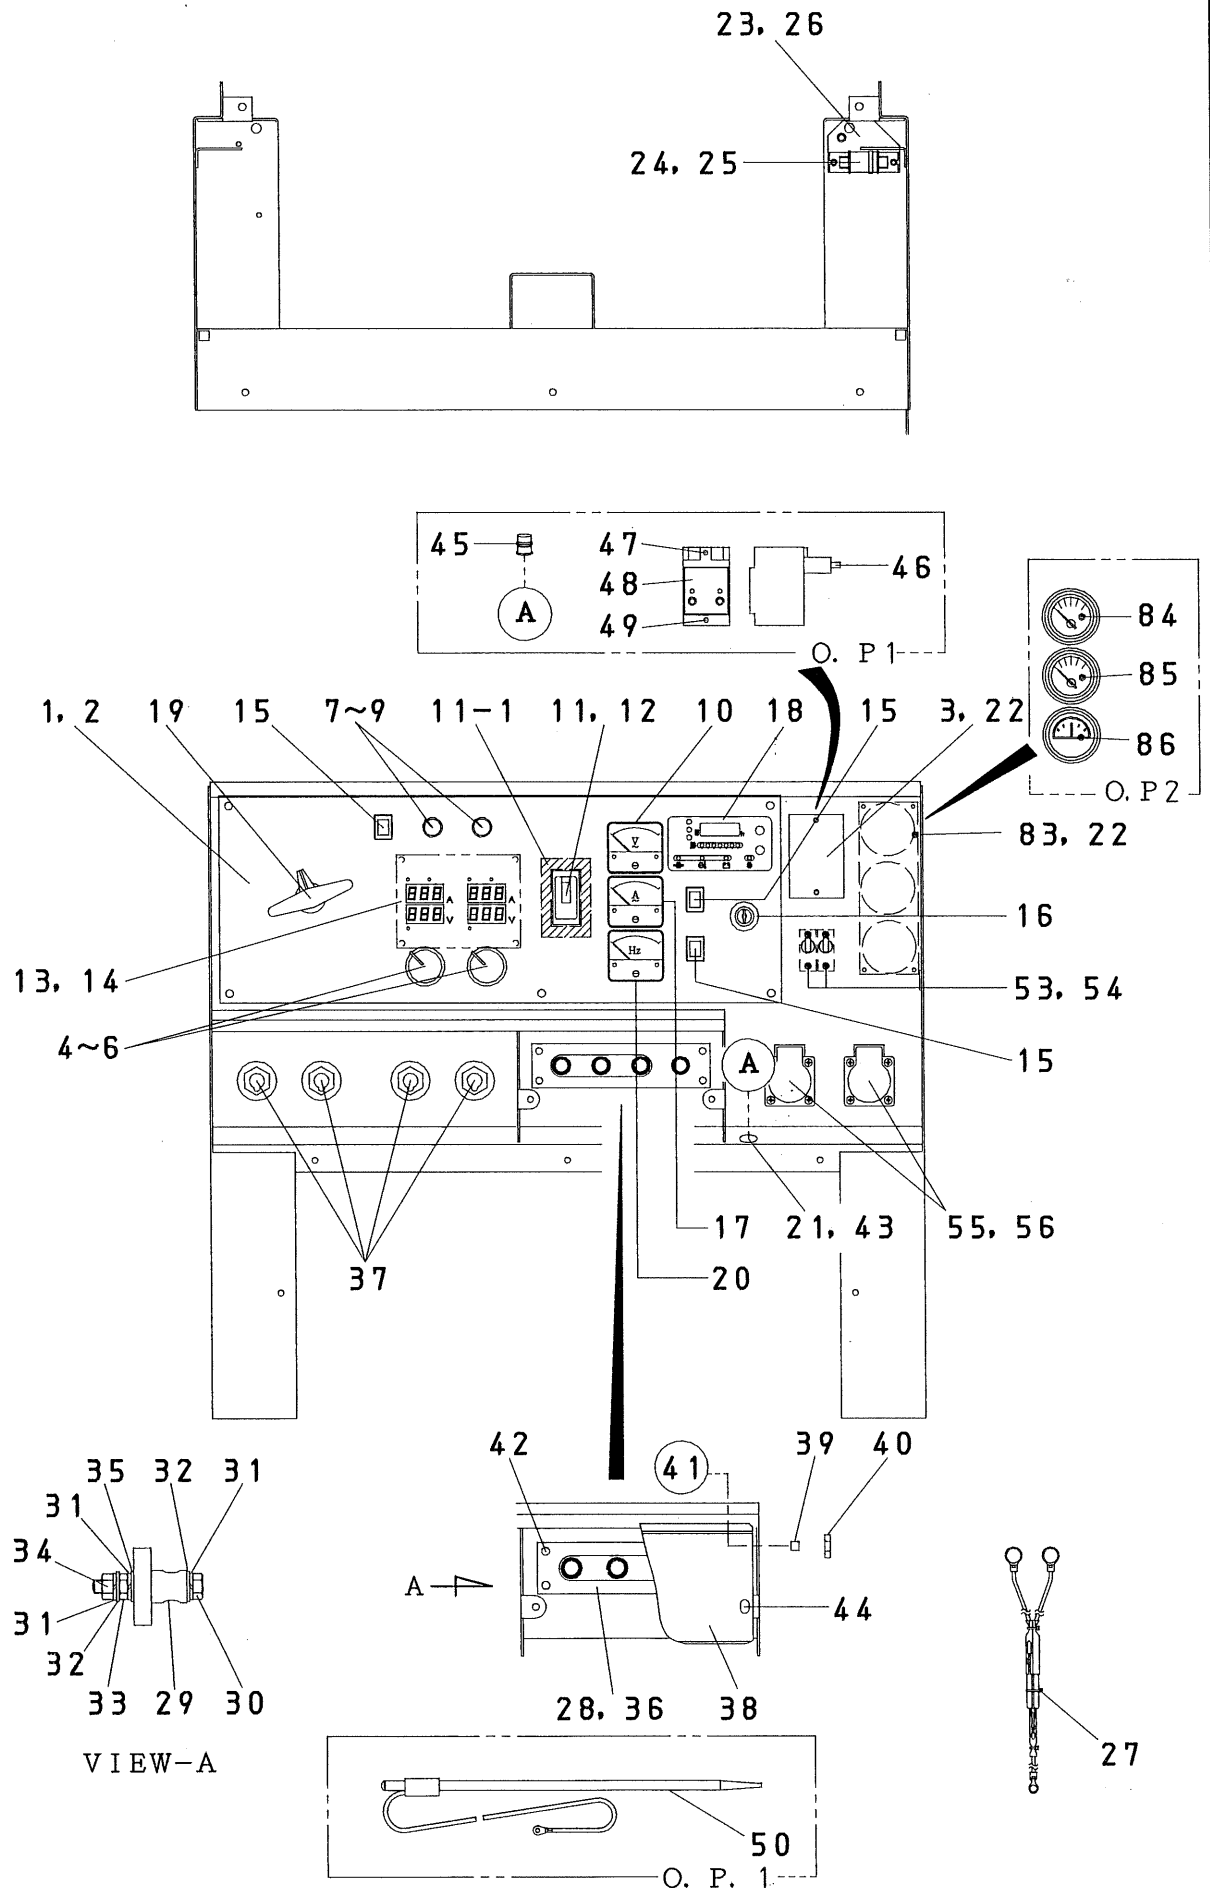

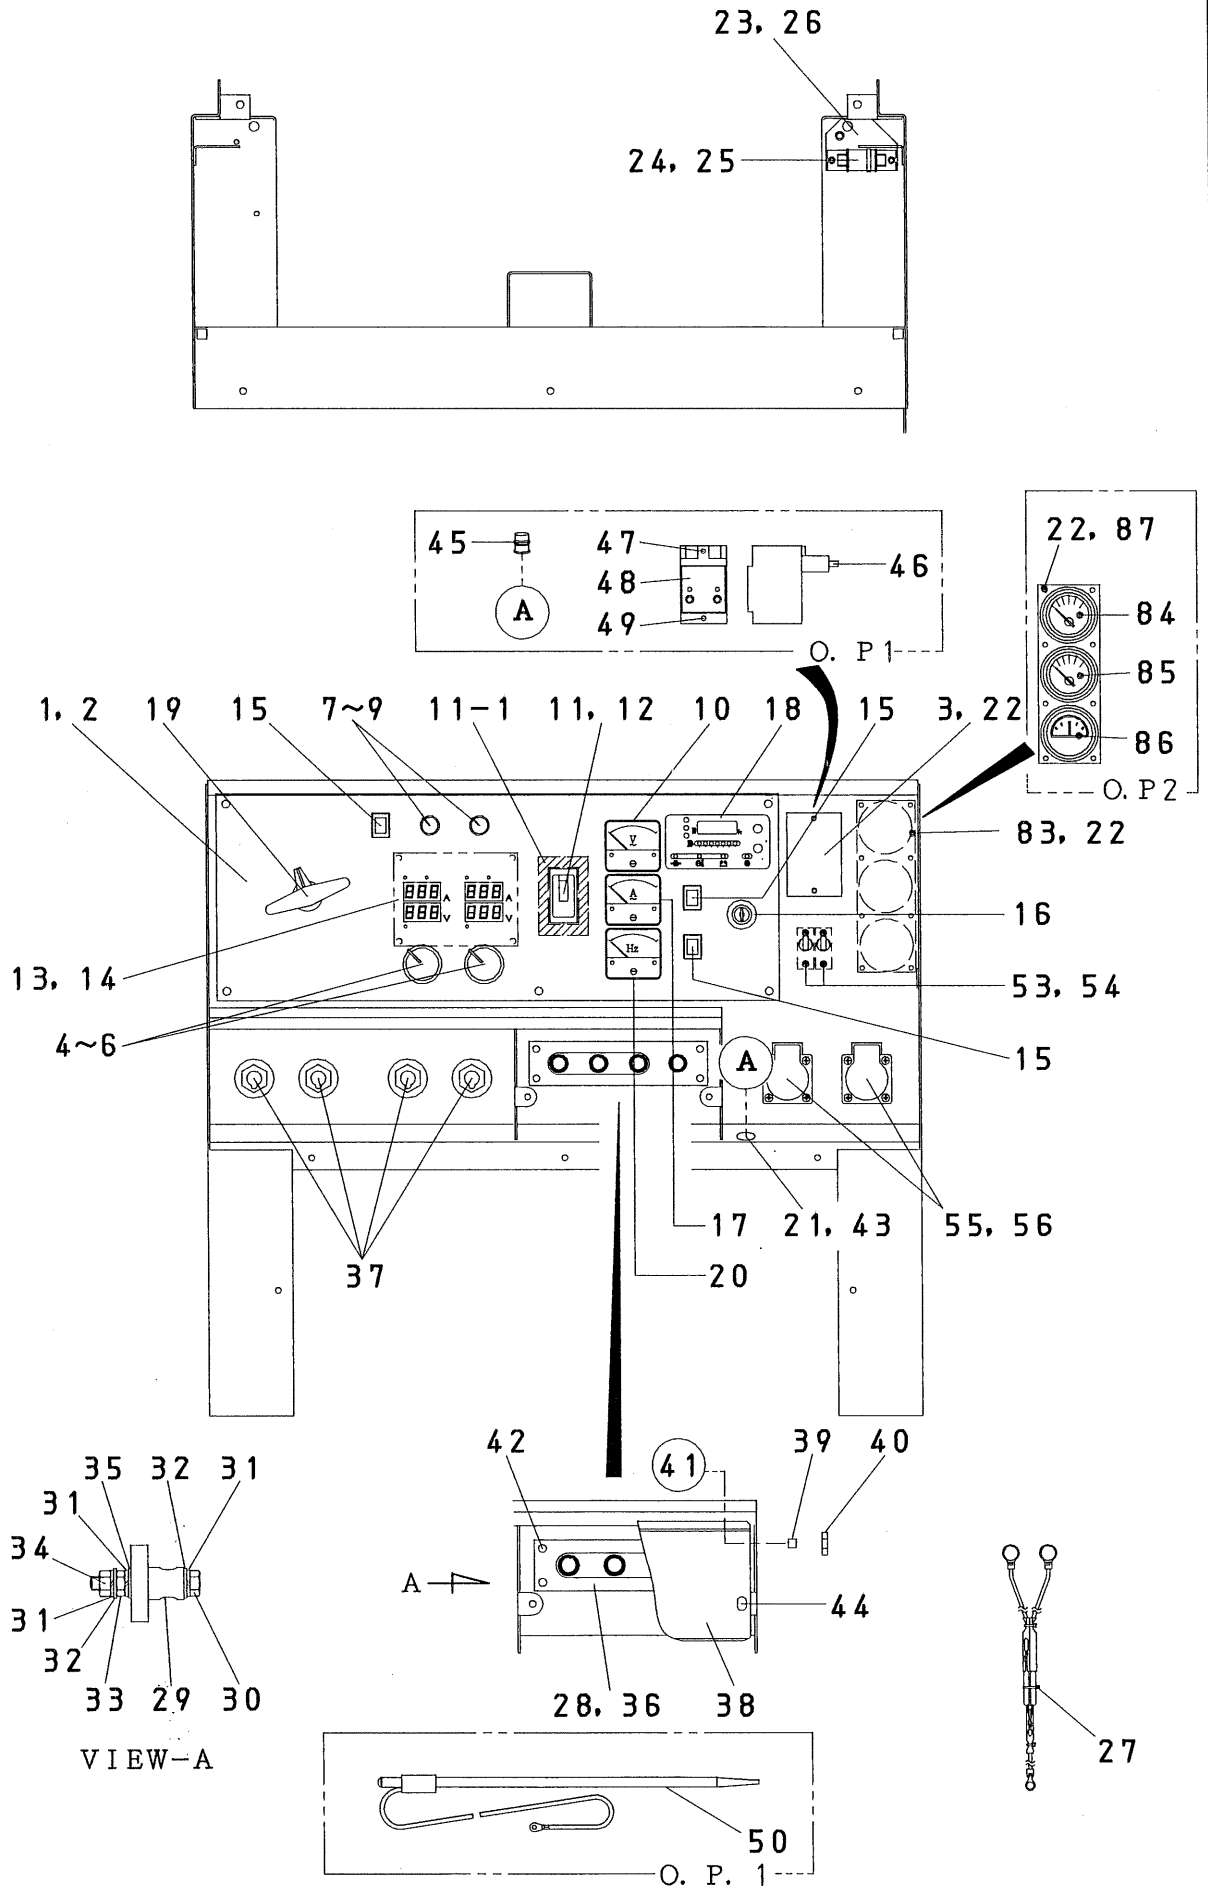

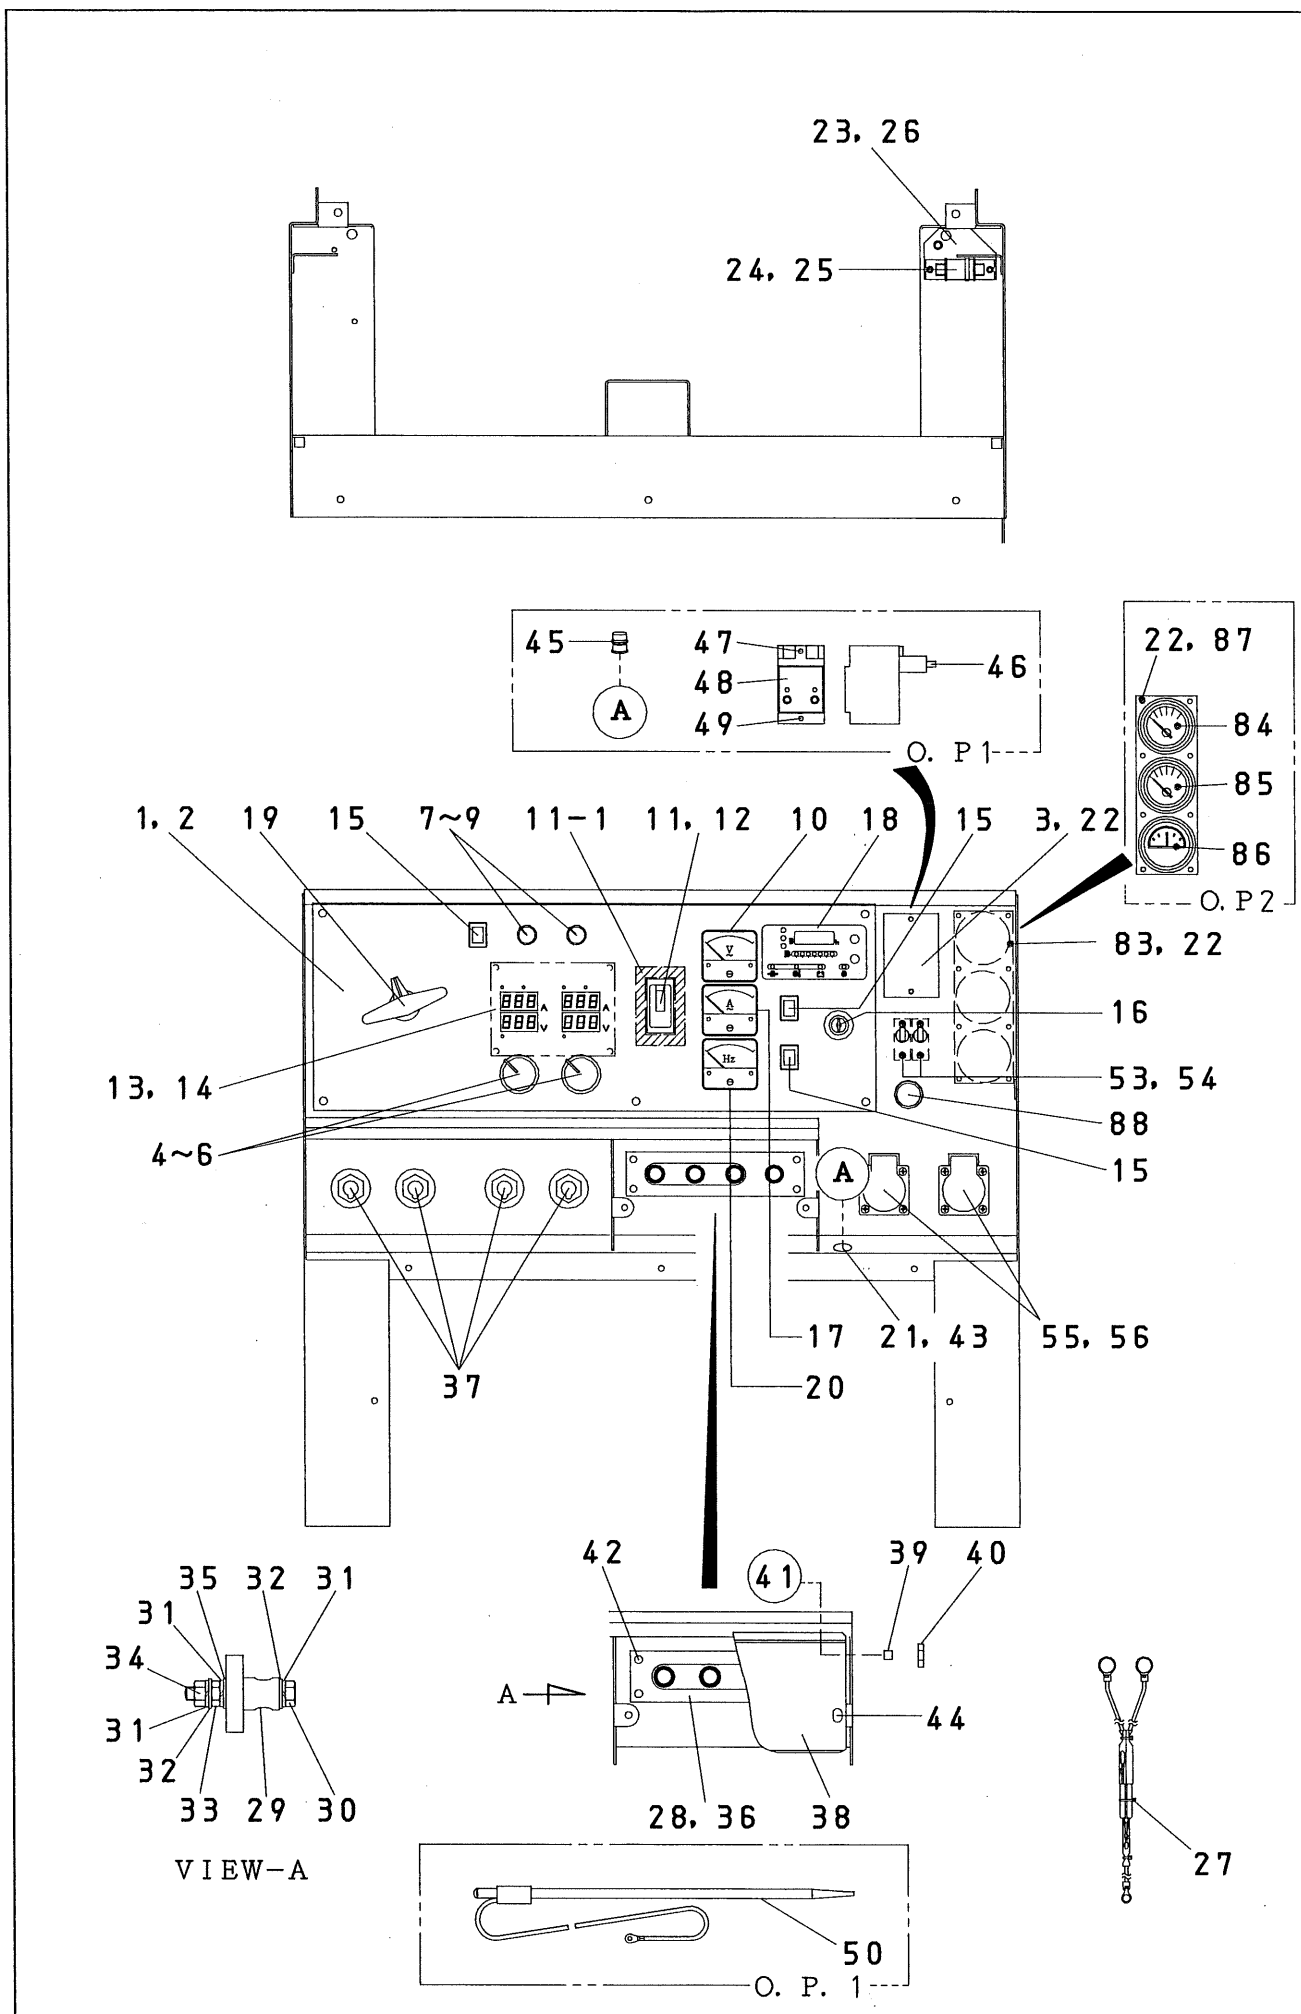

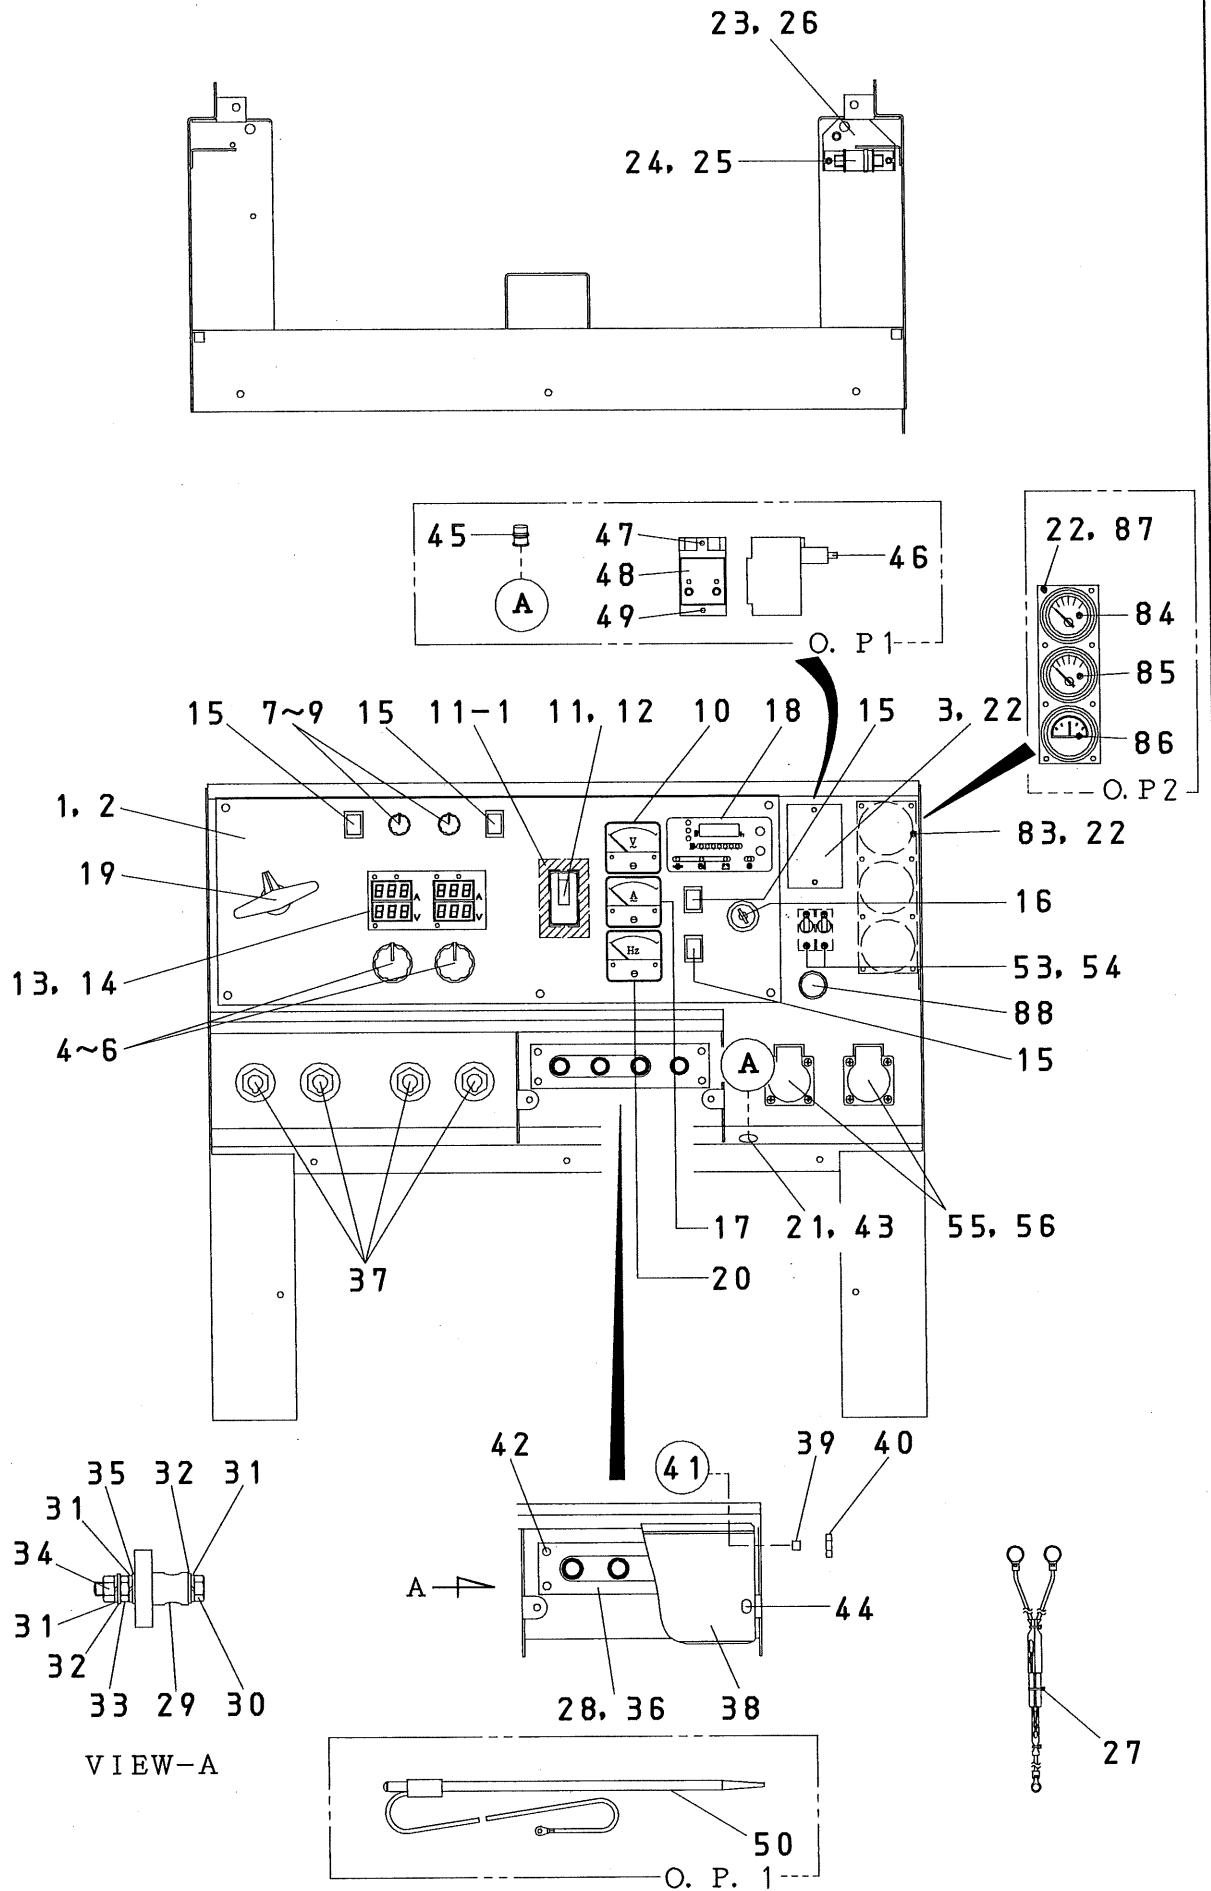

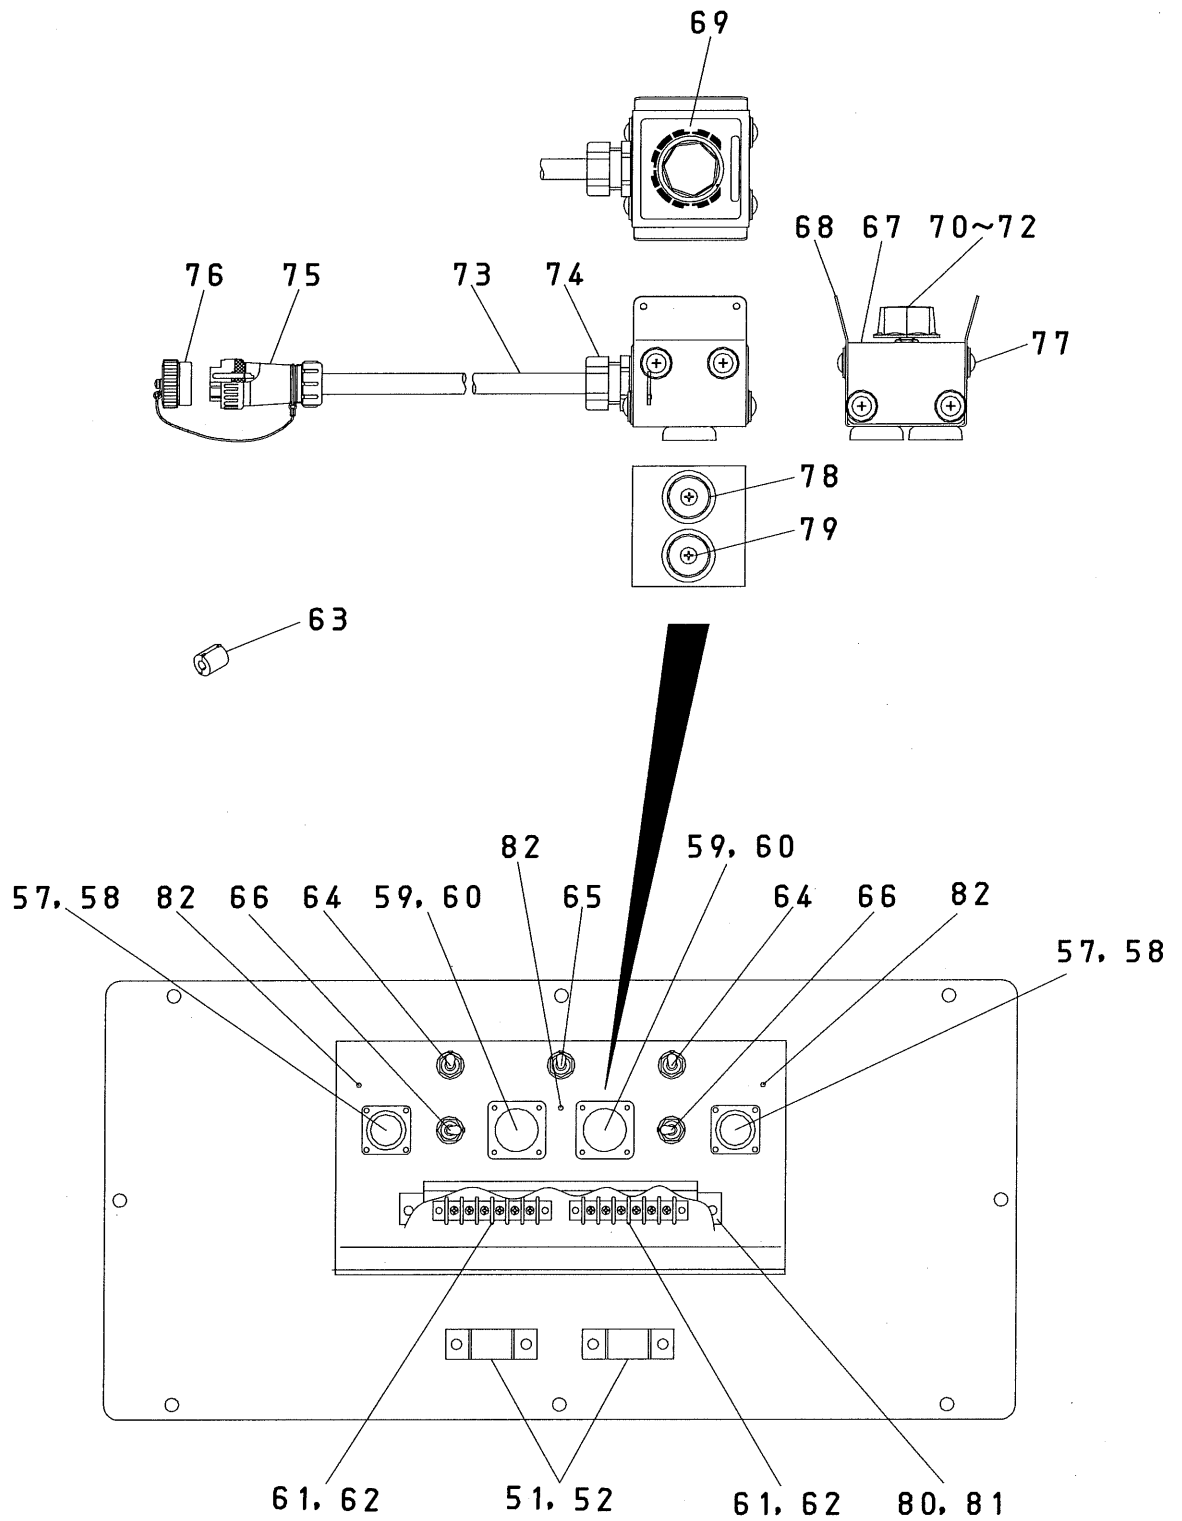


| Key No. | Parts No.     | Parts Name                           | Remarks               | Q'ty |   |   |   | Symbol   | Serial No.          |
|---------|---------------|--------------------------------------|-----------------------|------|---|---|---|----------|---------------------|
|         |               |                                      |                       | All  | A | B | C |          |                     |
|         |               | A=STD<br>B=O. P.                     |                       |      |   |   |   |          |                     |
| 1       | D 65113 01502 | Control Panel                        | D62240 00303          | 1    |   |   |   |          | ~5762222            |
|         | D 65113 01512 | Control Panel                        | D62240 00313          | 1    |   |   |   |          | 5762223~<br>5836132 |
|         | D 65113 01522 | Control Panel                        | D62240 01803          | 1    |   |   |   |          | 5836133~            |
| 2       | Y 00218 06030 | Machine Screw                        |                       | 6    |   |   |   |          |                     |
| 3       | W 08418 05804 | Cover                                |                       |      | 1 |   |   |          |                     |
| 4       | Y 06018 40028 | Rheostat (Current/Voltage Regulator) | RV24YN20SB 500Ω       | 2    |   |   |   | VR1A, B  |                     |
| 5       | Y 06018 40103 | Knob                                 | K-2195                | 2    |   |   |   |          |                     |
| 6       | W 08018 83003 | Insulator                            |                       | 2    |   |   |   |          |                     |
| 7       | Y 06018 40095 | Rheostat (Arc Force Regulator)       | RV24YN20SB 2kΩ        | 2    |   |   |   | VR2A, B  |                     |
| 8       | Y 06018 40170 | Knob                                 | K-2195                | 2    |   |   |   |          |                     |
| 9       | W 08018 83003 | Insulator                            |                       | 2    |   |   |   |          |                     |
| 10      | Y 06018 00285 | AC Voltmeter                         | SCF-5 0-600V          | 1    |   |   |   | V        |                     |
| 11      | Y 06018 71790 | Circuit Breaker                      | XE-50NB 3P 23A        |      | 1 |   |   | CB1      |                     |
|         | Y 06018 71791 | Circuit Breaker                      | XE-50NB 3P 23A        |      |   | 1 |   | CB1      |                     |
| 11- 1   | B 34914 00004 | Rubber Seal                          |                       | 1    |   |   |   |          |                     |
| 12      | Y 00271 04035 | Machine Screw                        |                       | 2    |   |   |   |          |                     |
| 13      | D 99248 00154 | Digital Moniter                      | DM-50A                | 1    |   |   |   | DM       | ~5836132            |
|         | D 99248 00564 | Digital Moniter                      | DM-50B                | 1    |   |   |   | DM       | 5836133~            |
| 14      | Y 00271 03006 | Machine Secrew                       |                       | 4    |   |   |   |          |                     |
| 15      | Y 06018 31600 | Rocker Switch                        | JW-M11RKK             | 3    |   |   |   | SW2~4    | ~5836132            |
|         | Y 06018 31600 | Rocker Switch                        | JW-M11RKK             | 4    |   |   |   | SW2~4, 6 | 5836133~            |
| 16      | Y 06021 00059 | Starter Switch                       | KUBOTA<br>37410-59113 | 1    |   |   |   |          |                     |

| Key No. | Parts No.     | Parts Name                 | Remarks       | Q'ty |    |   |   | Symbol  | Serial No.          |
|---------|---------------|----------------------------|---------------|------|----|---|---|---------|---------------------|
|         |               |                            |               | All  | A  | B | C |         |                     |
| 17      | Y 06018 05749 | AC Ammeter                 | ACF-5 0-30A   | 1    |    |   |   | A       |                     |
| 18      | Y 06021 15042 | Engine Monitor             | MT-15         | 1    |    |   |   |         | ~5762222            |
|         | B 02662 00914 | Engine Monitor             | MT-55         | 1    |    |   |   |         | 5762223~            |
|         | D 43537 00004 | Cover                      |               | 1    |    |   |   |         | ~5762222            |
| 19      | Y 06018 03076 | Change-Over Switch         | SK-2532 MSA-2 | 1    |    |   |   | SW1     |                     |
| 20      | Y 06018 00455 | Frequency Meter            | FCF-5 240V    | 1    |    |   |   | F       |                     |
| 21      | Y 00169 08020 | Hex. Head Bolt             |               |      | 1  |   |   |         |                     |
| 22      | Y 00218 04012 | Machine Screw              |               |      | 2  |   |   |         | ~5771782            |
|         | Y 00218 04012 | Machine Screw              |               |      | 6  |   |   |         | 5771783~<br>5784940 |
|         | Y 00218 04012 | Machine Screw              |               |      | 10 |   |   |         | 5784941~            |
| 23      | D 52618 00104 | Bracket                    |               | 1    |    |   |   |         |                     |
| 24      | Y 06018 04211 | Current Transformer        | MCT-100Y      | 1    |    |   |   | CT      |                     |
| 25      | Y 00271 04010 | Machine Screw              |               | 2    |    |   |   |         |                     |
| 26      | Y 00169 06015 | Hex. Head Bolt             |               | 1    |    |   |   |         |                     |
| 27      | D 42683 04704 | Noise Filter               |               | 2    |    |   |   | NF1A, B |                     |
| 28      | W 87018 60004 | Set Board, output terminal |               | 1    |    |   |   |         |                     |
| 29      | W 78118 61004 | Output Terminal            |               | 4    |    |   |   |         |                     |
| 30      | W 08018 30604 | Hex. Head Bolt             |               | 4    |    |   |   |         |                     |
| 31      | Y 00400 08000 | Spring Washer              |               | 12   |    |   |   |         |                     |
| 32      | Y 00414 08000 | Plain Washer               |               | 8    |    |   |   |         |                     |
| 33      | Y 00395 08000 | Hex. Nut                   |               | 4    |    |   |   |         |                     |
| 34      | Y 00300 08000 | Hex. Nut                   |               | 4    |    |   |   |         |                     |
| 35      | Y 00412 08000 | Plain Washer               |               | 4    |    |   |   |         |                     |

| Key No. | Parts No.     | Parts Name               | Remarks             | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|--------------------------|---------------------|------|---|---|---|--------|------------|
|         |               |                          |                     | All  | A | B | C |        |            |
| 36      | W 87018 64004 | Rubber Seal              |                     | 1    |   |   |   |        |            |
| 37      | Y 06018 15191 | Output Terminal, welding |                     | 4    |   |   |   |        |            |
| 38      | D 62371 00003 | Cover, output terminal   |                     | 1    |   |   |   |        |            |
|         | D 62374 00004 | Rubber Seal              |                     | 1    |   |   |   |        |            |
| 39      | W 08218 00014 | Collar                   |                     | 2    |   |   |   |        |            |
| 40      | D 93112 00004 | Stay Rubber              |                     | 1    |   |   |   |        |            |
| 41      | Y 00169 06020 | Hex. Head Bolt           |                     | 2    |   |   |   |        |            |
|         | Y 02070 06000 | Hex. Nut                 |                     | 2    |   |   |   |        |            |
| 42      | Y 00169 06030 | Hex. Head Bolt           |                     | 4    |   |   |   |        |            |
| 43      | Y 02070 08000 | Hex. Nut                 |                     |      | 1 |   |   |        |            |
| 44      | Y 00169 06015 | Hex. Head Bolt           |                     | 2    |   |   |   |        |            |
|         |               | Option Sets 1            |                     |      |   |   |   |        |            |
| 45      | Y 06018 15109 | Terminal                 | T-381               |      |   | 1 |   |        |            |
| 46      | Y 06018 20119 | Condenser                | 45FAEN 205UJ        |      |   | 1 |   | C10    |            |
| 47      | Y 00210 04065 | Machine Screw            |                     |      |   | 1 |   |        |            |
|         | Y 02070 04000 | Hex. Nut                 |                     |      |   | 1 |   |        |            |
| 48      | Y 06018 22416 | Earth Leakage Relay      | NV-ZE DC12V<br>30mA |      |   | 1 |   | 22     |            |
| 49      | Y 00210 04025 | Machine Screw            |                     |      |   | 1 |   |        |            |
| 50      | Y 06008 01001 | Earth rod                |                     |      |   | 1 |   |        |            |
| 51      | D 62616 01504 | Cable Clamper            |                     | 2    |   |   |   |        |            |
|         | D 62618 00804 | Insulator Rubber         |                     | 2    |   |   |   |        |            |
| 52      | Y 00171 05012 | Hex. Head Bolt           |                     | 4    |   |   |   |        |            |
| 53      | Y 06018 06047 | AC Circuit Breaker       | CP31PM 15A          | 2    |   |   |   | CB2, 3 |            |

| Key No. | Parts No.     | Parts Name                      | Remarks                      | Q'ty |   |   |   | Symbol            | Serial No. |
|---------|---------------|---------------------------------|------------------------------|------|---|---|---|-------------------|------------|
|         |               |                                 |                              | All  | A | B | C |                   |            |
| 54      | Y 00210 03005 | Machine Screw                   |                              | 4    |   |   |   |                   |            |
| 55      | Y 06018 11059 | Receptacle                      | 1561-000 250V, 16A           | 2    |   |   |   | CON1, 2           |            |
| 56      | Y 00271 04020 | Machine Screw                   |                              | 8    |   |   |   |                   |            |
| 57      | Y 06018 12913 | Remote Socket                   | NJW-243-RF                   | 2    |   |   |   | MR1A, B           |            |
|         | Y 06018 11428 | Cap                             | NJW-24-RCA                   | 2    |   |   |   |                   |            |
| 58      | Y 00210 03012 | Machine Screw                   |                              | 8    |   |   |   |                   |            |
|         | Y 02070 03000 | Hex. Nut                        |                              | 8    |   |   |   |                   |            |
| 59      | Y 06018 12931 | Remote Socket                   | MS3102A20-27SX               | 2    |   |   |   | MR2A, B           |            |
|         | Y 06018 11431 | Cap                             | MS25043-20DA                 | 2    |   |   |   |                   |            |
| 60      | Y 00210 03012 | Machine Screw                   |                              | 8    |   |   |   |                   |            |
|         | Y 02070 03000 | Hex. Nut                        |                              | 8    |   |   |   |                   |            |
| 61      | Y 06018 16218 | Terminal Board                  | TBK-16T 6P                   | 2    |   |   |   |                   |            |
| 62      | Y 00271 03012 | Machine Screw                   |                              | 4    |   |   |   |                   |            |
| 63      | Y 06018 25130 | Noise Filter                    | TDK ZCAT3035-1330            | 3    |   |   |   | NF2A, B<br>NF3    |            |
|         | Y 06018 29032 | Condenser                       | 0.1 $\mu$ F 250V             | 9    |   |   |   | C7~9A, B<br>11~13 |            |
| 64      | Y 06018 31365 | Switch, remote selector         | M-2011 L/B                   | 2    |   |   |   | SW5A, B           |            |
| 65      | Y 06018 31365 | Switch                          | M-2011 L/B                   | 1    |   |   |   | SW8               |            |
| 66      | Y 06018 31368 | Switch, remote control selector | M-2012 L/B                   | 2    |   |   |   | SW7A, B           |            |
| 67      | D 62673 02304 | Remote Control Box              |                              | 1    |   |   |   |                   |            |
| 68      | D 62673 02404 | Remote Control Box              |                              | 1    |   |   |   |                   |            |
| 69      | D 65510 01204 | Decal:Remote Control Box        | D6510 0120                   | 1    |   |   |   |                   |            |
| 70      | Y 06018 40259 | Rheostat                        | RA25Y20SB501<br>500 $\Omega$ | 1    |   |   |   |                   |            |
| 71      | Y 06018 40108 | Knob                            | K-2901-L                     | 1    |   |   |   |                   |            |


| Key No. | Parts No.     | Parts Name              | Remarks              | Q'ty |   |   |   | Symbol | Serial No.          |
|---------|---------------|-------------------------|----------------------|------|---|---|---|--------|---------------------|
|         |               |                         |                      | All  | A | B | C |        |                     |
| 72      | W 08018 83003 | Insulator               |                      | 1    |   |   |   |        |                     |
| 73      | D 62628 00404 | Cable                   |                      | 1    |   |   |   |        |                     |
| 74      | Y 06018 51516 | Adapter                 | SCL-B14A             | 1    |   |   |   |        |                     |
| 75      | Y 06018 13307 | Plug                    | NJW-243-PM13         | 1    |   |   |   |        |                     |
| 76      | Y 06018 11440 | Cap                     | NJW-24-PCA           | 1    |   |   |   |        |                     |
| 77      | Y 00219 05012 | Machine Screw           |                      | 8    |   |   |   |        |                     |
|         | Y 00470 05018 | Plain Washer            |                      | 8    |   |   |   |        |                     |
|         | B 93115 00604 | Plain Washer            |                      | 8    |   |   |   |        |                     |
| 78      | Y 06050 10452 | Cap                     | A32                  | 2    |   |   |   |        |                     |
| 79      | Y 00211 05015 | Machine Screw           |                      | 2    |   |   |   |        |                     |
| 80      | D 64448 00004 | Cover, terminal board   |                      | 1    |   |   |   |        |                     |
|         | Y 03149 00175 | Rubber Seal             |                      | 1    |   |   |   |        |                     |
| 81      | Y 00171 05012 | Hex. Head Bolt          |                      | 2    |   |   |   |        |                     |
| 82      | Y 00271 03010 | Machine Screw           |                      | 3    |   |   |   |        |                     |
| 83      | D 62618 00004 | Cover                   |                      |      | 1 |   |   |        | 5771783~<br>5784940 |
|         | D 62618 01204 | Cover                   |                      |      | 1 |   |   |        | 5784941~            |
|         |               | Option Sets 2           |                      |      |   |   |   |        |                     |
| 84      | Y 06021 22056 | Oil Pressure Gauge      | E52B10KPY-2<br>DC12V |      |   | 1 |   |        | 5771783~            |
| 85      | Y 06021 23056 | Water Temperature Gauge | E52B120YW-2<br>DC12V |      |   | 1 |   |        | 5771783~            |
| 86      | Y 06021 21056 | Charing Ammeter         | E52B30A-DPR          |      |   | 1 |   |        | 5771783~            |
|         | Y 00427 05000 | Plain Washer            |                      |      |   | 2 |   |        | 5771783~            |
| 87      | D 62618 01104 | Cover                   |                      |      |   | 1 |   |        | 5784941~            |
| 88      | Y 06018 31218 | Emergency Stop Button   | ABW-211-R            | 1    |   |   |   |        | 5812030~            |

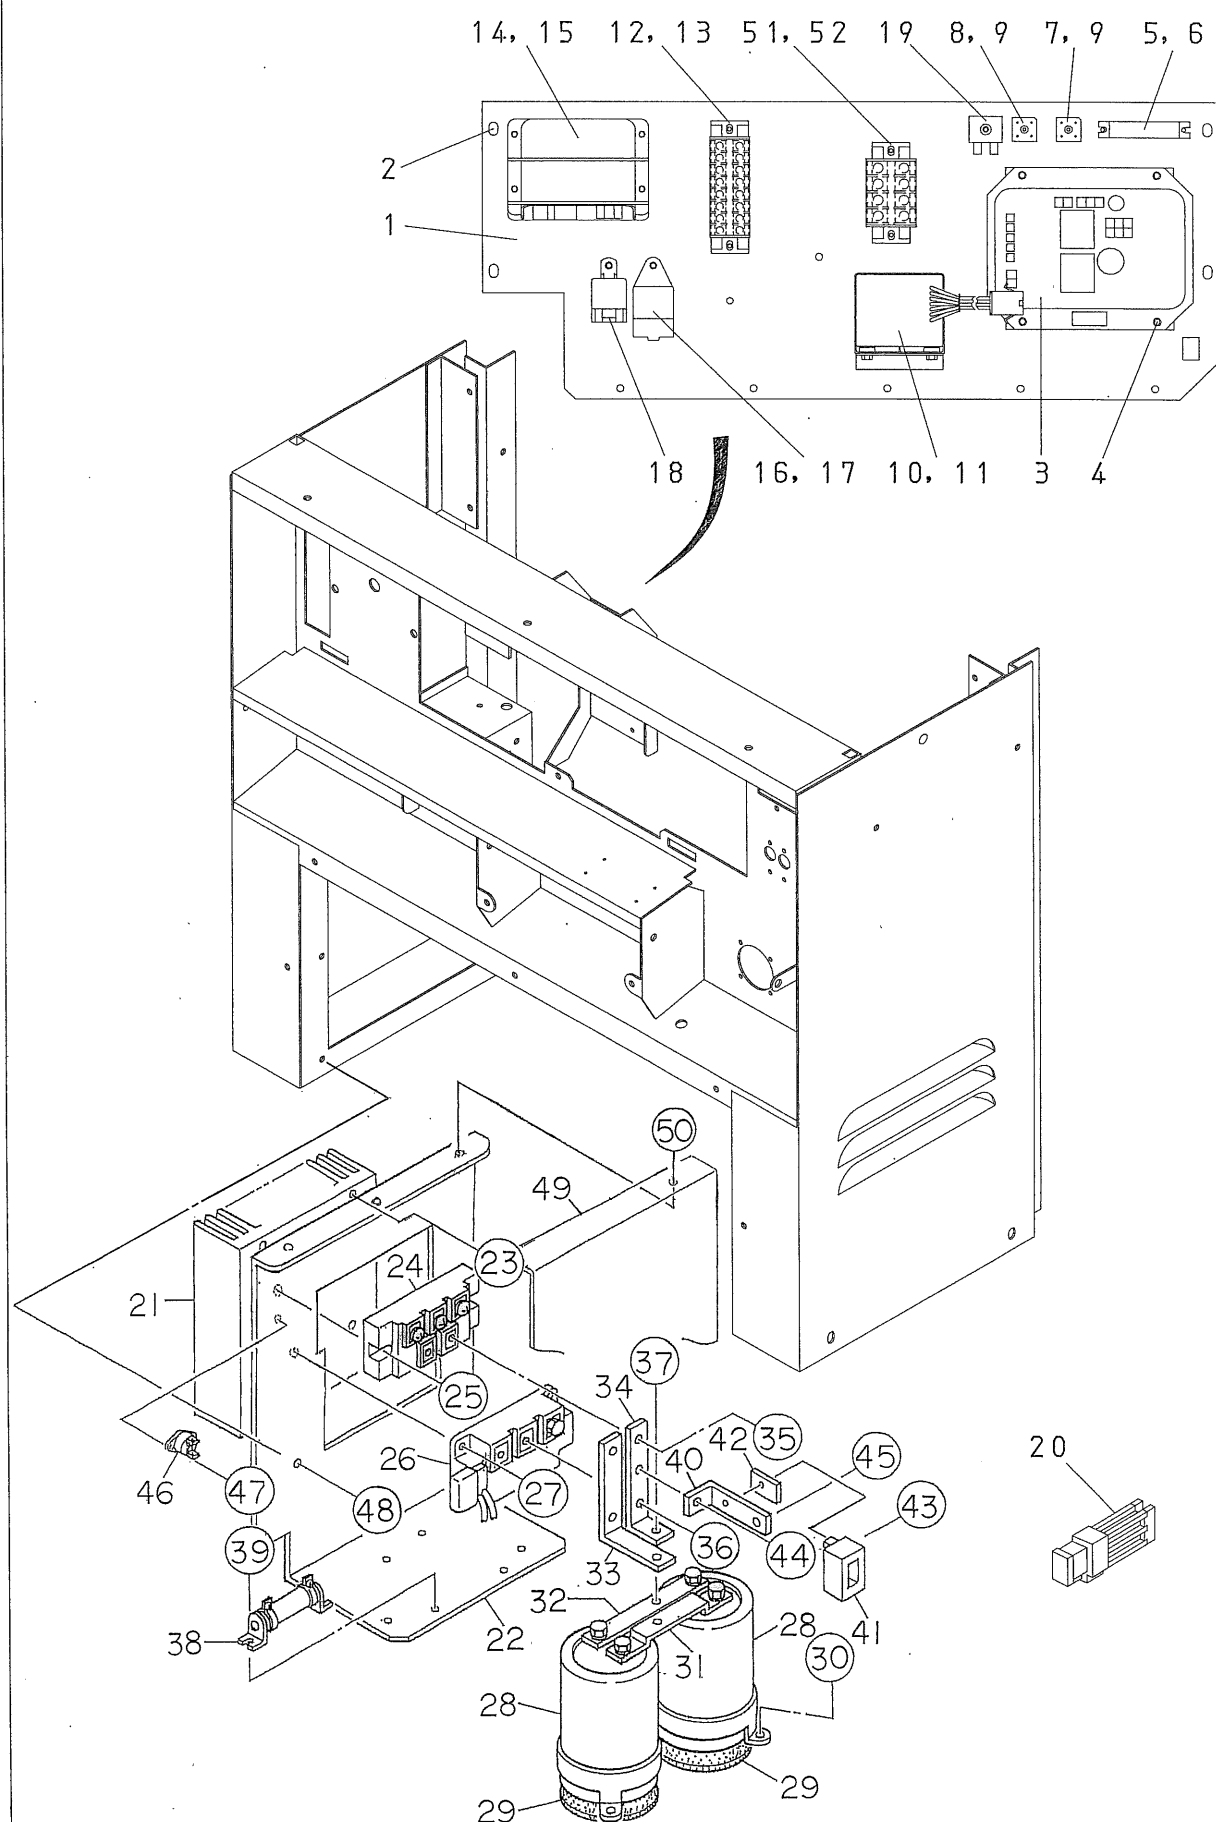

| Key No. | Parts No.     | Parts Name                  | Remarks               | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|-----------------------------|-----------------------|------|---|---|---|--------|------------|
|         |               |                             |                       | All  | A | B | C |        |            |
| 1       | D 62615 00503 | Set Panel, electric parts   |                       | 1    |   |   |   |        |            |
|         | Y 03149 00660 | Rubber Seal                 |                       | 1    |   |   |   |        |            |
| 2       | Y 00169 06015 | Hex. Head Bolt              |                       | 4    |   |   |   |        |            |
| 3       | Y 06018 20666 | Automatic Voltage Regulator | AN-5W-203R            | 1    |   |   |   | AVR    |            |
|         | Y 06018 06681 | Fuse                        | FGMQ 250V 5A          | (1)  |   |   |   |        |            |
| 4       | Y 00171 05015 | Hex. Head Bolt              |                       | 4    |   |   |   |        |            |
| 5       | Y 06018 42347 | Resistor                    | GG20W 30Ω             | 1    |   |   |   | R2     |            |
| 6       | Y 00271 04015 | Machine Screw               |                       | 2    |   |   |   |        |            |
| 7       | Y 06018 20037 | Rectifier                   | S10VB60               | 1    |   |   |   | Re2    |            |
| 8       | Y 06018 23204 | Rectifier                   | S5VB60                | 1    |   |   |   | Re3    |            |
| 9       | Y 00271 03015 | Machine Screw               |                       | 2    |   |   |   |        |            |
| 10      | Y 06018 23857 | Slow Down Unit              | NC-73                 | 1    |   |   |   | RC     |            |
| 11      | Y 00271 05015 | Machine Screw               |                       | 2    |   |   |   |        |            |
| 12      | Y 06018 15422 | Terminal Board              | KT20 8P               | 1    |   |   |   |        |            |
|         | Y 06018 26187 | Condenser                   | DC50V 1μF             | 1    |   |   |   | C11    |            |
| 13      | Y 00271 04020 | Machine Screw               |                       | 2    |   |   |   |        |            |
| 14      | Y 06022 00475 | Emergency Unit              | KUBOTA<br>17472-60605 | 1    |   |   |   |        |            |
| 15      | Y 00271 05025 | Machine Screw               |                       | 4    |   |   |   |        |            |
| 16      | Y 06022 01273 | Lamp Timer                  | KUBOTA<br>15694-65992 | 1    |   |   |   |        |            |
| 17      | Y 00271 05015 | Machine Screw               |                       | 1    |   |   |   |        |            |
| 18      | Y 06018 24525 | Relay                       | ACA2213-5.6 DC12V     | 1    |   |   |   | Ry     |            |
|         | Y 00271 05010 | Machine Screw               |                       | 1    |   |   |   |        |            |
| 19      | Y 06018 23240 | Rectifier                   | DE45 300V SA9905-6    | 1    |   |   |   | Re4    |            |


| Key No. | Parts No.     | Parts Name        | Remarks                           | Q'ty |   |   |   | Symbol           | Serial No. |
|---------|---------------|-------------------|-----------------------------------|------|---|---|---|------------------|------------|
|         |               |                   |                                   | All  | A | B | C |                  |            |
|         | Y 00271 04015 | Machine Screw     |                                   | 1    |   |   |   |                  |            |
| 20      | Y 06018 06640 | Fuse              | 65A                               | 1    |   |   |   |                  |            |
| 21      | D 62673 02504 | Cooling Fin       |                                   | 2    |   |   |   |                  |            |
| 22      | D 62616 00904 | Bracket           |                                   | 2    |   |   |   |                  |            |
| 23      | Y 00169 06015 | Hex. Head Bolt    |                                   | 8    |   |   |   |                  |            |
| 24      | Y 06018 23256 | Rectifier         | DF-200BA-80                       | 2    |   |   |   | Re1A, B          |            |
| 25      | Y 00271 05015 | Machine Screw     |                                   | 4    |   |   |   |                  |            |
| 26      | D 42680 00403 | IGBT Module Ass'y |                                   | 2    |   |   |   |                  |            |
| 27      | Y 00271 05015 | Machine Screw     |                                   | 8    |   |   |   |                  |            |
| 28      | Y 06018 26144 | Condenser         | LNT2C153MSM<br>160V 15000 $\mu$ F | 4    |   |   |   | C1A, B<br>C2A, B |            |
| 29      | D 42628 00704 | Insulator Rubber  |                                   | 4    |   |   |   |                  | ~5722624   |
|         | D 62618 00904 | Insulator Rubber  |                                   | 4    |   |   |   |                  | 5722625~   |
| 30      | Y 00271 04010 | Machine Screw     |                                   | 8    |   |   |   |                  |            |
| 31      | D 42683 04204 | Connection Plate  |                                   | 2    |   |   |   |                  |            |
| 32      | D 62673 02804 | Connection Plate  |                                   | 2    |   |   |   |                  |            |
| 33      | D 62673 02604 | Connection Plate  |                                   | 2    |   |   |   |                  |            |
| 34      | D 62673 02704 | Connection Plate  |                                   | 2    |   |   |   |                  |            |
| 35      | Y 00271 05015 | Machine Screw     |                                   | 4    |   |   |   |                  |            |
| 36      | Y 00178 06014 | Hex. Head Bolt    |                                   | 6    |   |   |   |                  |            |
| 37      | Y 00171 06020 | Hex. Head Bolt    |                                   | 4    |   |   |   |                  |            |
|         | Y 02072 06000 | Hex. Nut          |                                   | 4    |   |   |   |                  |            |
| 38      | Y 06018 42262 | Resistor          | GG20W 1k $\Omega$                 | 2    |   |   |   | R1A, B           |            |
| 39      | Y 00271 04010 | Machine Screw     |                                   | 4    |   |   |   |                  |            |


| Key No. | Parts No.     | Parts Name             | Remarks              | Q'ty |   |   |   | Symbol   | Serial No. |
|---------|---------------|------------------------|----------------------|------|---|---|---|----------|------------|
|         |               |                        |                      | All  | A | B | C |          |            |
| 40      | D 32673 00604 | Connection Plate       |                      | 2    |   |   |   |          |            |
| 41      | Y 06018 04202 | DC Current Transformer | 200A4V<br>L03S200D15 | 2    |   |   |   | DCCTA, B |            |
| 42      | D 42354 00004 | Insulator              |                      | 2    |   |   |   |          |            |
| 43      | Y 00271 04020 | Machine Screw          |                      | 2    |   |   |   |          |            |
| 44      | Y 00190 08016 | Hex. Head Bolt         |                      | 2    |   |   |   |          |            |
|         | Y 00400 08000 | Spring Washer          |                      | 2    |   |   |   |          |            |
|         | Y 00427 08000 | Plain Washer           |                      | 2    |   |   |   |          |            |
| 45      | Y 00190 08016 | Hex. Head Bolt         |                      | 2    |   |   |   |          |            |
|         | Y 00400 08000 | Spring Washer          |                      | 2    |   |   |   |          |            |
|         | Y 00427 08000 | Plain Washer           |                      | 2    |   |   |   |          |            |
| 46      | Y 06018 31056 | Thermal Switch         | US-602SYTFAS<br>90°C | 2    |   |   |   | THA, B   |            |
| 47      | Y 00210 03010 | Machine Screw          |                      | 4    |   |   |   |          |            |
| 48      | Y 00169 06015 | Hex. Head Bolt         |                      | 14   |   |   |   |          |            |
| 49      | D 62617 00004 | Cover, electric parts  |                      | 2    |   |   |   |          |            |
| 50      | Y 06050 11412 | Rivet                  |                      | 8    |   |   |   |          |            |
| 51      | Y 06018 15731 | Terminal Board         | KT30 4P              | 1    |   |   |   |          |            |
| 52      | Y 00271 04020 | Machine Screw          |                      | 2    |   |   |   |          |            |

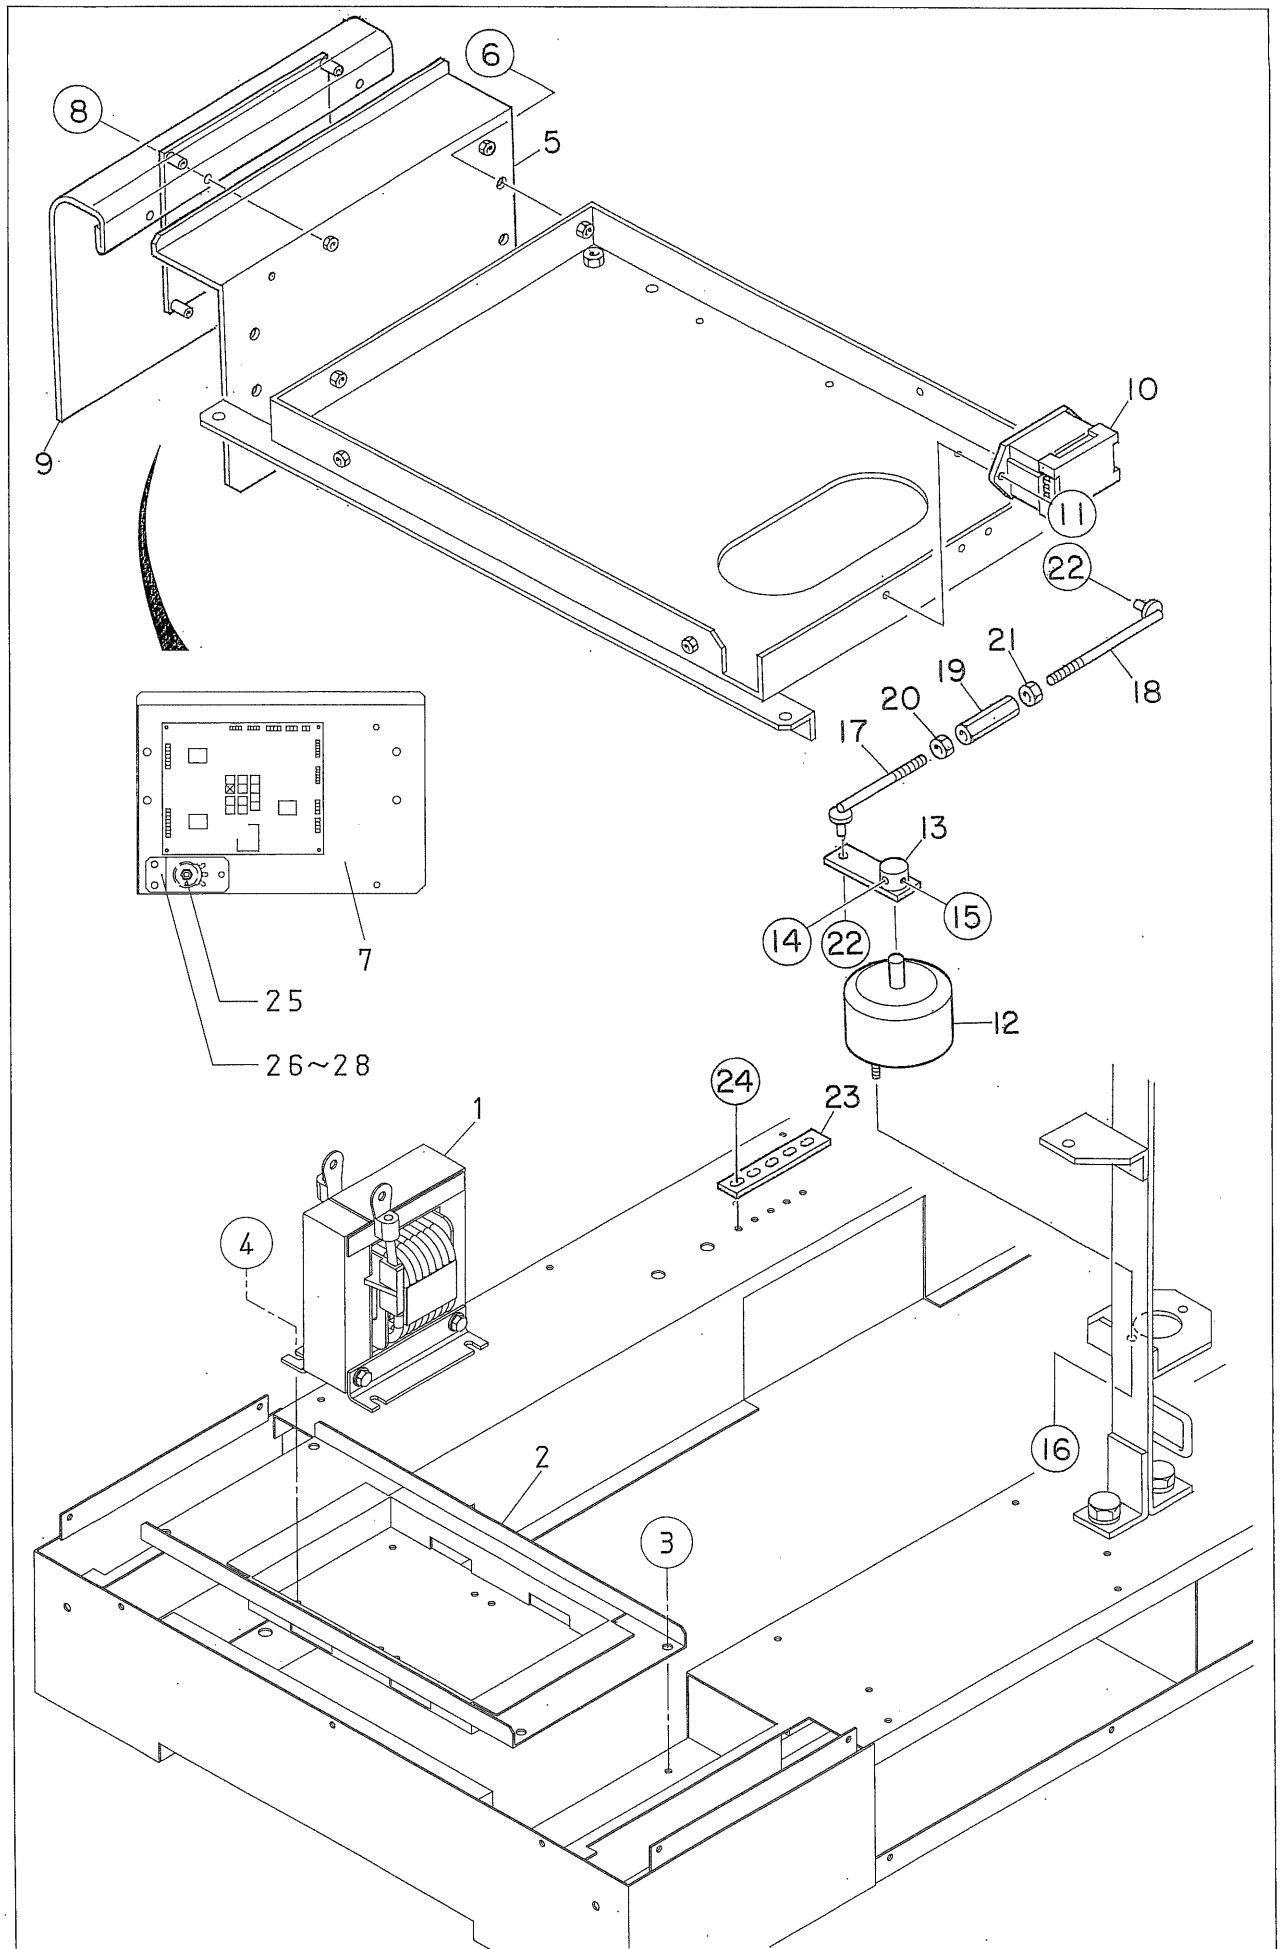

| Key No. | Parts No.     | Parts Name            | Remarks | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|-----------------------|---------|------|---|---|---|--------|------------|
|         |               |                       |         | All  | A | B | C |        |            |
| 1       | D 42635 04403 | DC Reactor            |         | 2    |   |   |   | LA, B  |            |
| 2       | D 62616 01003 | Bracket, reactor      |         | 1    |   |   |   |        | ~5722624   |
|         | D 62616 01013 | Bracket, reactor      |         | 1    |   |   |   |        | 5722625~   |
|         | D 64940 00303 | Lining                |         | 1    |   |   |   |        |            |
| 3       | Y 00169 06015 | Hex. Head Bolt        |         | 4    |   |   |   |        |            |
| 4       | Y 00169 06015 | Hex. Head Bolt        |         | 8    |   |   |   |        |            |
| 5       | D 52140 00203 | Control Box           |         | 1    |   |   |   |        |            |
| 6       | Y 00169 06015 | Hex. Head Bolt        |         | 4    |   |   |   |        |            |
| 7       | D 99248 00354 | Control Unit          | CV-15   | 1    |   |   |   | IC     | ~5836132   |
|         | D 99248 00534 | Control Unit          | CV-18R  | 1    |   |   |   | IC     | 5836133~   |
| 8       | Y 00271 03025 | Machine Screw         |         | 4    |   |   |   |        |            |
| 9       | D 52617 00304 | Cover, electric parts |         | 1    |   |   |   |        |            |
| 10      | B 03525 00104 | Fuse Box              | FB-6PS  | 1    |   |   |   |        |            |
|         | Y 06018 06642 | Fuse                  | 5A      | (4)  |   |   |   | F2~4   |            |
|         | Y 06018 06643 | Fuse                  | 15A     | (2)  |   |   |   | F5     |            |
|         | Y 06018 06644 | Fuse                  | 30A     | (2)  |   |   |   | F1     |            |
|         | W 87006 25504 | Decal; Fuse Box       | S-4936  | (1)  |   |   |   |        |            |
| 11      | Y 00169 05015 | Hex. Head Bolt        |         | 2    |   |   |   |        |            |
| 12      | W 67226 35003 | Rotary Solenoid Ass'y |         | 1    |   |   |   | S      |            |
|         | W 17901 50203 | Rotary Solenoid       |         | (1)  |   |   |   |        |            |
| 13      | W 67226 31004 | Arm, solenoid         |         | (1)  |   |   |   |        |            |
| 14      | Y 00101 06020 | Hex. Head Bolt        |         | (1)  |   |   |   |        |            |
|         | Y 00300 06000 | Hex. Nut              |         | (1)  |   |   |   |        |            |

| Key No. | Parts No.     | Parts Name     | Remarks                | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|----------------|------------------------|------|---|---|---|--------|------------|
|         |               |                |                        | All  | A | B | C |        |            |
| 15      | Y 00504 03020 | Spring Pin     |                        | (1)  |   |   |   |        |            |
| 16      | Y 02070 06000 | Hex. Nut       |                        | 2    |   |   |   |        |            |
| 17      | D 53553 00104 | Governor Rod   |                        | 1    |   |   |   |        |            |
| 18      | D 13563 00004 | Governor Rod   |                        | 1    |   |   |   |        |            |
| 19      | W 15521 54004 | Screw Joint    |                        | 1    |   |   |   |        |            |
| 20      | Y 00310 08000 | Hex. Nut       |                        | 1    |   |   |   |        |            |
| 21      | Y 00365 08000 | Hex. Nut       |                        | 1    |   |   |   |        |            |
| 22      | Y 00412 08000 | Plain Washer   |                        | 2    |   |   |   |        |            |
|         | Y 06050 10503 | Snap Pin       | SSP-8                  | 2    |   |   |   |        |            |
| 23      | W 85118 64604 | Plate          |                        | 1    |   |   |   |        |            |
| 24      | Y 00169 06015 | Hex. Head Bolt |                        | 5    |   |   |   |        |            |
| 25      | Y 06018 40076 | Rheostat       | RV24YN20SB 1K $\Omega$ | 1    |   |   |   | VR3    |            |
| 26      | D 52616 01204 | Bracket        |                        | 1    |   |   |   |        |            |
| 27      | Y 00169 06015 | Hex. Head Bolt |                        | 2    |   |   |   |        |            |
| 28      | W 08018 83003 | Insulator      |                        | 1    |   |   |   |        |            |

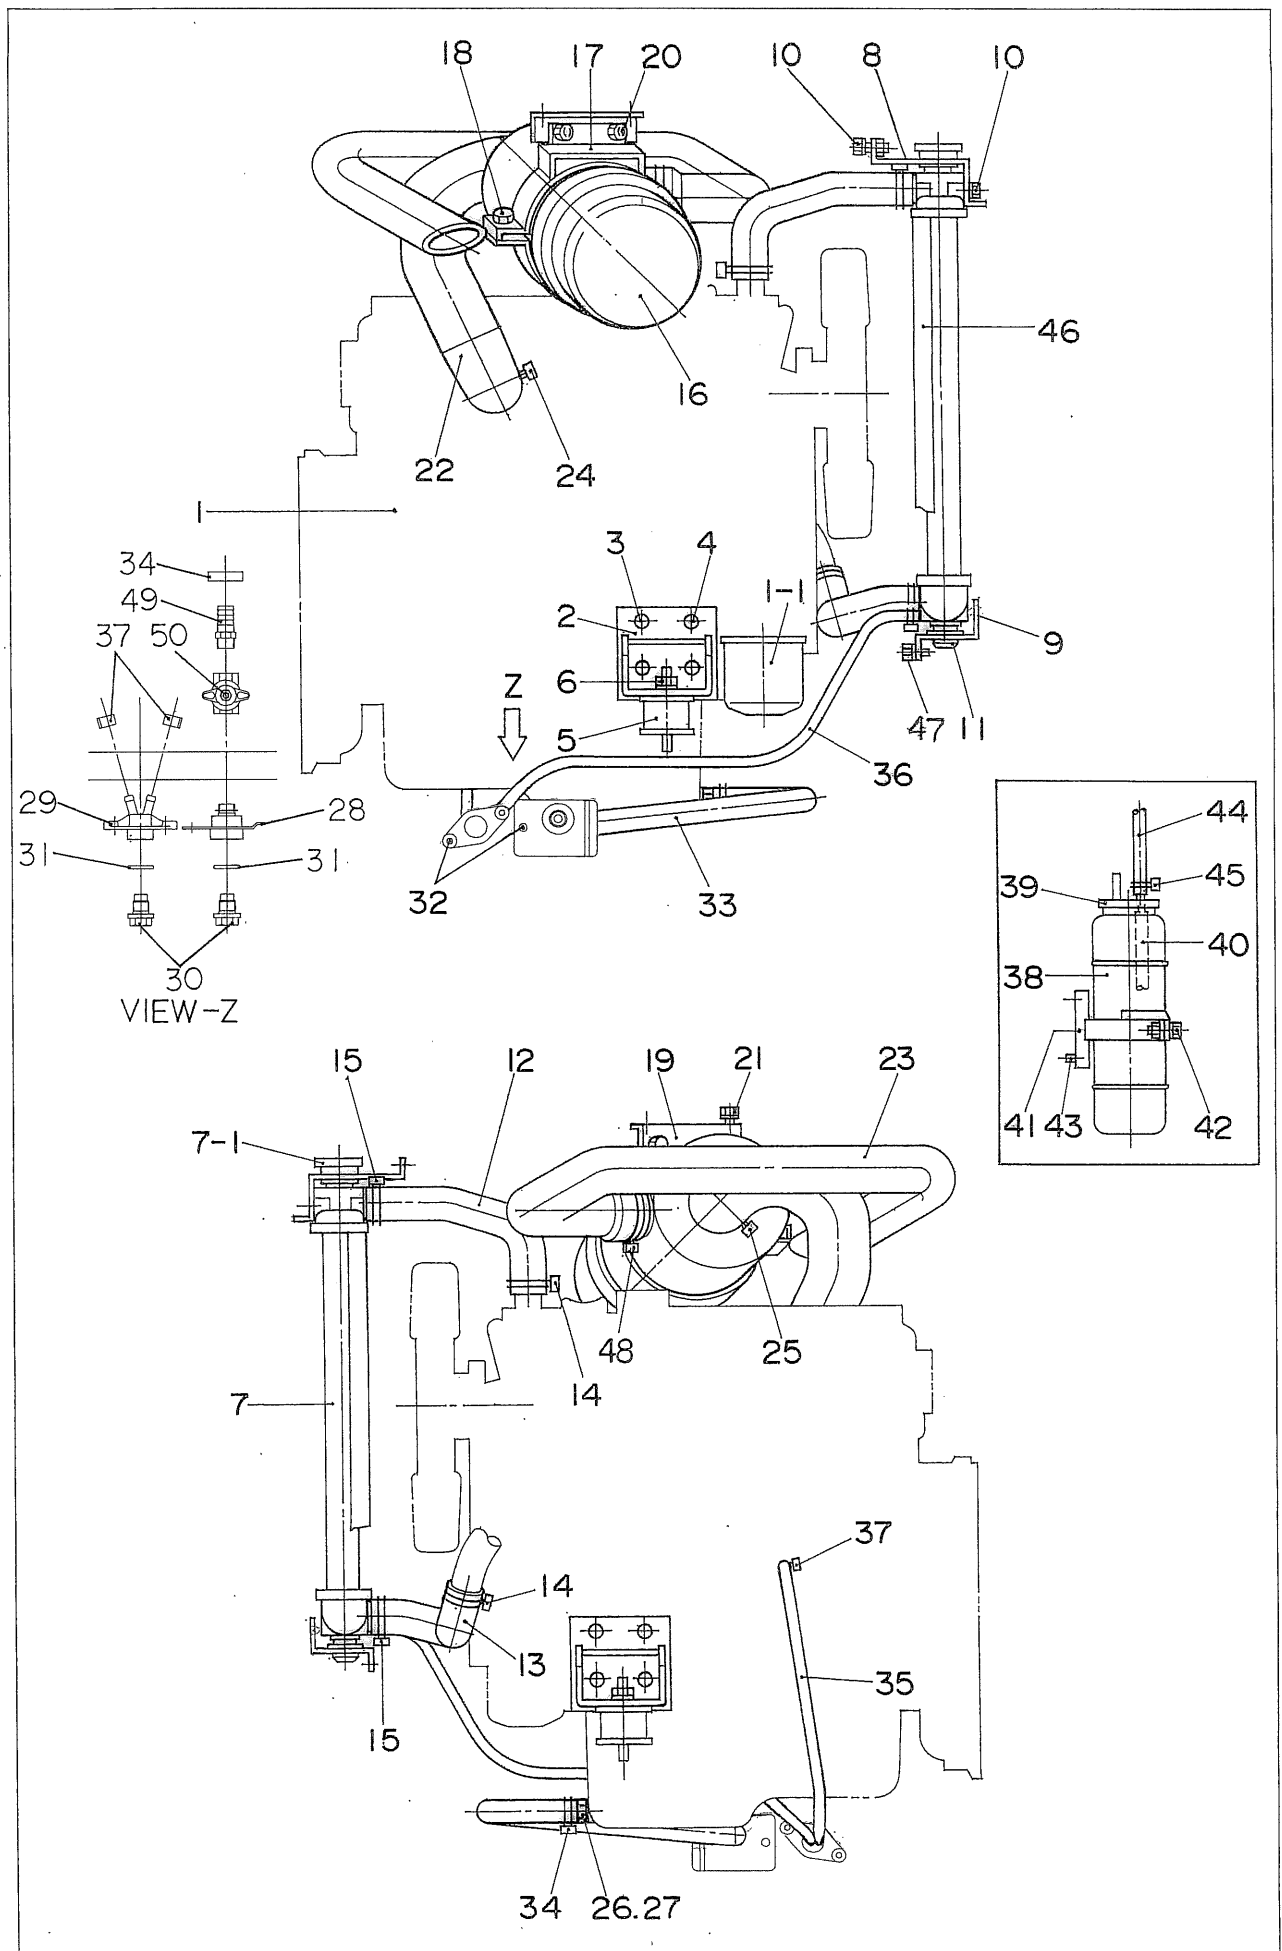

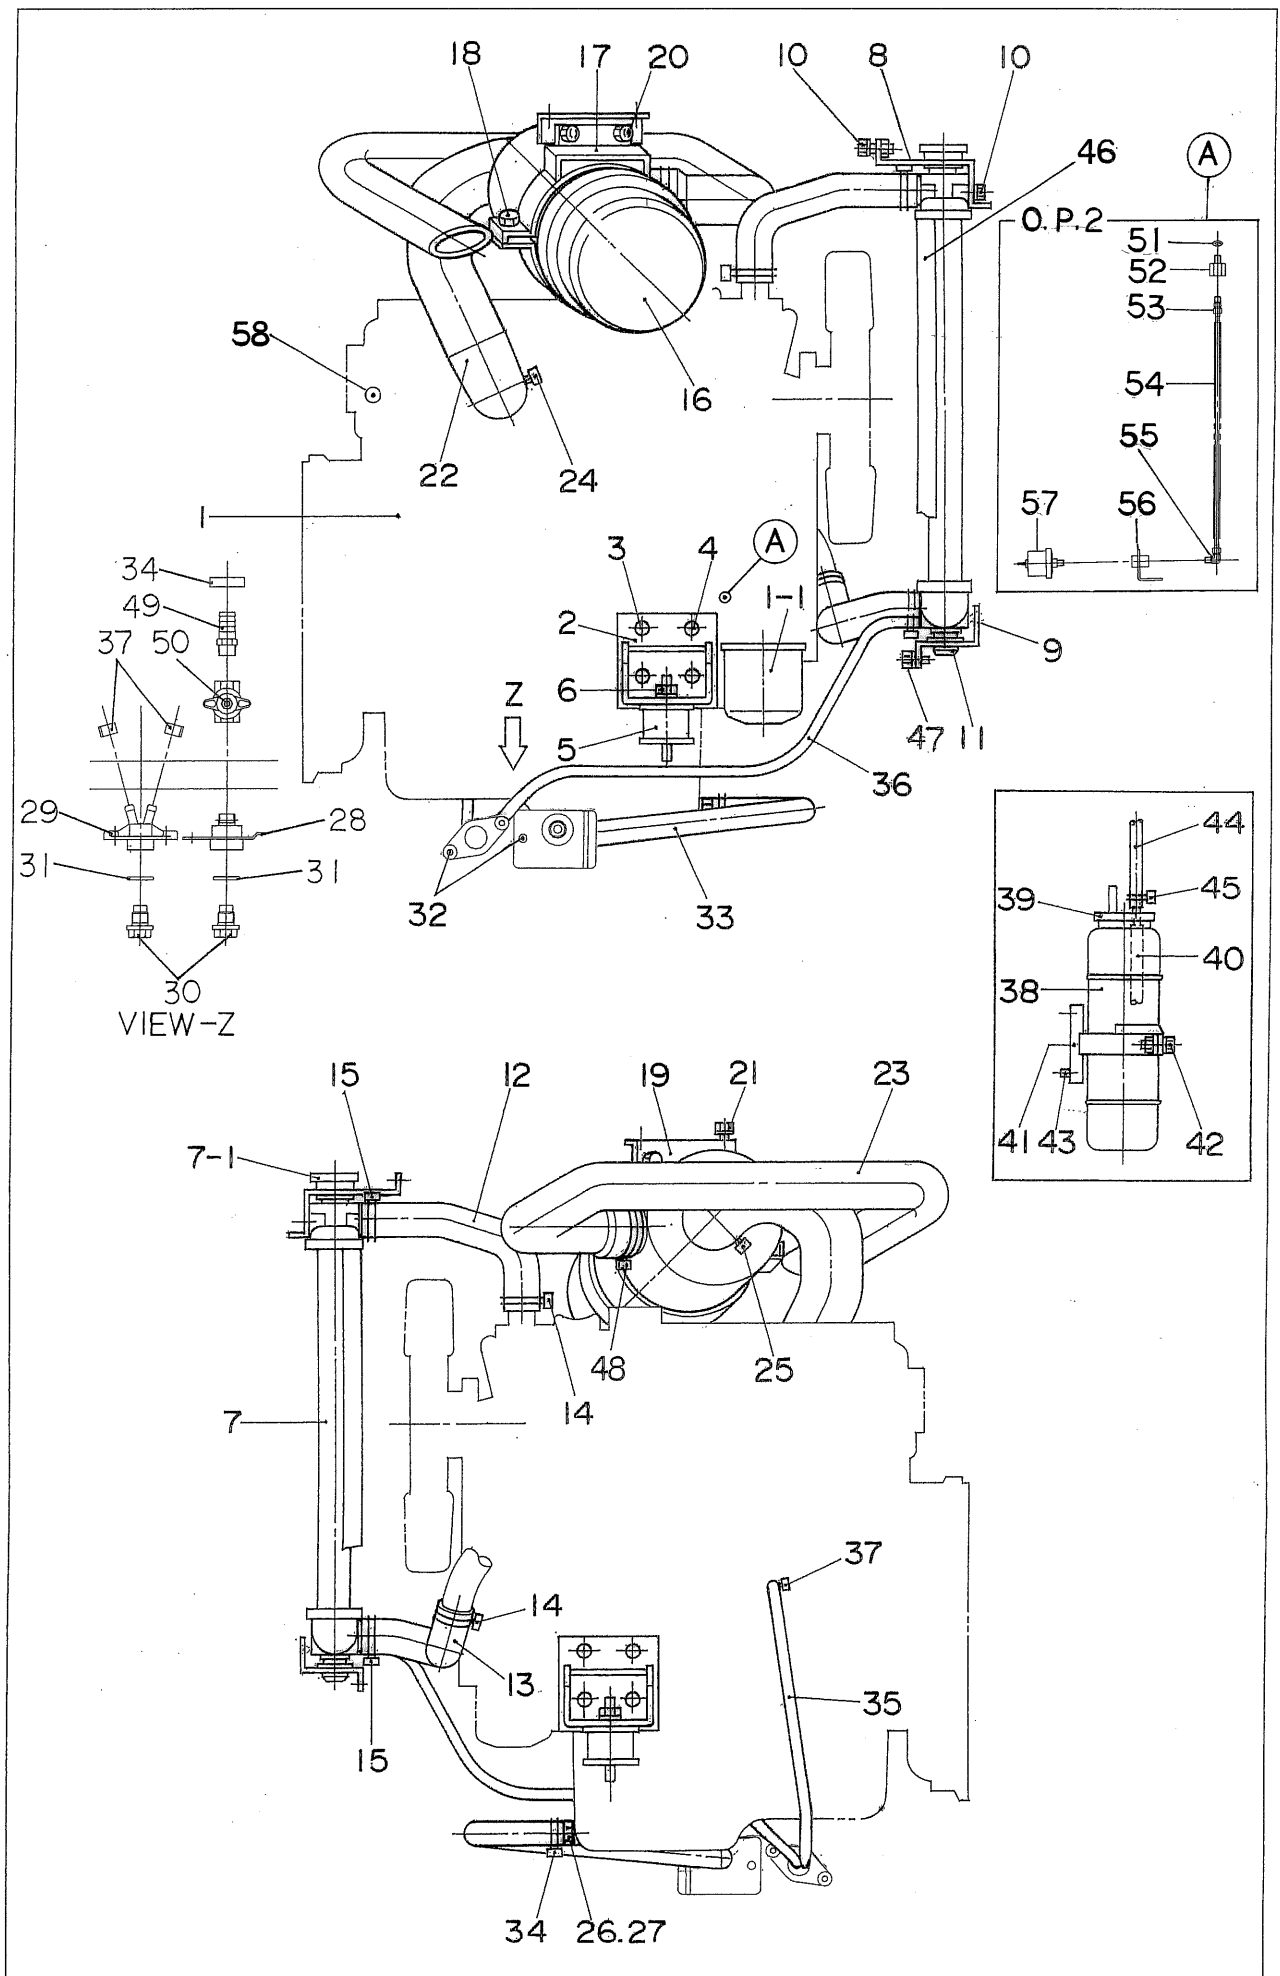


| Key No. | Parts No.     | Parts Name            | Remarks               | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|-----------------------|-----------------------|------|---|---|---|--------|------------|
|         |               |                       |                       | All  | A | B | C |        |            |
| 1       | D 69242 00064 | Engine                | KUBOTA<br>V1505       | 1    |   |   |   |        |            |
|         | Y 06020 15262 | Fan Belt              | KUBOTA<br>16241-97011 | (1)  |   |   |   |        |            |
| 1- 1    | Y 06020 41174 | Cartridge, oil filter | KUBOTA<br>16271-32093 | (1)  |   |   |   |        |            |
| 2       | D 53042 00304 | Engine Foot           |                       | 2    |   |   |   |        |            |
| 3       | Y 00107 10020 | Hex. Head Bolt        |                       | 6    |   |   |   |        |            |
| 4       | Y 00107 10020 | Hex. Head Bolt        |                       | 2    |   |   |   |        |            |
|         | Y 00424 10000 | Plain Washer          |                       | 2    |   |   |   |        |            |
| 5       | W 76054 19004 | Rubber Suspension     |                       | 2    |   |   |   |        |            |
| 6       | Y 02070 10000 | Hex. Nut              |                       | 2    |   |   |   |        |            |
| 7       | Y 06020 12793 | Radiator              | 2951-349-0000         | 1    |   |   |   |        |            |
| 7- 1    | Y 06020 11079 | Cap, radiator         | 6713-092-0901         | (1)  |   |   |   |        |            |
| 8       | D 63111 00204 | Bracket, radiator     |                       | 1    |   |   |   |        |            |
| 9       | B 03111 00404 | Bracket, radiator     |                       | 1    |   |   |   |        |            |
| 10      | Y 00169 06015 | Hex. Head Bolt        |                       | 5    |   |   |   |        |            |
| 11      | B 13126 00004 | Rubber Mount          |                       | 2    |   |   |   |        |            |
| 12      | D 63115 00203 | Radiator Hose         |                       | 1    |   |   |   |        |            |
| 13      | D 43125 01003 | Radiator Hose         |                       | 1    |   |   |   |        |            |
| 14      | Y 06055 15112 | Hose Band             | φ 37                  | 2    |   |   |   |        |            |
| 15      | Y 06055 15134 | Hose Band             | HS16                  | 2    |   |   |   |        |            |
| 16      | Y 06020 46531 | Air Cleaner           | EPG058505             | 1    |   |   |   |        |            |
|         | Y 06020 46611 | Element, air cleaner  | P82-1575              | (1)  |   |   |   |        |            |
| 17      | D 53742 00203 | Band, air cleaner     |                       | 1    |   |   |   |        |            |
| 18      | Y 00169 08025 | Hex. Head Bolt        |                       | 1    |   |   |   |        |            |


| Key No. | Parts No.     | Parts Name         | Remarks | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|--------------------|---------|------|---|---|---|--------|------------|
|         |               |                    |         | All  | A | B | C |        |            |
| 19      | D 53742 00104 | Bracket            |         | 1    |   |   |   |        |            |
| 20      | Y 00169 06015 | Hex. Head Bolt     |         | 2    |   |   |   |        |            |
| 21      | Y 00173 06015 | Hex. Head Bolt     |         | 2    |   |   |   |        |            |
| 22      | D 43751 01303 | Hose, air cleaner  |         | 1    |   |   |   |        |            |
| 23      | B 13751 00613 | Hose, air cleaner  |         | 1    |   |   |   |        |            |
| 24      | Y 06055 15139 | Hose Band          | HS32    | 1    |   |   |   |        |            |
| 25      | Y 06055 15027 | Hose Band          | φ 65    | 1    |   |   |   |        |            |
| 26      | W 79620 54004 | Drain Joint, oil   |         | 1    |   |   |   |        |            |
| 27      | Y 06020 21191 | Packing            | SW-12   | 1    |   |   |   |        |            |
| 28      | D 43213 00003 | Drain Joint, oil   |         | 1    |   |   |   |        | ~5722624   |
|         | D 23213 00003 | Drain Joint, oil   |         | 1    |   |   |   |        | 5722625~   |
| 29      | W 16220 14103 | Drain Joint, water |         | 1    |   |   |   |        |            |
| 30      | W 08020 11104 | Plug               |         | 2    |   |   |   |        |            |
| 31      | Y 01500 00018 | O Ring             | A P18   | 2    |   |   |   |        |            |
| 32      | Y 00169 06015 | Hex. Head Bolt     |         | 4    |   |   |   |        | ~5722624   |
|         | Y 00169 06015 | Hex. Head Bolt     |         | 3    |   |   |   |        | 5722625~   |
| 33      | D 63211 00203 | Drain Hose         |         | 1    |   |   |   |        |            |
| 34      | Y 06055 15132 | Hose Band          | HS-8    | 2    |   |   |   |        |            |
| 35      | Y 01999 01000 | Drain Hose         |         | 1    |   |   |   |        |            |
| 36      | Y 01999 00700 | Drain Hose         |         | 1    |   |   |   |        |            |
| 37      | Y 06055 15094 | Hose Band          | φ 12    | 4    |   |   |   |        |            |
| 38      | W 08020 81403 | Reserve Tank       |         | 1    |   |   |   |        |            |
| 39      | W 08020 81104 | Cap, reserve tank  |         | 1    |   |   |   |        |            |


| Key No. | Parts No.     | Parts Name            | Remarks               | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|-----------------------|-----------------------|------|---|---|---|--------|------------|
|         |               |                       |                       | All  | A | B | C |        |            |
| 40      | Y 01991 00215 | Hose                  |                       | 1    |   |   |   |        |            |
| 41      | W 87020 82004 | Bracket, reserve tank |                       | 1    |   |   |   |        |            |
| 42      | Y 00169 06015 | Hex. Head Bolt        |                       | 1    |   |   |   |        |            |
| 43      | Y 00169 06015 | Hex. Head Bolt        |                       | 2    |   |   |   |        |            |
| 44      | Y 01999 00480 | Hose                  |                       | 1    |   |   |   |        |            |
| 45      | Y 06055 15094 | Hose Band             | φ12                   | 2    |   |   |   |        |            |
| 46      | Y 02203 00400 | Rubber Seal           |                       | 2    |   |   |   |        |            |
| 47      | Y 00169 08020 | Hex. Head Bolt        |                       | 3    |   |   |   |        |            |
| 48      | Y 06055 15010 | Hose Band             | φ63                   | 1    |   |   |   |        |            |
| 49      | Y 06020 22292 | Hose Joint            | HN-1316               | 1    |   |   |   |        |            |
| 50      | Y 06033 25013 | Valve                 | BBS-77-10 3/8         | 1    |   |   |   |        |            |
|         |               | Option Sets 2         |                       |      |   |   |   |        |            |
| 51      | Y 06022 11671 | Packing               | KUBOTA<br>15021-33661 |      |   | 1 |   |        | 5771783~   |
| 52      | Y 06021 22282 | Holder                | KUBOTA<br>15628-36112 |      |   | 1 |   |        | 5771783~   |
| 53      | Y 06033 00060 | Half Union            | C4N6X-PT1/8-MSN       |      |   | 1 |   |        | 5771783~   |
|         | Y 06033 02060 | Sleeve                |                       |      |   | 1 |   |        | 5771783~   |
|         | Y 06033 03060 | Hex. Nut              |                       |      |   | 1 |   |        | 5771783~   |
| 54      | Y 02647 00200 | Nylon Pipe            |                       |      |   | 1 |   |        | 5771783~   |
| 55      | Y 06033 01060 | Elbow Union           | L4N6X4-PT1/8-MSN      |      |   | 1 |   |        | 5771783~   |
|         | Y 06033 02060 | Sleeve                |                       |      |   | 1 |   |        | 5771783~   |
|         | Y 06033 03060 | Hex. Nut              |                       |      |   | 1 |   |        | 5771783~   |
| 56      | E 53248 00004 | Bracket               |                       |      |   | 1 |   |        | 5771783~   |
|         | Y 00169 08020 | Hex. Head Bolt        |                       |      |   | 1 |   |        | 5771783~   |

| Key No. | Parts No.     | Parts Name              | Remarks      | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|-------------------------|--------------|------|---|---|---|--------|------------|
|         |               |                         |              | All  | A | B | C |        |            |
| 57      | Y 06021 22205 | Unit, oil pressure      | E0-5 (0-10K) |      |   | 1 |   |        | 5771783~   |
| 58      | Y 06021 23209 | Unit, water temperature | ET-8 PT1/8   |      |   | 1 |   |        | 5771783~   |

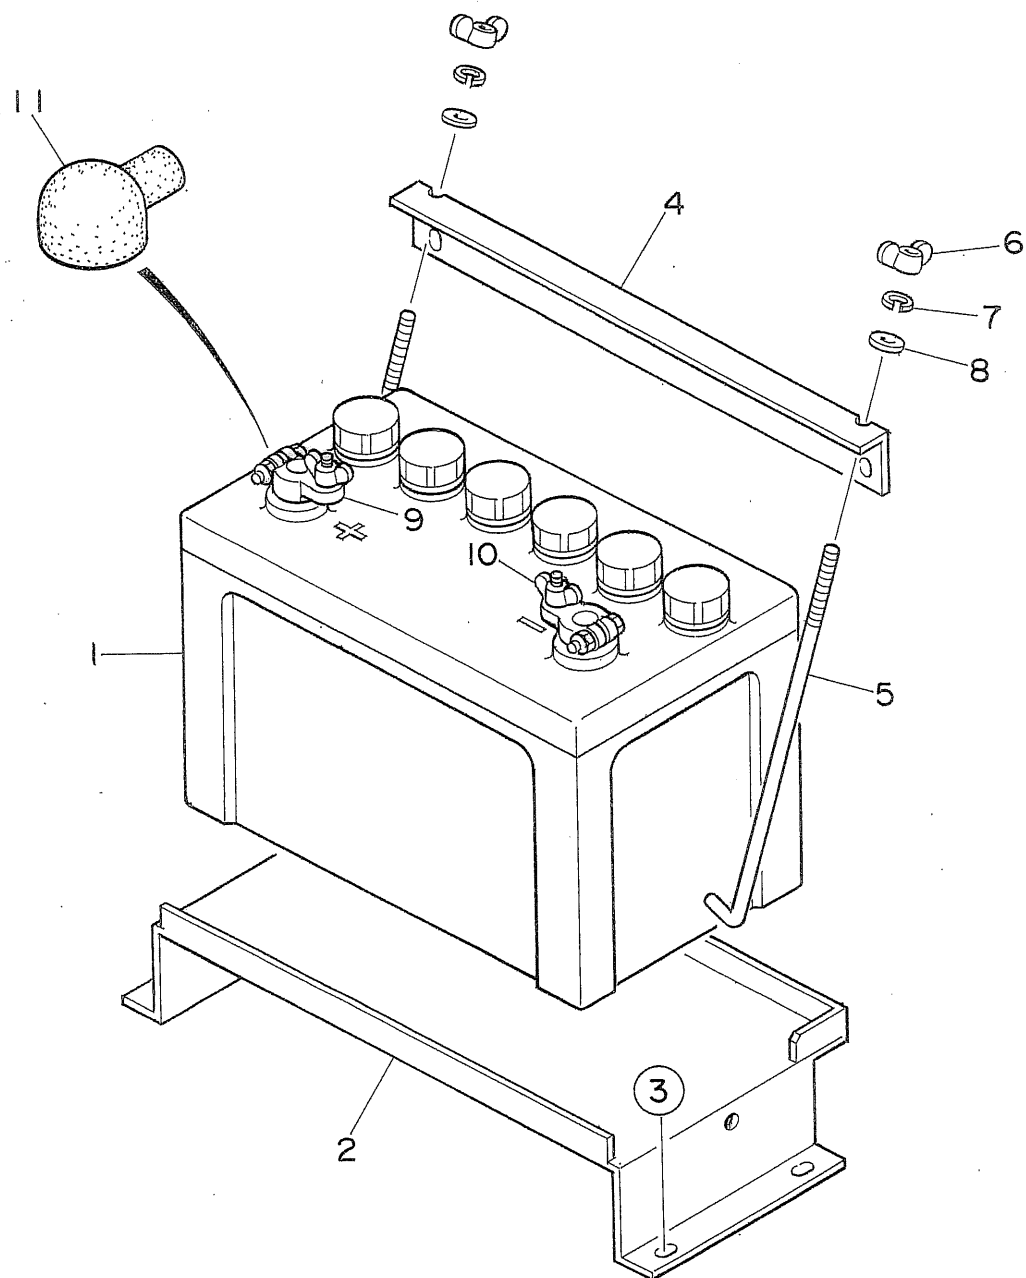


| Key No. | Parts No.     | Parts Name     | Remarks | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|----------------|---------|------|---|---|---|--------|------------|
|         |               |                |         | All  | A | B | C |        |            |
| 1       | Y 01653 08026 | Battery        | 80D26R  | 1    |   |   |   |        |            |
| 2       | D 53442 00104 | Battery Frame  |         | 1    |   |   |   |        |            |
| 3       | Y 00169 06015 | Hex. Head Bolt |         | 4    |   |   |   |        |            |
| 4       | B 13452 00114 | Battery Band   |         | 1    |   |   |   |        |            |
| 5       | W 08050 02904 | Battery Bolt   |         | 2    |   |   |   |        |            |
| 6       | Y 00378 08000 | Wing Nut       |         | 2    |   |   |   |        |            |
| 7       | Y 00400 08000 | Spring Washer  |         | 2    |   |   |   |        |            |
| 8       | Y 00412 08000 | Plain Washer   |         | 2    |   |   |   |        |            |
| 9       | Y 06022 20310 | Terminal Ass'y | No. 9P  | 1    |   |   |   |        |            |
| 10      | Y 06022 20311 | Terminal Ass'y | No. 9N  | 1    |   |   |   |        |            |
| 11      | W 08450 40414 | Terminal Cap   |         | 1    |   |   |   |        |            |

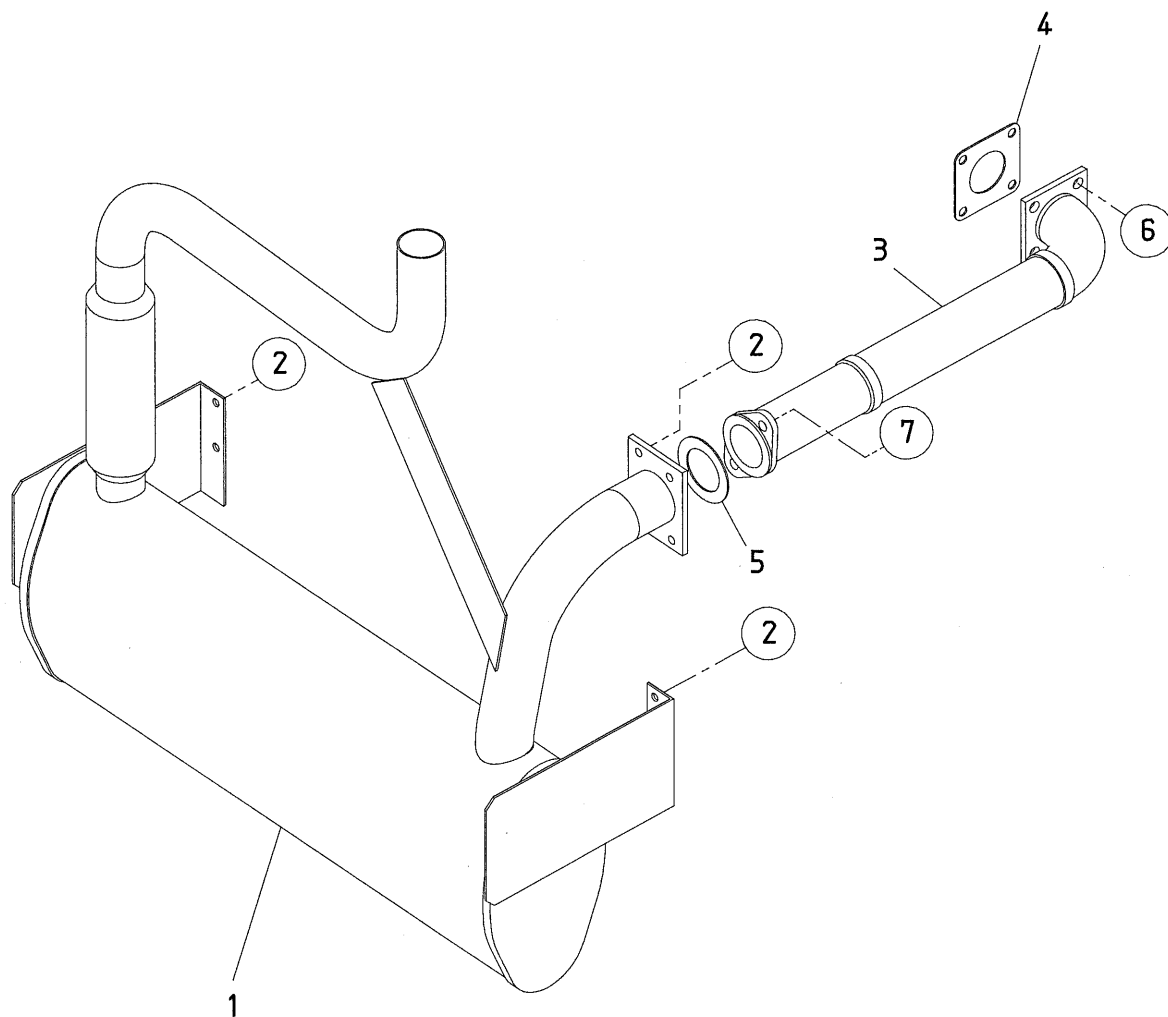

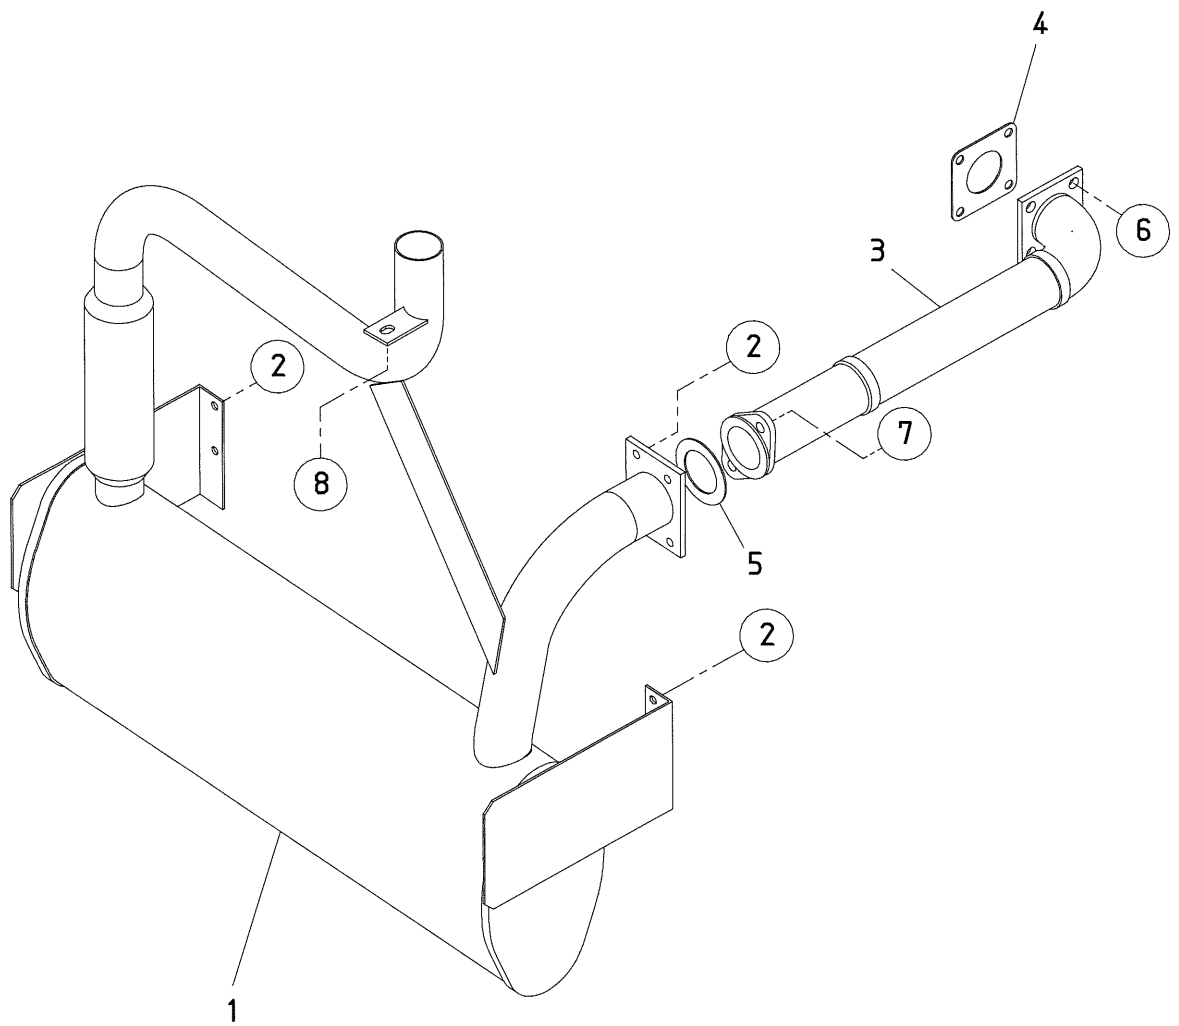


| Key No. | Parts No.     | Parts Name     | Remarks               | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|----------------|-----------------------|------|---|---|---|--------|------------|
|         |               |                |                       | All  | A | B | C |        |            |
| 1       | D 63311 00203 | Muffler        |                       | 1    |   |   |   |        | ~5806414   |
|         | D 63311 00213 | Muffler        |                       | 1    |   |   |   |        | 5806415~   |
| 2       | Y 00169 08020 | Hex. Head Bolt |                       | 6    |   |   |   |        |            |
| 3       | D 53340 00103 | Exhaust Pipe   |                       | 1    |   |   |   |        |            |
| 4       | Y 06023 20153 | Gasket         | KUBOTA<br>15263-12371 | 1    |   |   |   |        |            |
| 5       | D 93040 00004 | Gasket         |                       | 1    |   |   |   |        |            |
| 6       | Y 02070 08000 | Hex. Nut       |                       | 4    |   |   |   |        |            |
| 7       | Y 00169 08030 | Hex. Head Bolt |                       | 2    |   |   |   |        |            |
| 8       | Y 00169 08020 | Hex. Head Bolt |                       | 1    |   |   |   |        | 5806415~   |

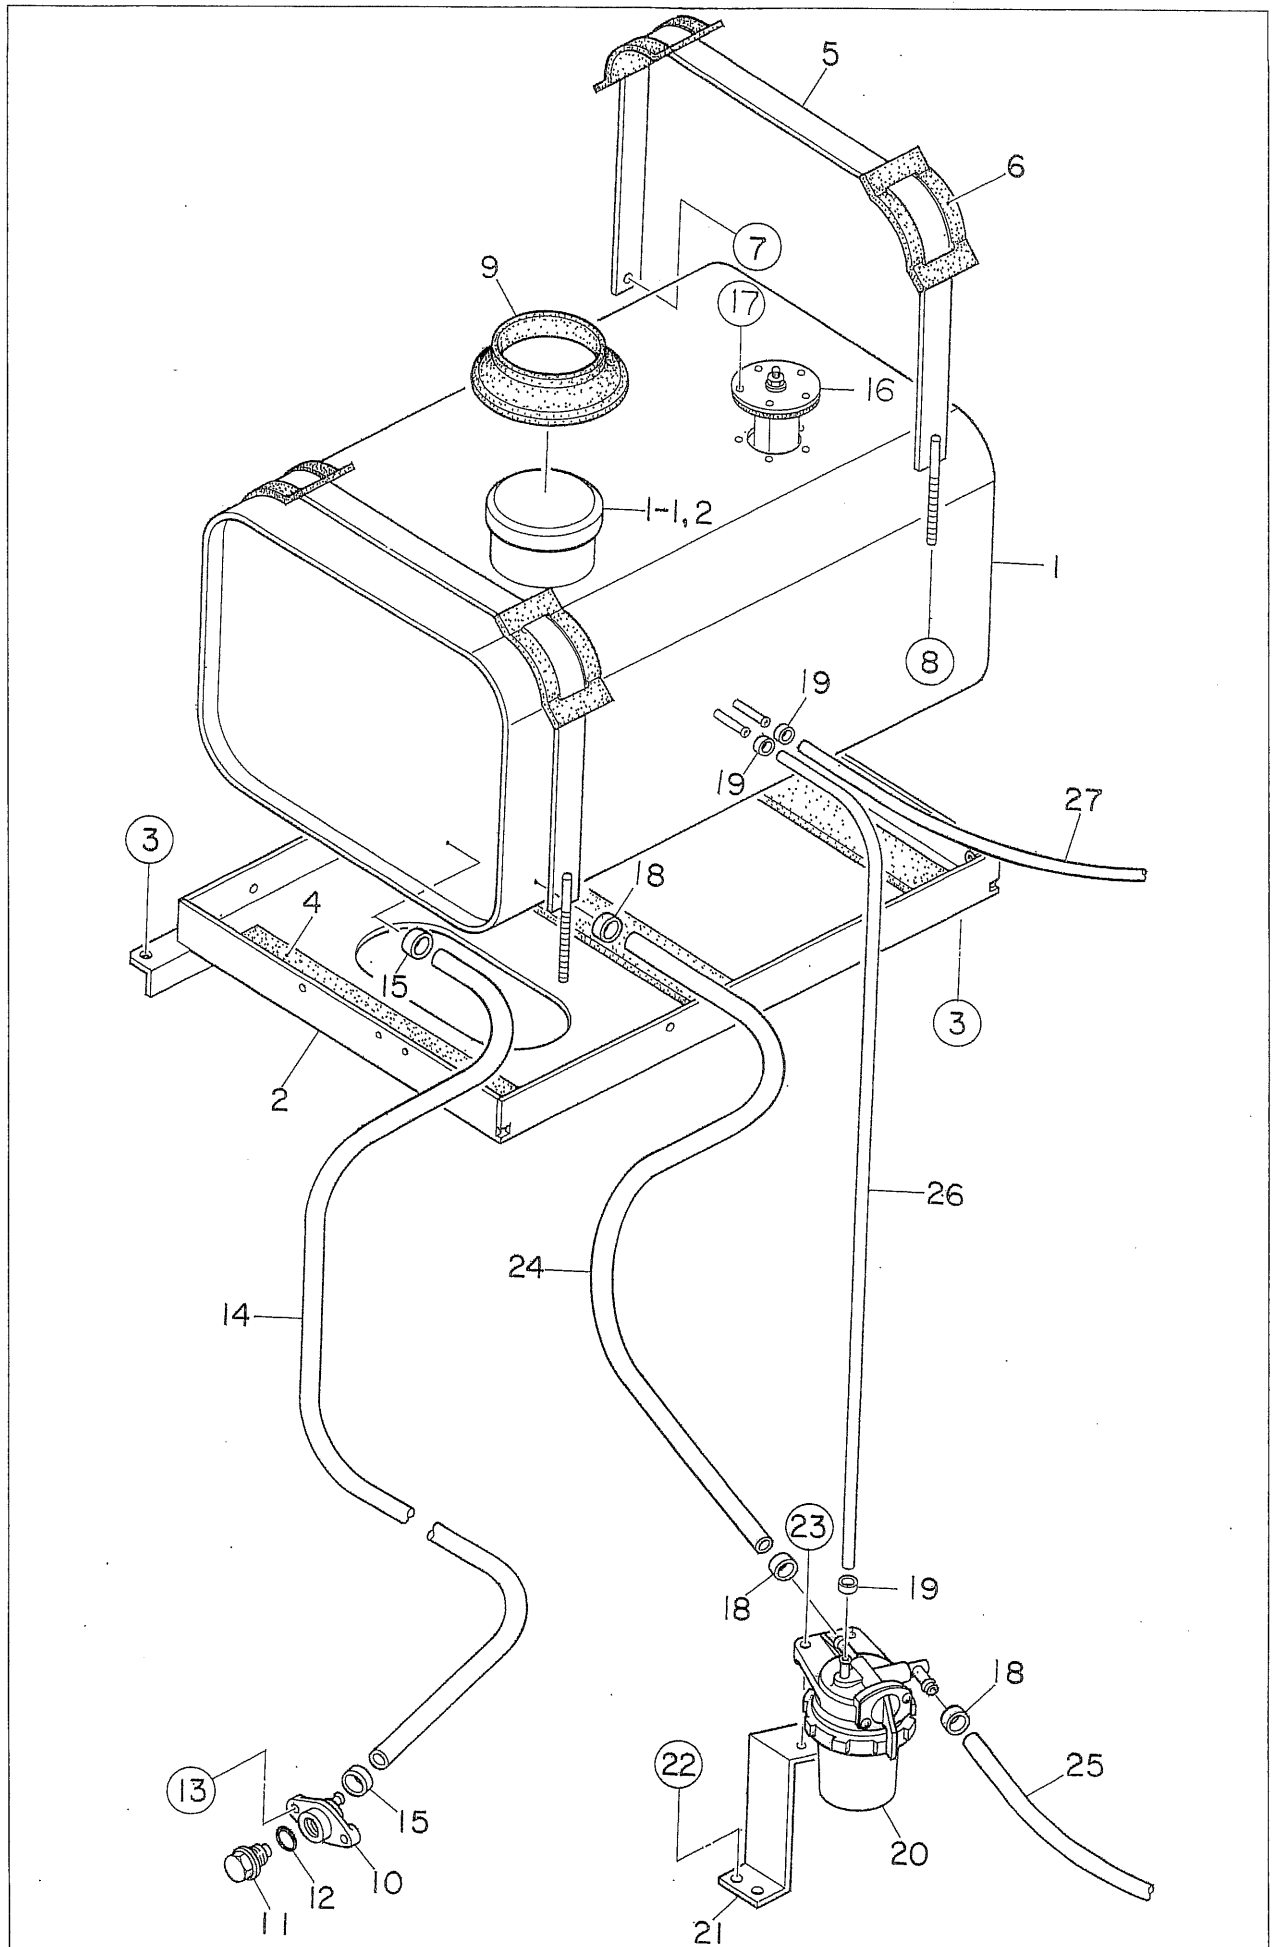

| Key No. | Parts No.     | Parts Name           | Remarks    | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|----------------------|------------|------|---|---|---|--------|------------|
|         |               |                      |            | All  | A | B | C |        |            |
| 1       | D 63640 00203 | Fuel Tank            |            | 1    |   |   |   |        |            |
| 1- 1    | A 99248 00024 | Cap Ass'y, fuel tank |            | 1    |   |   |   |        |            |
|         | W 08101 05800 | Cap, fuel tank       |            | (1)  |   |   |   |        |            |
|         | W 08101 05900 | Fuel Filter          |            | (1)  |   |   |   |        |            |
| 2       | D 64340 00003 | Bracket, fuel tank   |            | 1    |   |   |   |        |            |
| 3       | Y 00169 08020 | Hex. Head Bolt       |            | 4    |   |   |   |        |            |
| 4       | Y 02233 00330 | Tank Sheet           |            | 3    |   |   |   |        |            |
| 5       | D 63642 00004 | Tank Band            |            | 2    |   |   |   |        |            |
| 6       | D 63653 00504 | Pad, tank band       |            | 4    |   |   |   |        |            |
| 7       | Y 00169 08015 | Hex. Head Bolt       |            | 2    |   |   |   |        |            |
| 8       | Y 00379 08000 | Hex. Nut             |            | 2    |   |   |   |        |            |
| 9       | B 93124 00004 | Rubber Seal          |            | 1    |   |   |   |        |            |
| 10      | W 78120 14003 | Drain Joint          |            | 1    |   |   |   |        |            |
| 11      | W 08020 11104 | Plug                 |            | 1    |   |   |   |        |            |
| 12      | Y 01500 00018 | O Ring               | AP18       | 1    |   |   |   |        |            |
| 13      | Y 00169 06015 | Hex. Head Bolt       |            | 2    |   |   |   |        |            |
| 14      | Y 03706 00850 | Drain Hose           |            | 1    |   |   |   |        |            |
| 15      | Y 06055 15094 | Hose Band            | φ 12       | 2    |   |   |   |        |            |
| 16      | E 29243 00244 | Sender, fuel gauge   | I-208      | 1    |   |   |   |        | ~5795394   |
|         | B 49243 00284 | Sender, fuel gauge   | UT06-I-208 | 1    |   |   |   |        | 5795395~   |
|         | E 19243 00184 | Gasket               |            | (1)  |   |   |   |        | ~5795394   |
|         | B 39243 00184 | Gasket               | UT06-601   | (1)  |   |   |   |        | 5795395~   |
| 17      | Y 00229 05015 | Machine Screw        |            | 5    |   |   |   |        |            |


| Key No. | Parts No.     | Parts Name           | Remarks               | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|----------------------|-----------------------|------|---|---|---|--------|------------|
|         |               |                      |                       | All  | A | B | C |        |            |
| 18      | Y 06055 15094 | Hose Band            | $\phi$ 12             | 4    |   |   |   |        |            |
| 19      | Y 06055 15200 | Hose Band            | $\phi$ 8              | 4    |   |   |   |        |            |
| 20      | Y 06020 42463 | Fuel Filter          | KUBOTA<br>15521-43017 | 1    |   |   |   |        |            |
|         | Y 06020 42174 | Element, fuel filter | KUBOTA<br>15521-43161 | (1)  |   |   |   |        |            |
| 21      | D 43687 00604 | Bracket, fuel filter |                       | 1    |   |   |   |        |            |
| 22      | Y 00169 06015 | Hex. Head Bolt       |                       | 2    |   |   |   |        |            |
| 23      | Y 00169 08025 | Hex. Head Bolt       |                       | 2    |   |   |   |        |            |
| 24      | Y 03706 00420 | Suction Hose         |                       | 1    |   |   |   |        |            |
| 25      | Y 03706 00750 | Suction Hose         |                       | 1    |   |   |   |        |            |
| 26      | Y 03707 00550 | Return Hose          |                       | 1    |   |   |   |        |            |
| 27      | Y 03707 00210 | Return Hose          |                       | 1    |   |   |   |        |            |

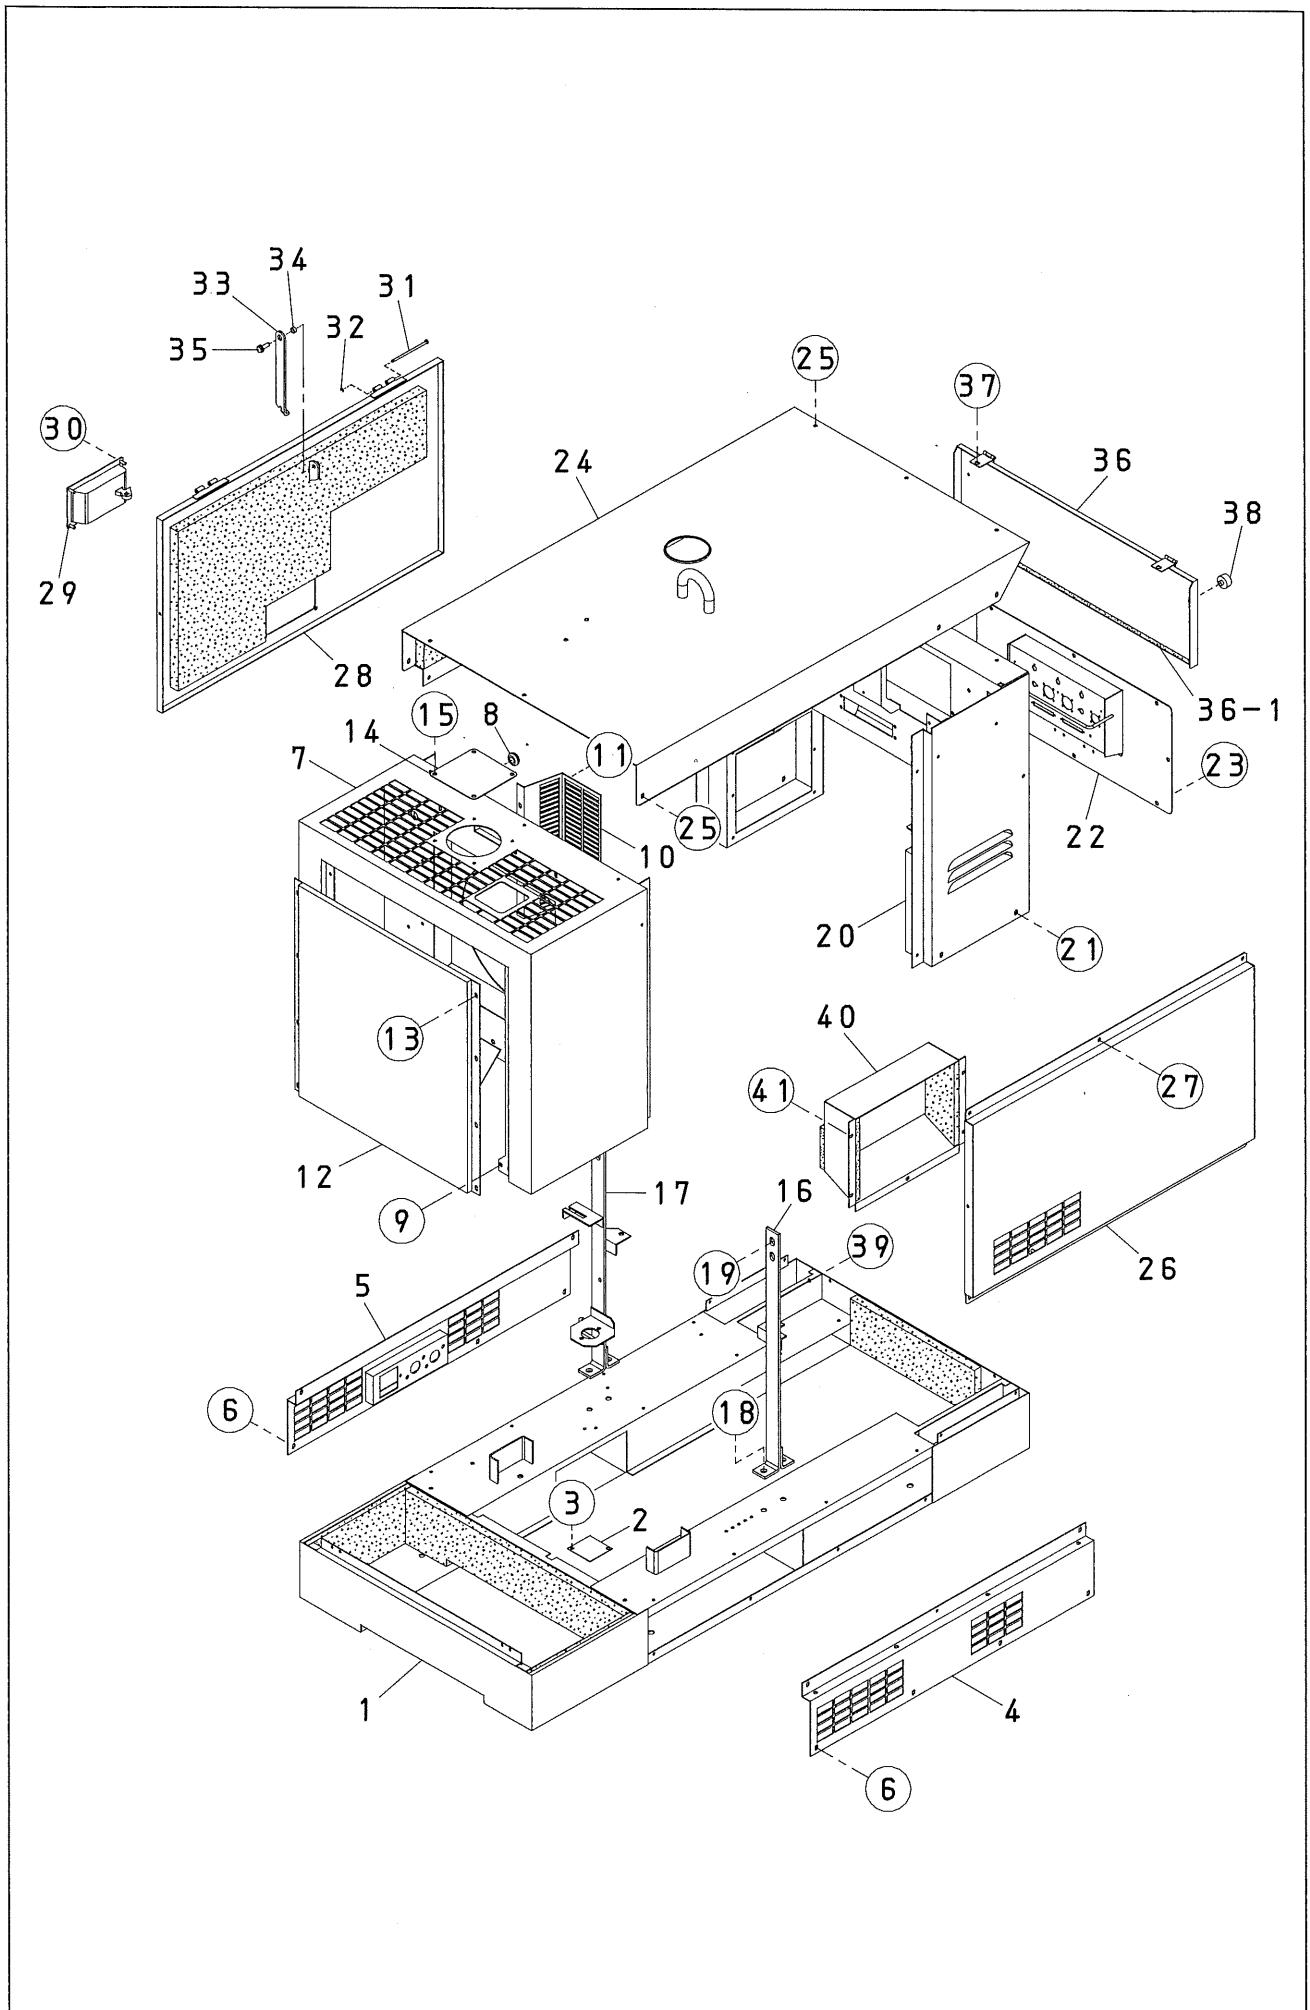


| Key No. | Parts No.     | Parts Name          | Remarks      | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|---------------------|--------------|------|---|---|---|--------|------------|
|         |               |                     |              | All  | A | B | C |        |            |
| 1       | D 64140 00212 | Base                |              | 1    |   |   |   |        | ~5812029   |
|         | D 64140 01102 | Base                |              | 1    |   |   |   |        | 5812030~   |
|         | D 64940 00303 | Lining              |              | 1    |   |   |   |        |            |
| 2       | D 34148 00104 | Floor Panel         |              | 1    |   |   |   |        |            |
| 3       | Y 00169 06015 | Hex. Head Bolt      |              | 2    |   |   |   |        |            |
| 4       | D 64143 00103 | Splasher Panel      |              | 1    |   |   |   |        |            |
| 5       | D 64143 00203 | Splasher Panel      |              | 1    |   |   |   |        | ~5722624   |
|         | D 64143 00213 | Splasher Panel      |              | 1    |   |   |   |        | 5722625~   |
| 6       | Y 00169 06015 | Hex. Head Bolt      |              | 16   |   |   |   |        |            |
| 7       | D 64240 00302 | Front Frame         |              | 1    |   |   |   |        | ~5806414   |
|         | D 64240 00312 | Front Frame         |              | 1    |   |   |   |        | 5806415~   |
|         | D 64941 00203 | Lining              |              | 1    |   |   |   |        |            |
| 8       | Y 06018 50239 | Grommet             | C-30-BW-14-2 | 1    |   |   |   |        |            |
| 9       | Y 00169 06015 | Hex. Head Bolt      |              | 2    |   |   |   |        |            |
| 10      | D 63112 00103 | Fan Guard           |              | 1    |   |   |   |        |            |
| 11      | Y 00169 06015 | Hex. Head Bolt      |              | 2    |   |   |   |        |            |
| 12      | D 64242 00303 | Cover, front frame  |              | 1    |   |   |   |        |            |
|         | D 64941 00304 | Lining              |              | 1    |   |   |   |        |            |
| 13      | Y 00169 06015 | Hex. Head Bolt      |              | 8    |   |   |   |        |            |
| 14      | D 44252 00804 | Cover, radiator cap |              | 1    |   |   |   |        |            |
| 15      | Y 00169 06015 | Hex. Head Bolt      |              | 4    |   |   |   |        |            |
| 16      | D 64343 00303 | Hanger              |              | 1    |   |   |   |        |            |
| 17      | D 64343 00213 | Hanger              |              | 1    |   |   |   |        |            |


| Key No. | Parts No.     | Parts Name        | Remarks     | Q'ty |   |   |   | Symbol | Serial No.          |
|---------|---------------|-------------------|-------------|------|---|---|---|--------|---------------------|
|         |               |                   |             | All  | A | B | C |        |                     |
| 18      | Y 00123 12030 | Hex. Head Bolt    |             | 4    |   |   |   |        |                     |
| 19      | Y 00123 12030 | Hex. Head Bolt    |             | 4    |   |   |   |        |                     |
| 20      | D 64440 01202 | Rear Frame        |             | 1    |   |   |   |        | ~5771782            |
|         | D 64440 01212 | Rear Frame        |             | 1    |   |   |   |        | 5771783~<br>5784940 |
|         | D 64440 01222 | Rear Frame        |             | 1    |   |   |   |        | 5784941~<br>5812029 |
|         | D 64440 02002 | Rear Frame        |             | 1    |   |   |   |        | 5812030~<br>5836132 |
|         | D 64440 02012 | Rear Frame        |             | 1    |   |   |   |        | 5836133~            |
|         | D 64943 00304 | Lining            |             | 1    |   |   |   |        |                     |
| 21      | Y 00169 06015 | Hex. Head Bolt    |             | 4    |   |   |   |        |                     |
| 22      | D 64443 00513 | Cover, rear frame |             | 1    |   |   |   |        |                     |
| 23      | Y 00169 06015 | Hex. Head Bolt    |             | 8    |   |   |   |        |                     |
| 24      | D 64640 00302 | Roof Panel        |             | 1    |   |   |   |        |                     |
|         | D 54945 00304 | Lining            |             | 1    |   |   |   |        |                     |
| 25      | Y 00169 06015 | Hex. Head Bolt    |             | 12   |   |   |   |        |                     |
| 26      | D 64541 00003 | Side Panel        |             | 1    |   |   |   |        |                     |
|         | D 64944 00304 | Lining            |             | 1    |   |   |   |        |                     |
| 27      | Y 00169 06015 | Hex. Head Bolt    |             | 6    |   |   |   |        |                     |
| 28      | D 54540 00813 | Side Door         |             | 1    |   |   |   |        |                     |
|         | D 54944 00614 | Lining            |             | 1    |   |   |   |        |                     |
| 29      | Y 06050 10239 | Door Handle       | A-838-A-1DA | 1    |   |   |   |        |                     |
|         | Y 06018 50519 | Key               | R200        | (1)  |   |   |   |        |                     |
| 30      | Y 02070 06000 | Hex. Nut          |             | 4    |   |   |   |        |                     |
| 31      | W 08100 14704 | Pin               |             | 2    |   |   |   |        |                     |


| Key No. | Parts No.     | Parts Name     | Remarks      | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|----------------|--------------|------|---|---|---|--------|------------|
|         |               |                |              | All  | A | B | C |        |            |
| 32      | Y 00802 00004 | Snap Ring      |              | 2    |   |   |   |        |            |
| 33      | W 78351 86014 | Door Stay      |              | 1    |   |   |   |        |            |
| 34      | W 78350 88004 | Collar         |              | 1    |   |   |   |        |            |
| 35      | Y 00169 08030 | Hex. Head Bolt |              | 1    |   |   |   |        |            |
| 36      | D 64442 00203 | Rear Door      |              | 1    |   |   |   |        |            |
| 36- 1   | Y 02269 00720 | Rubber Seal    |              | 1    |   |   |   |        |            |
| 37      | Y 00169 06015 | Hex. Head Bolt |              | 2    |   |   |   |        |            |
| 38      | Y 06018 51613 | Stopper        | CP-30-FF-15A | 2    |   |   |   |        |            |
| 39      | Y 00169 08020 | Hex. Head Bolt |              | 2    |   |   |   |        |            |
| 40      | D 64543 00003 | Duct           |              | 1    |   |   |   |        |            |
|         | D 64944 00404 | Lining         |              | 1    |   |   |   |        |            |
| 41      | Y 02070 06000 | Hex. Nut       |              | 5    |   |   |   |        |            |

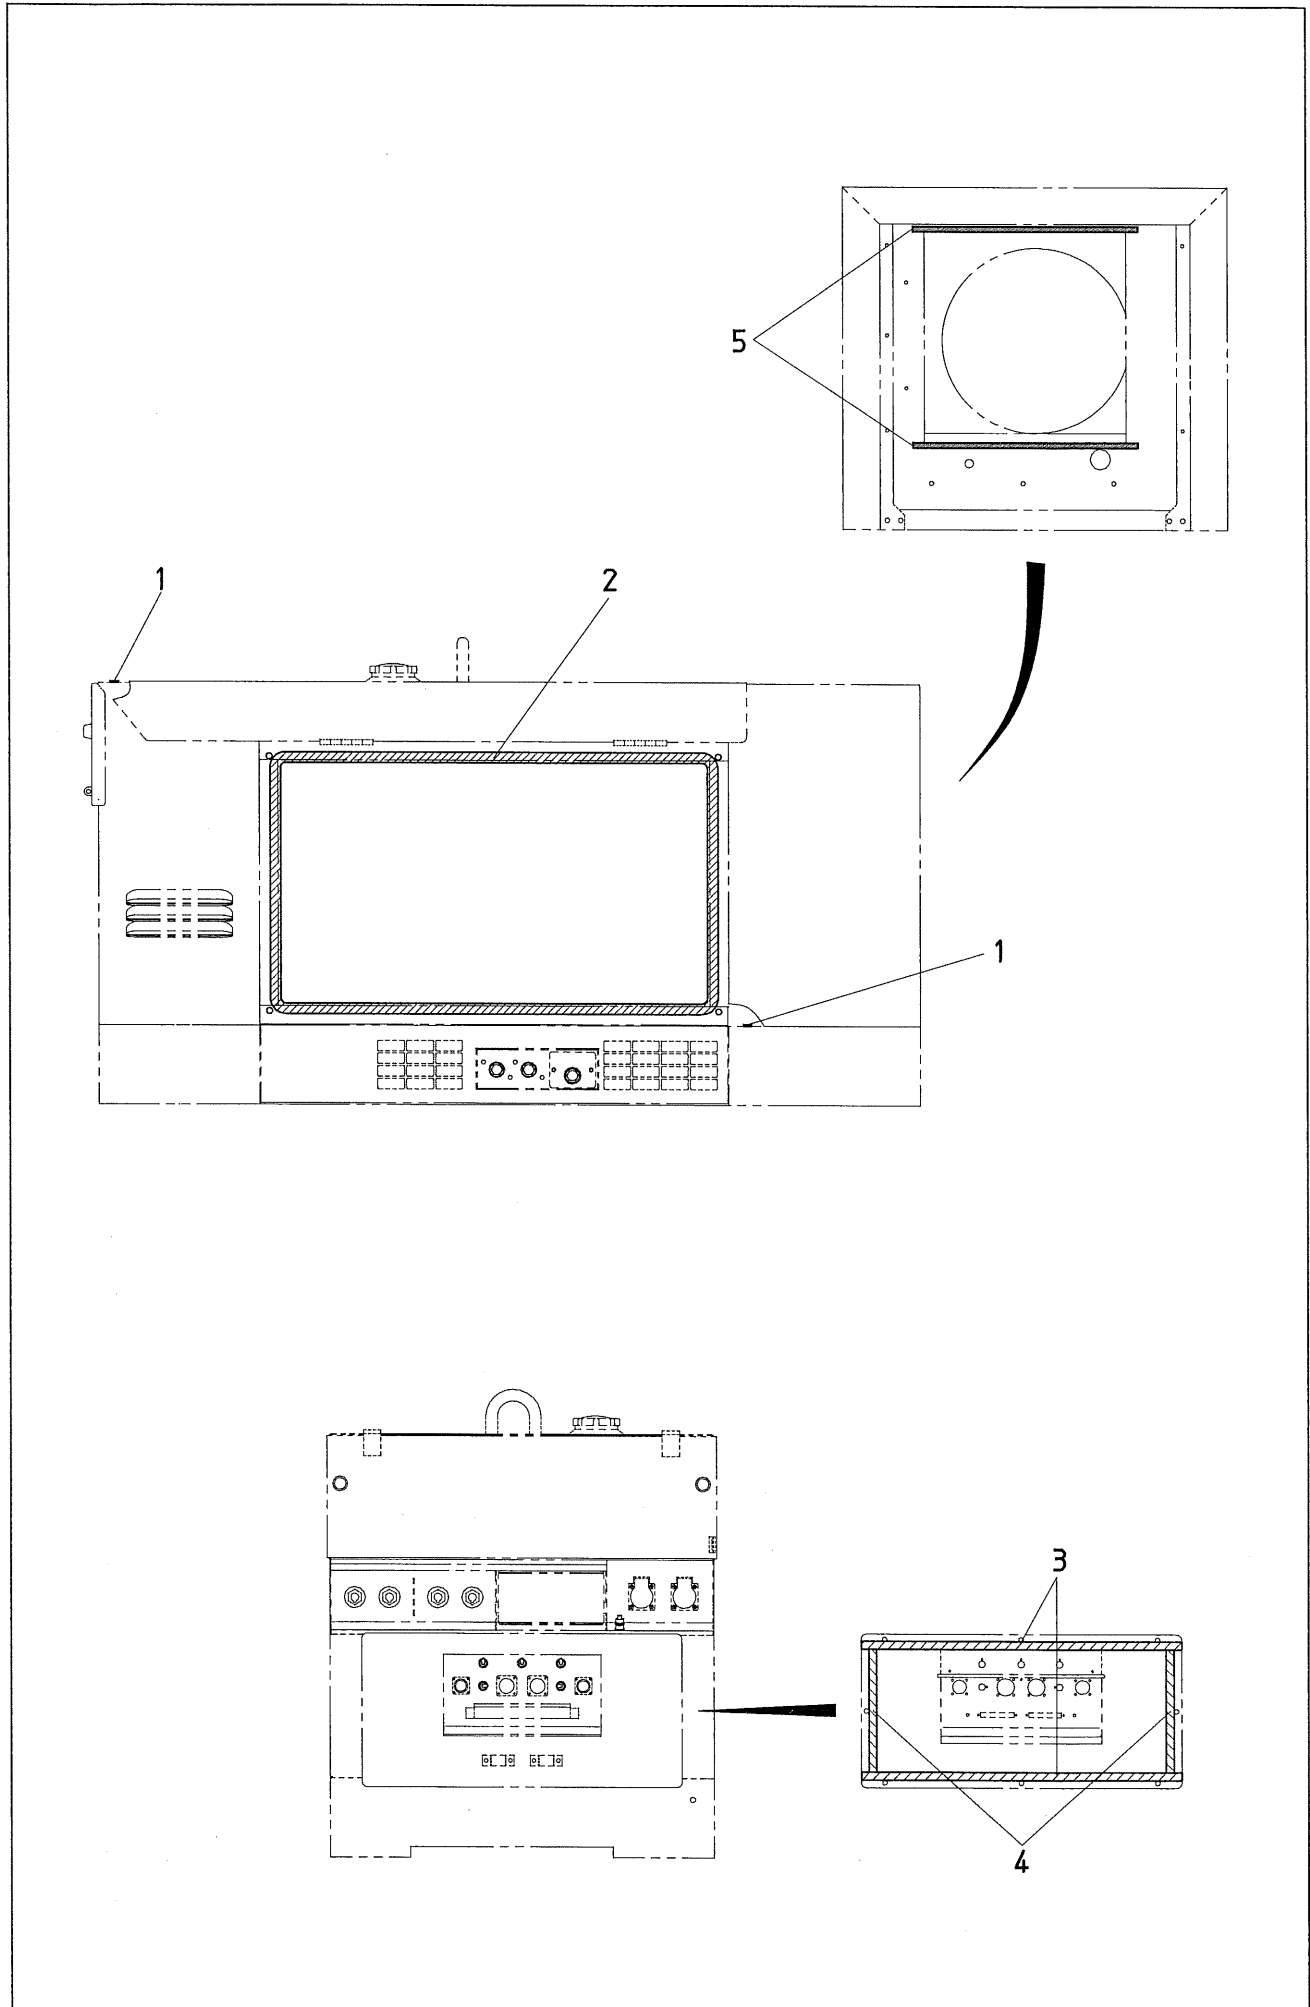



| Key No. | Parts No.     | Parts Name  | Remarks | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|-------------|---------|------|---|---|---|--------|------------|
|         |               |             |         | All  | A | B | C |        |            |
| 1       | Y 03149 00715 | Rubber Seal |         | 2    |   |   |   |        |            |
| 2       | Y 03146 02550 | Rubber Seal |         | 1    |   |   |   |        |            |
| 3       | Y 03149 00600 | Rubber Seal |         | 2    |   |   |   |        |            |
| 4       | Y 03149 00230 | Rubber Seal |         | 2    |   |   |   |        |            |
| 5       | Y 03179 00420 | Rubber Seal |         | 2    |   |   |   |        |            |

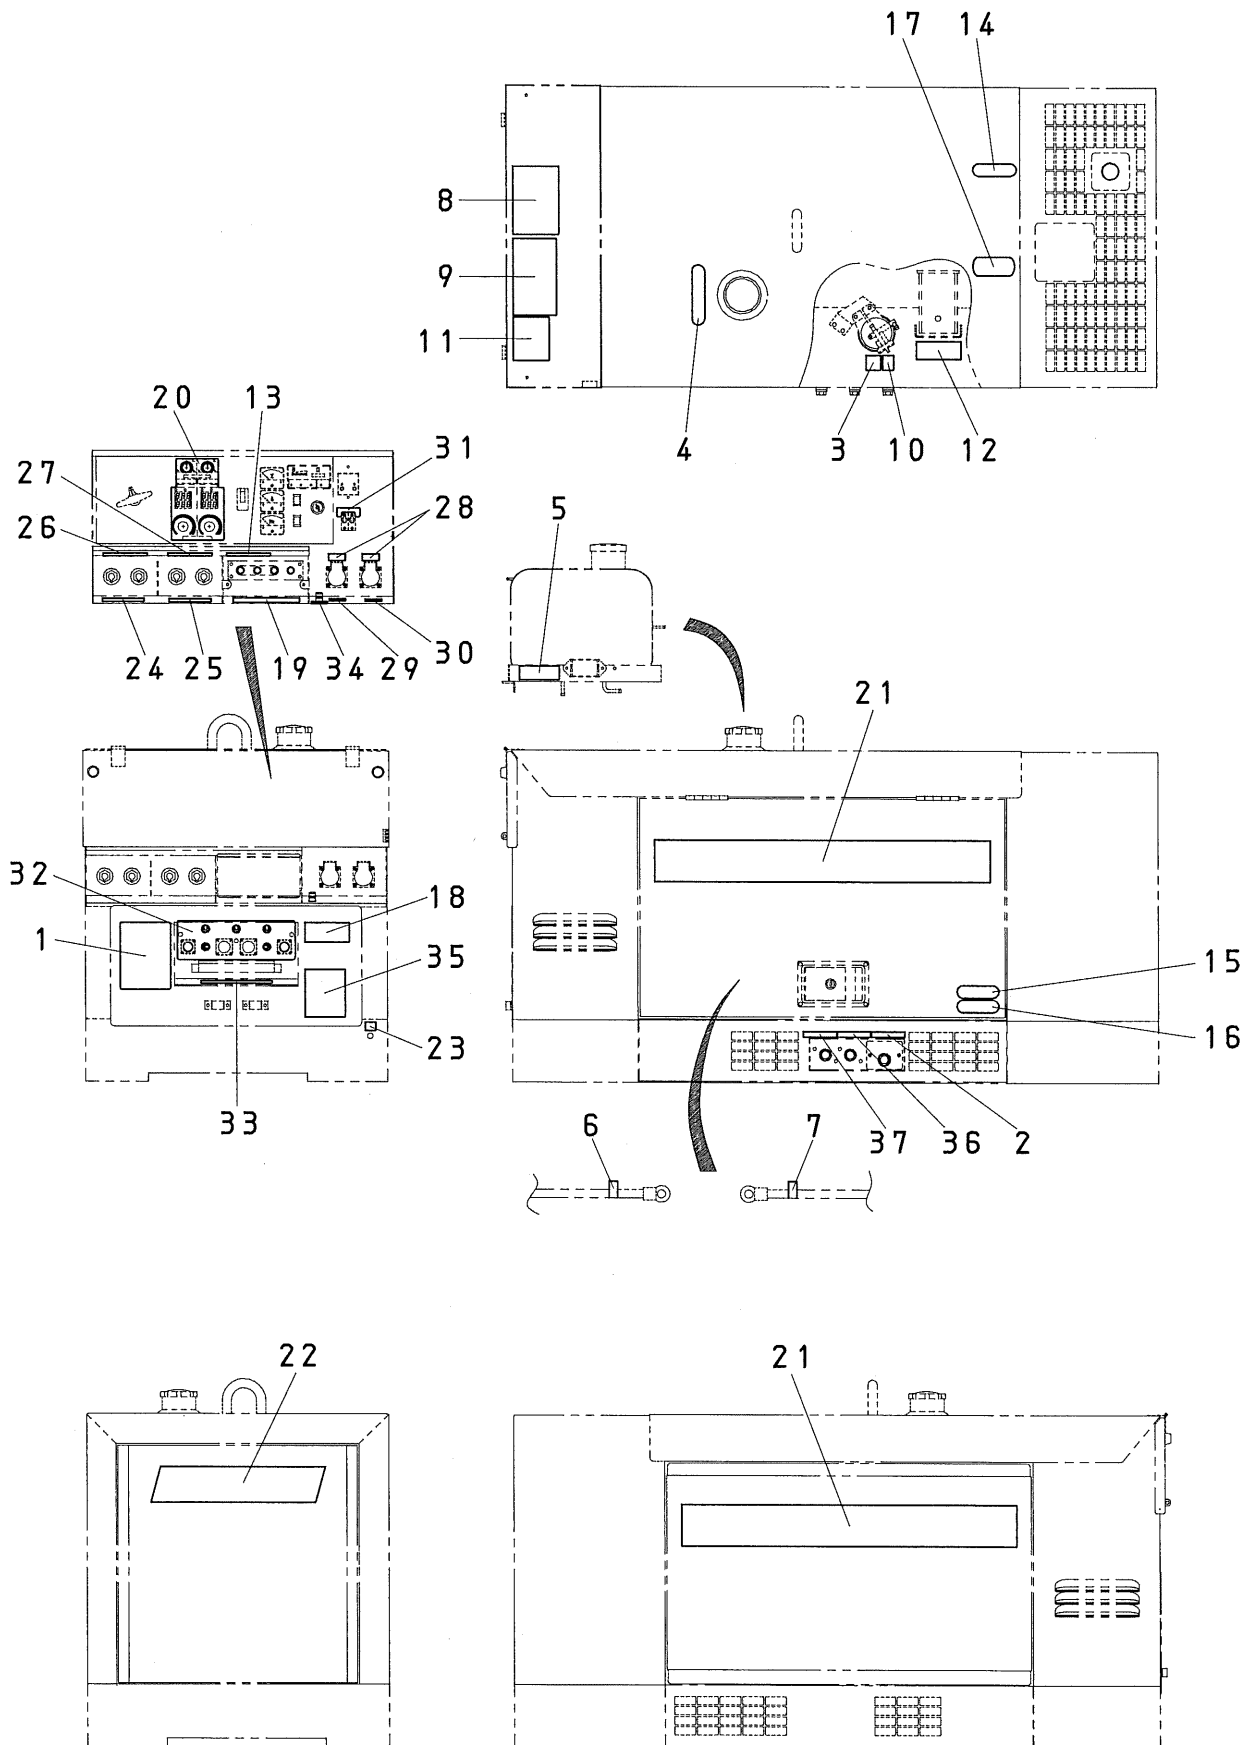


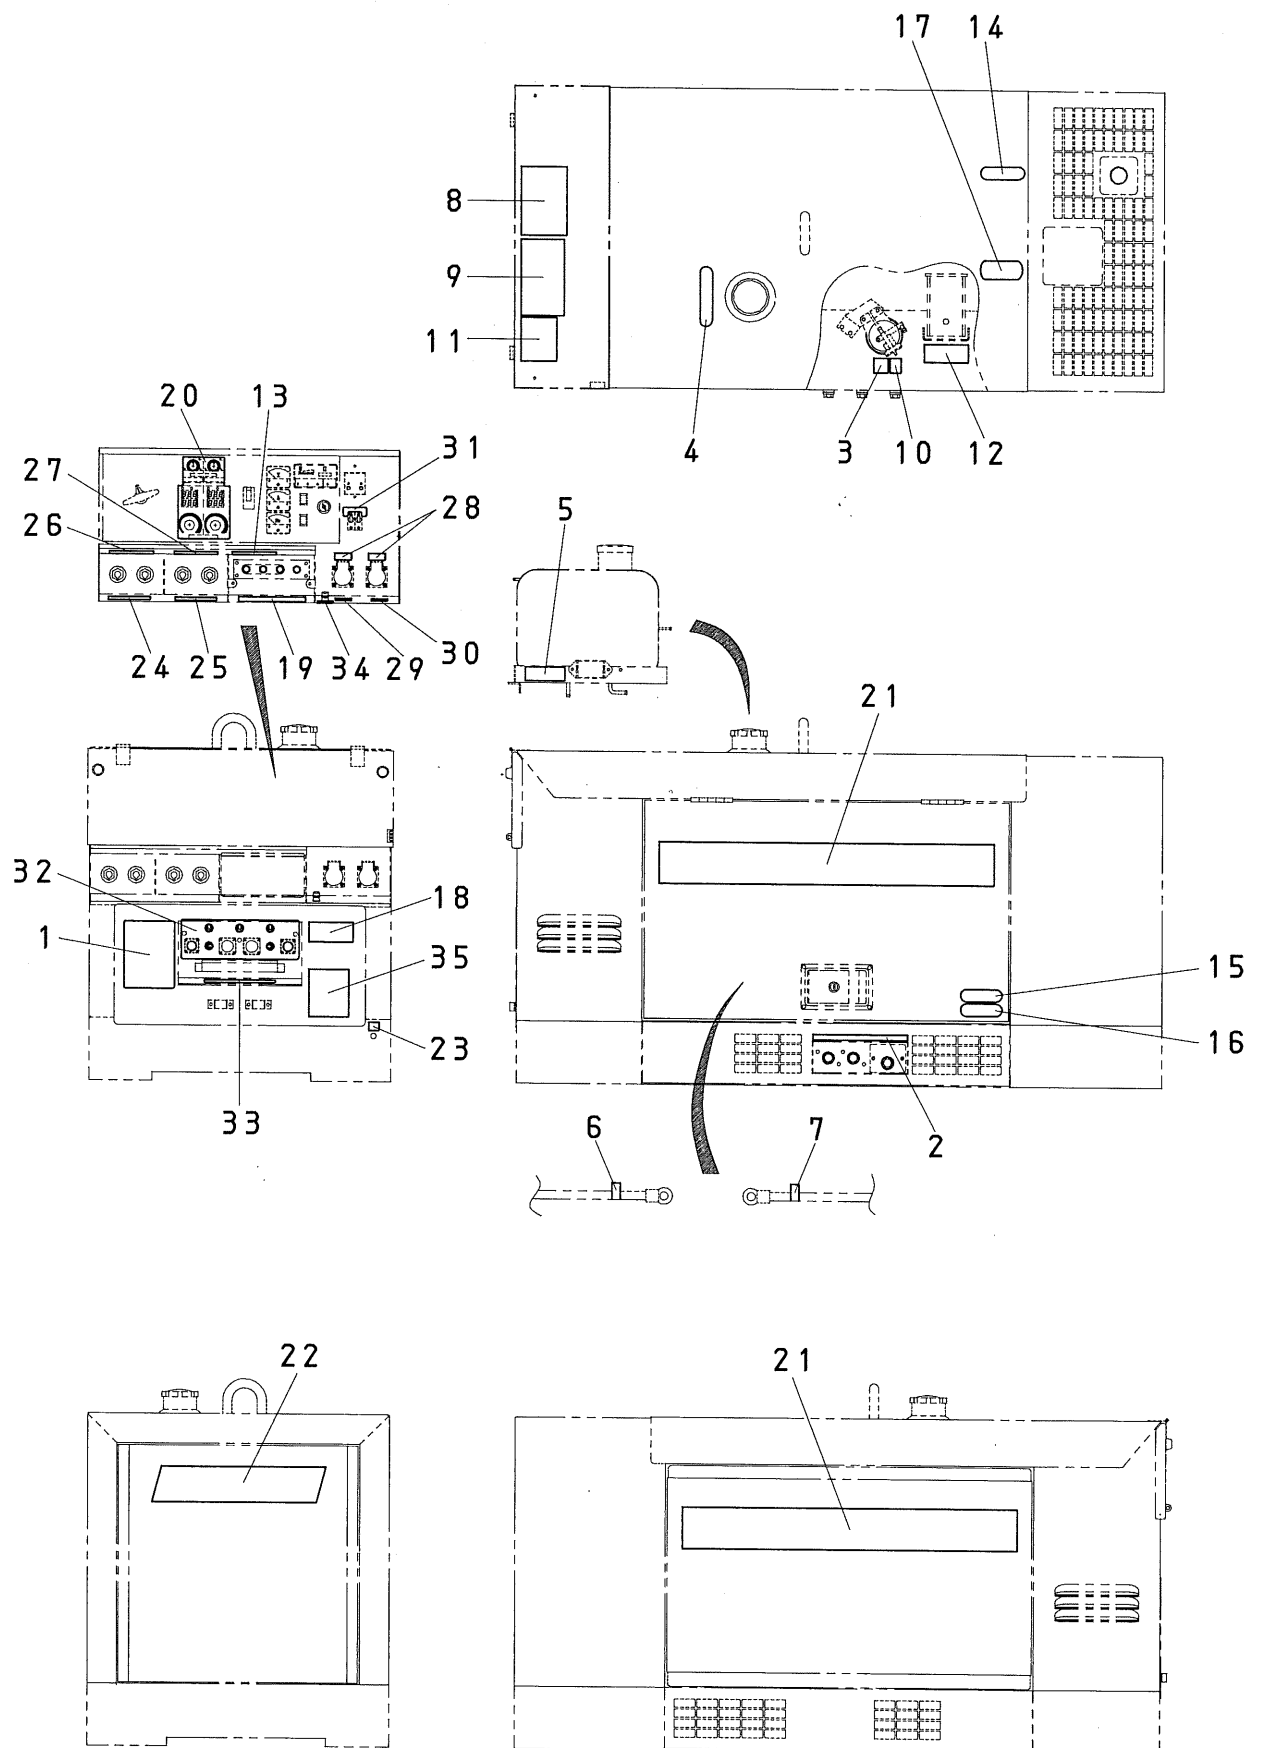


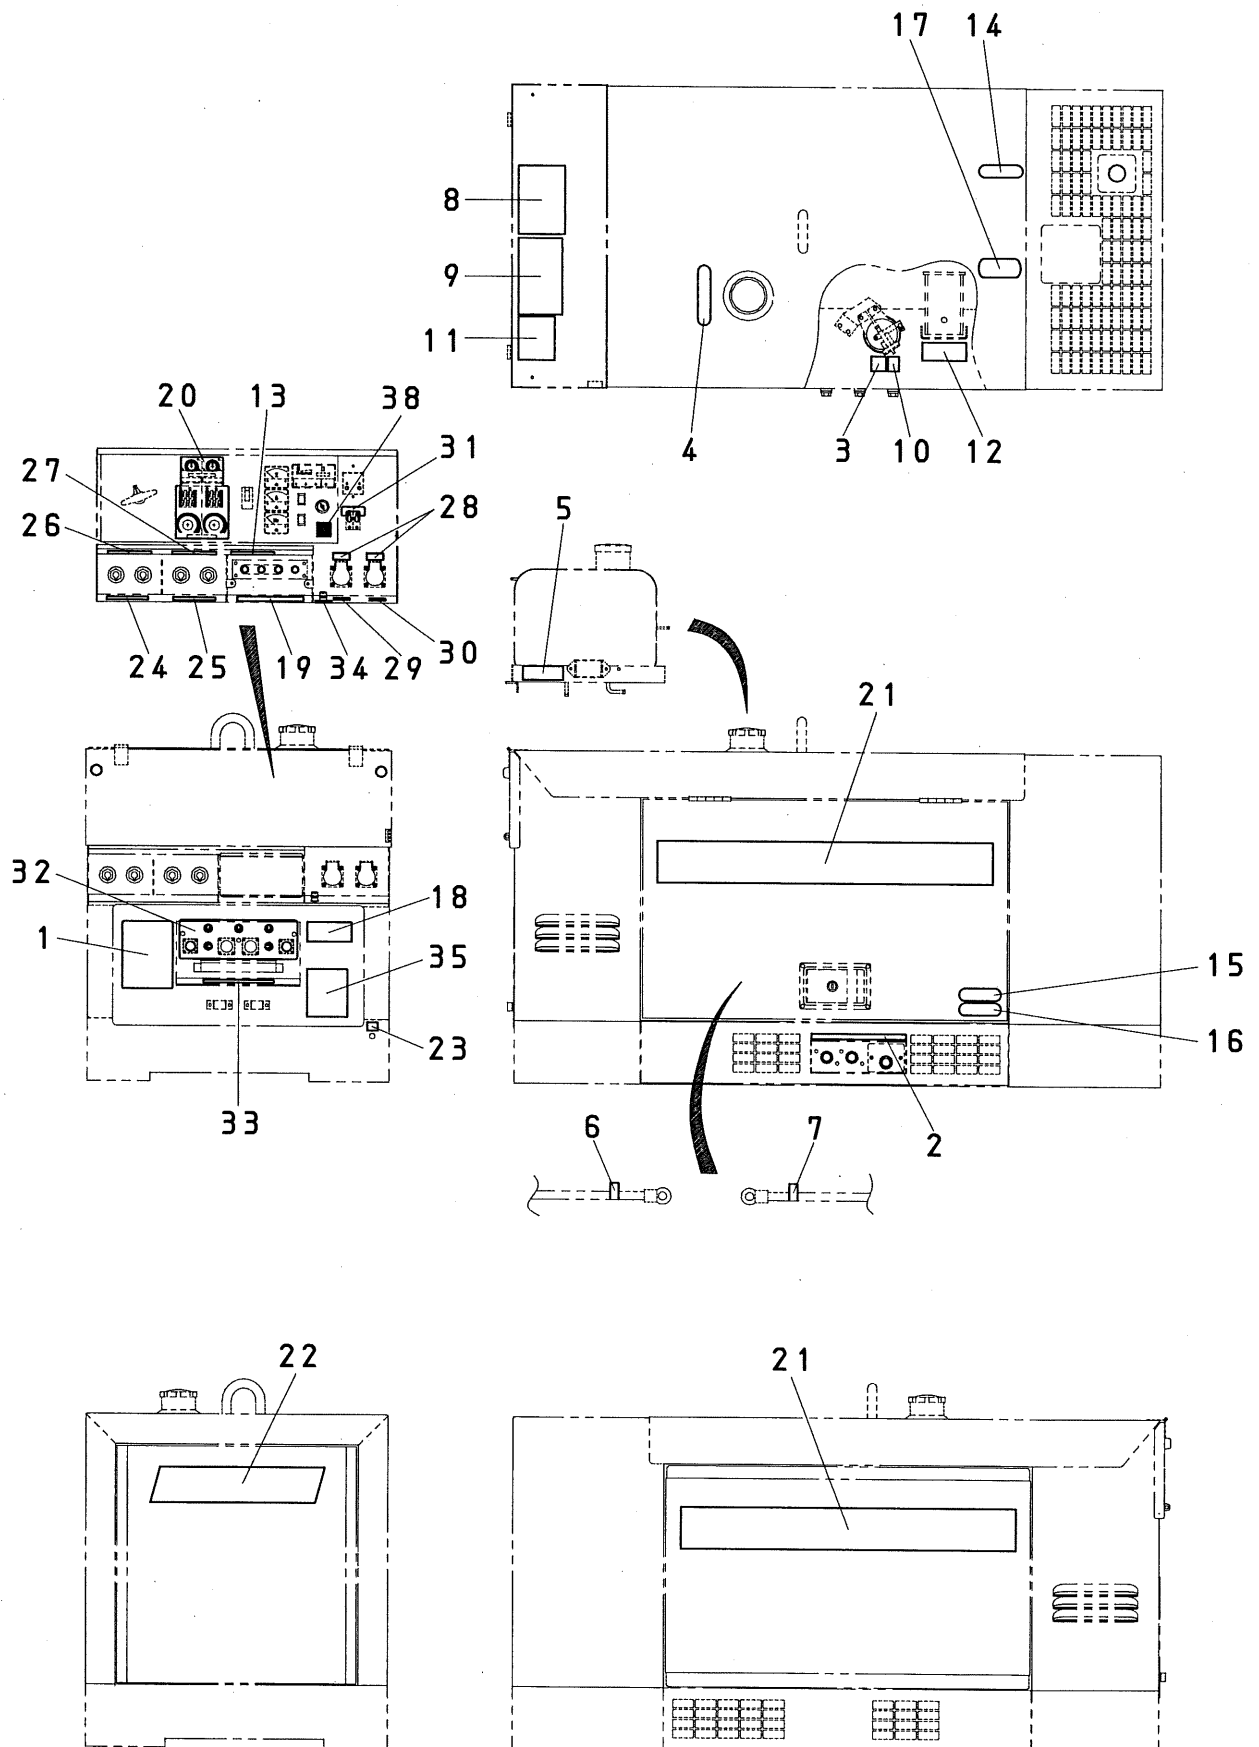

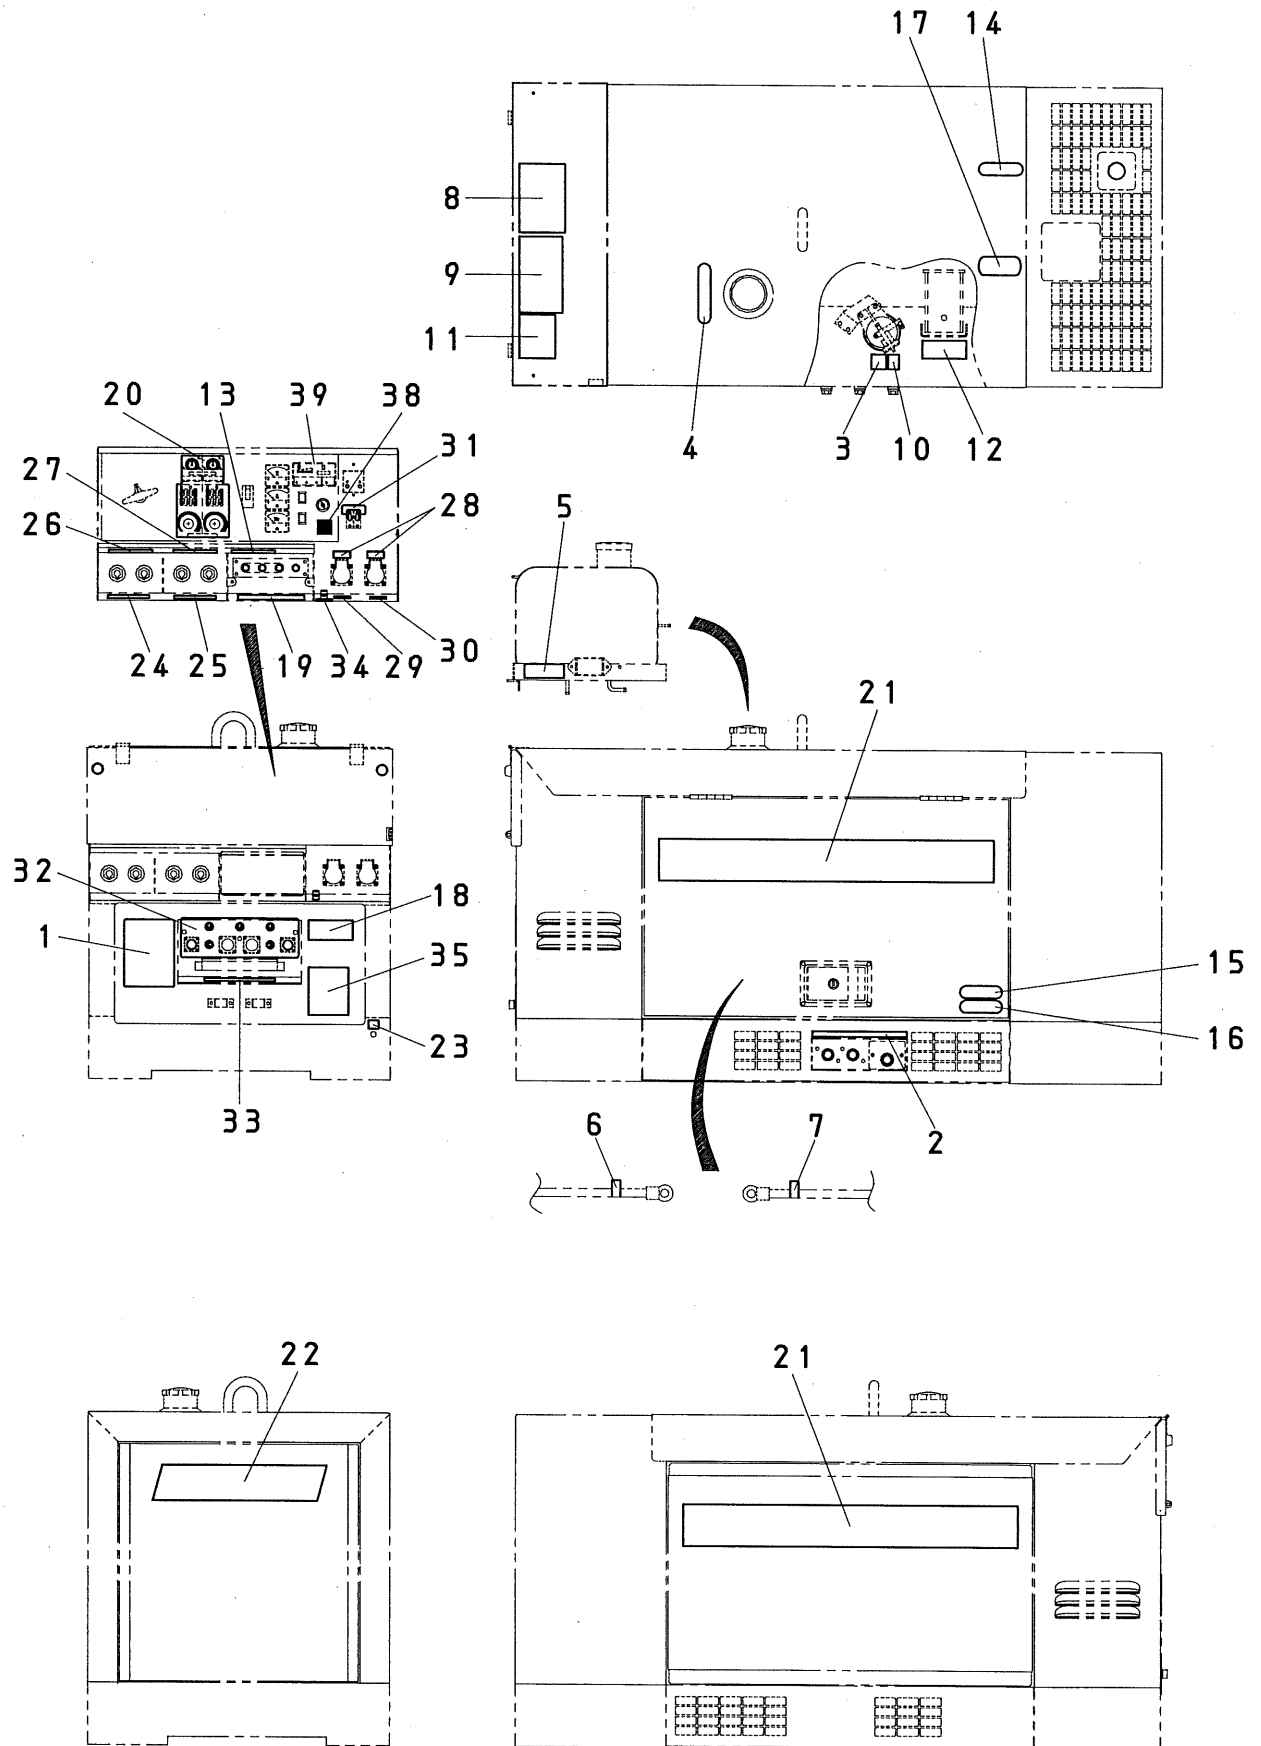

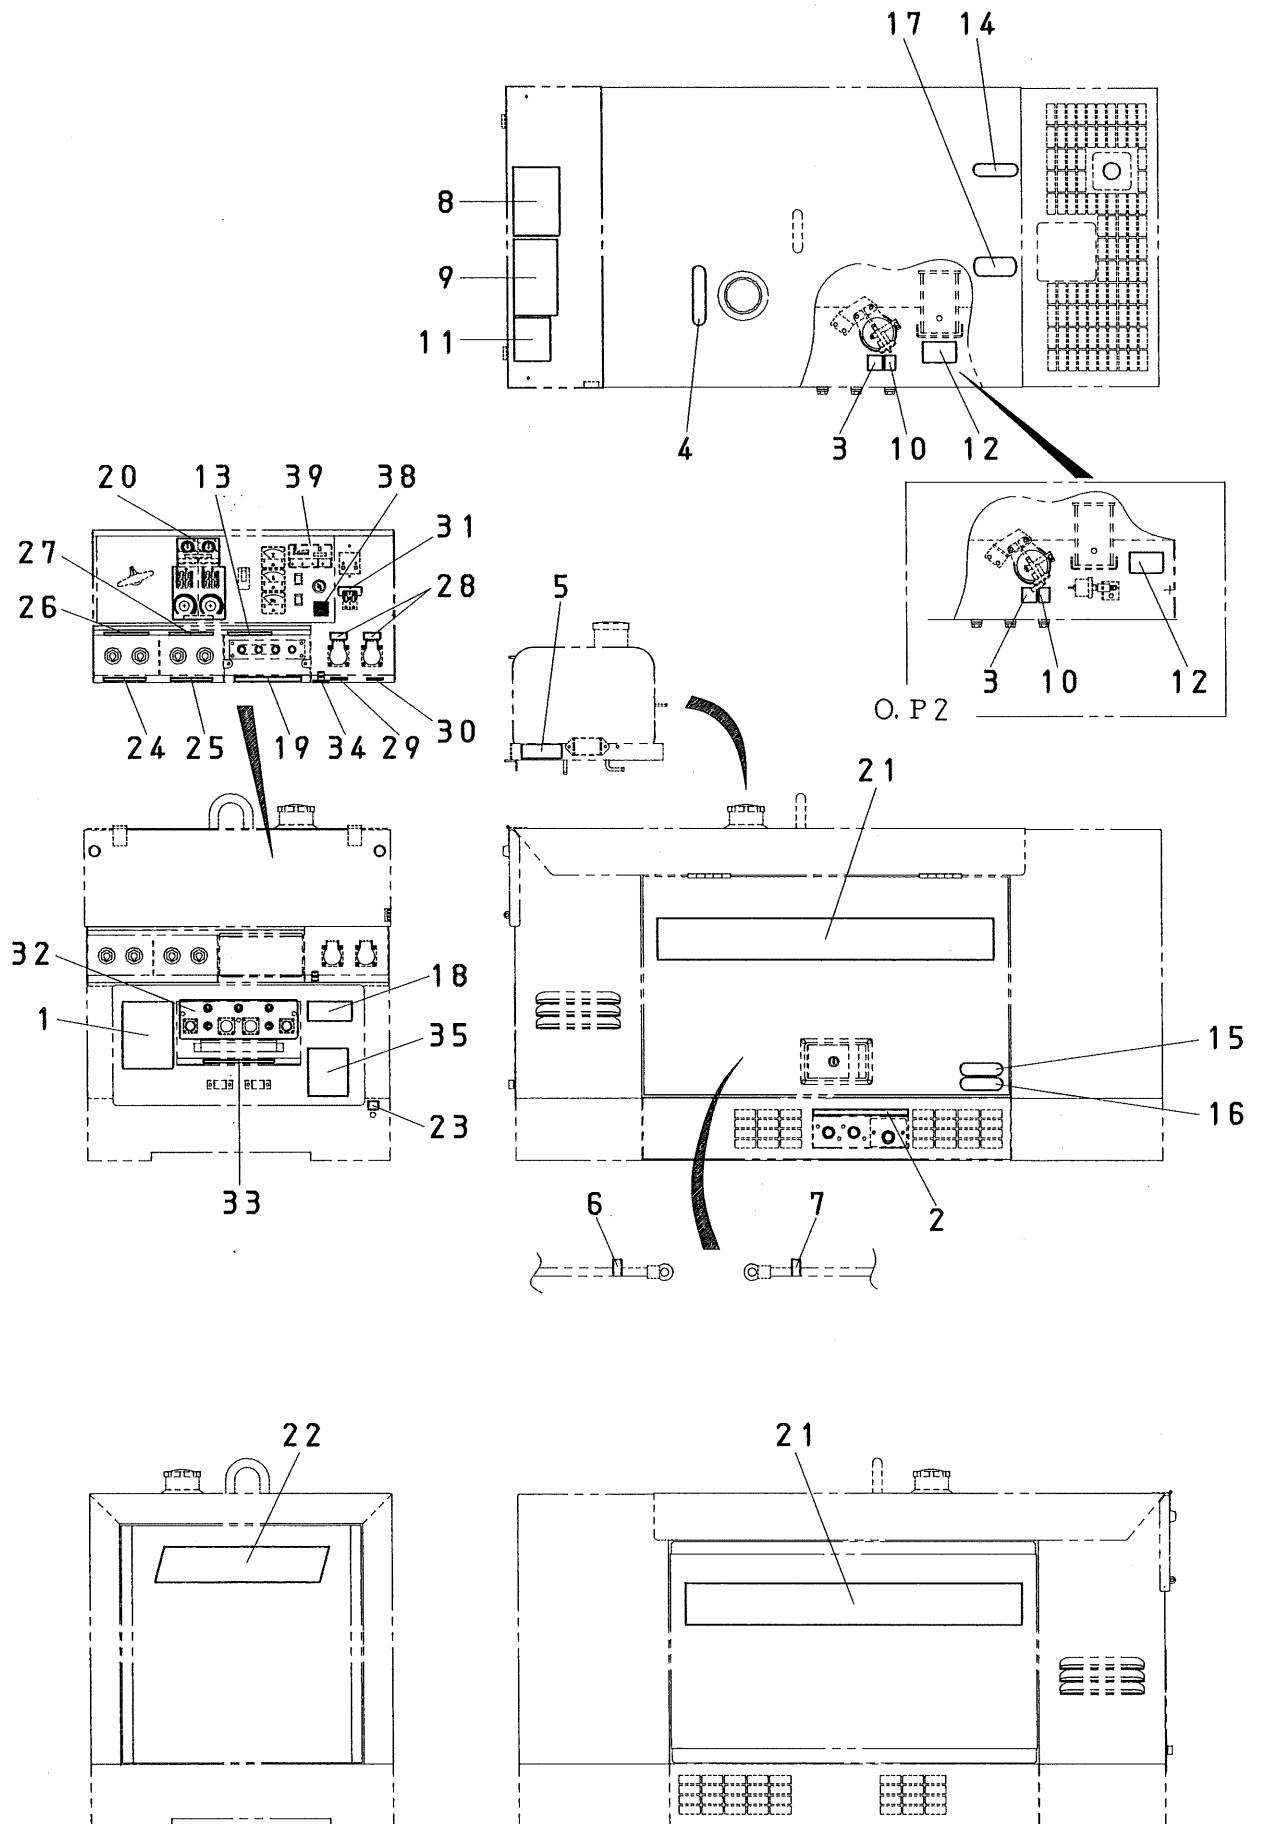

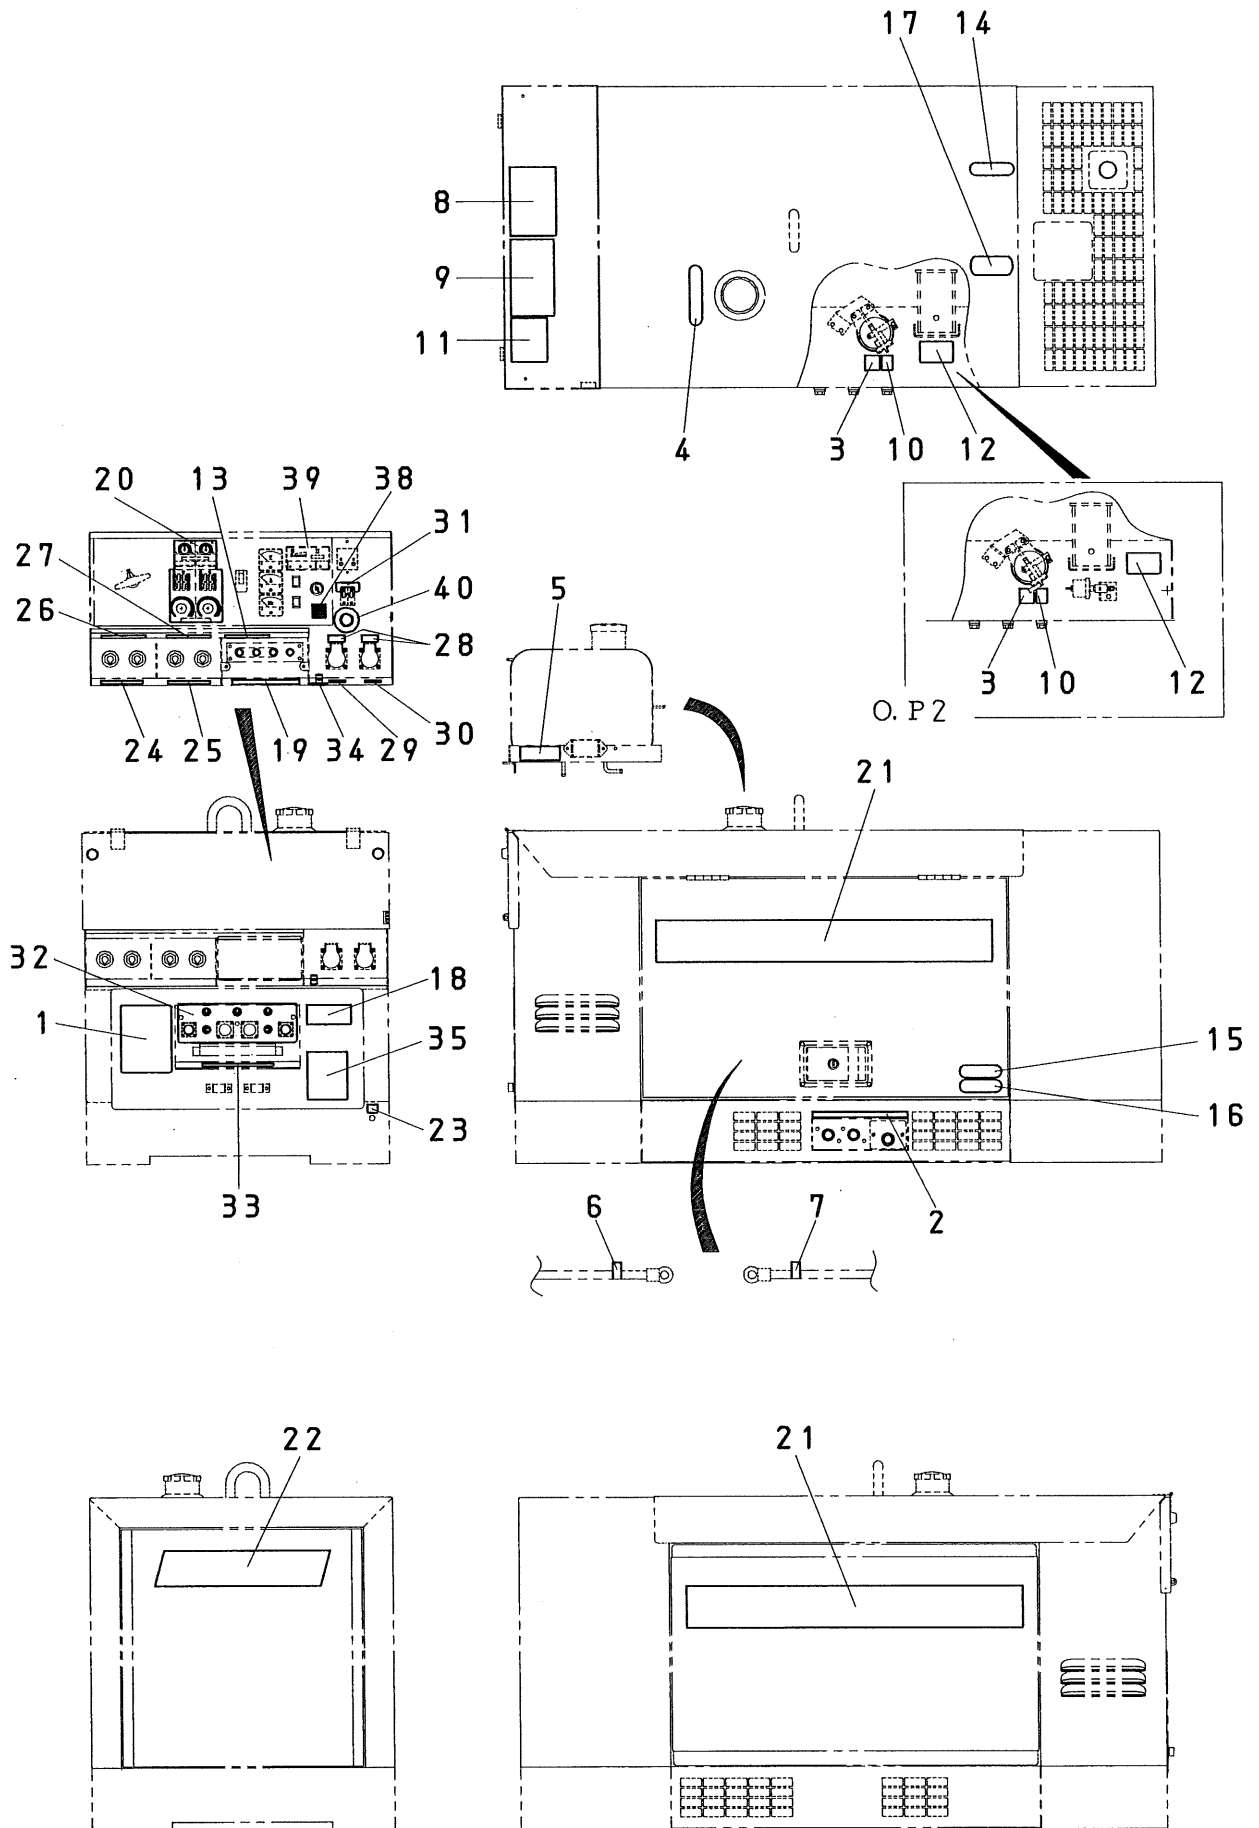

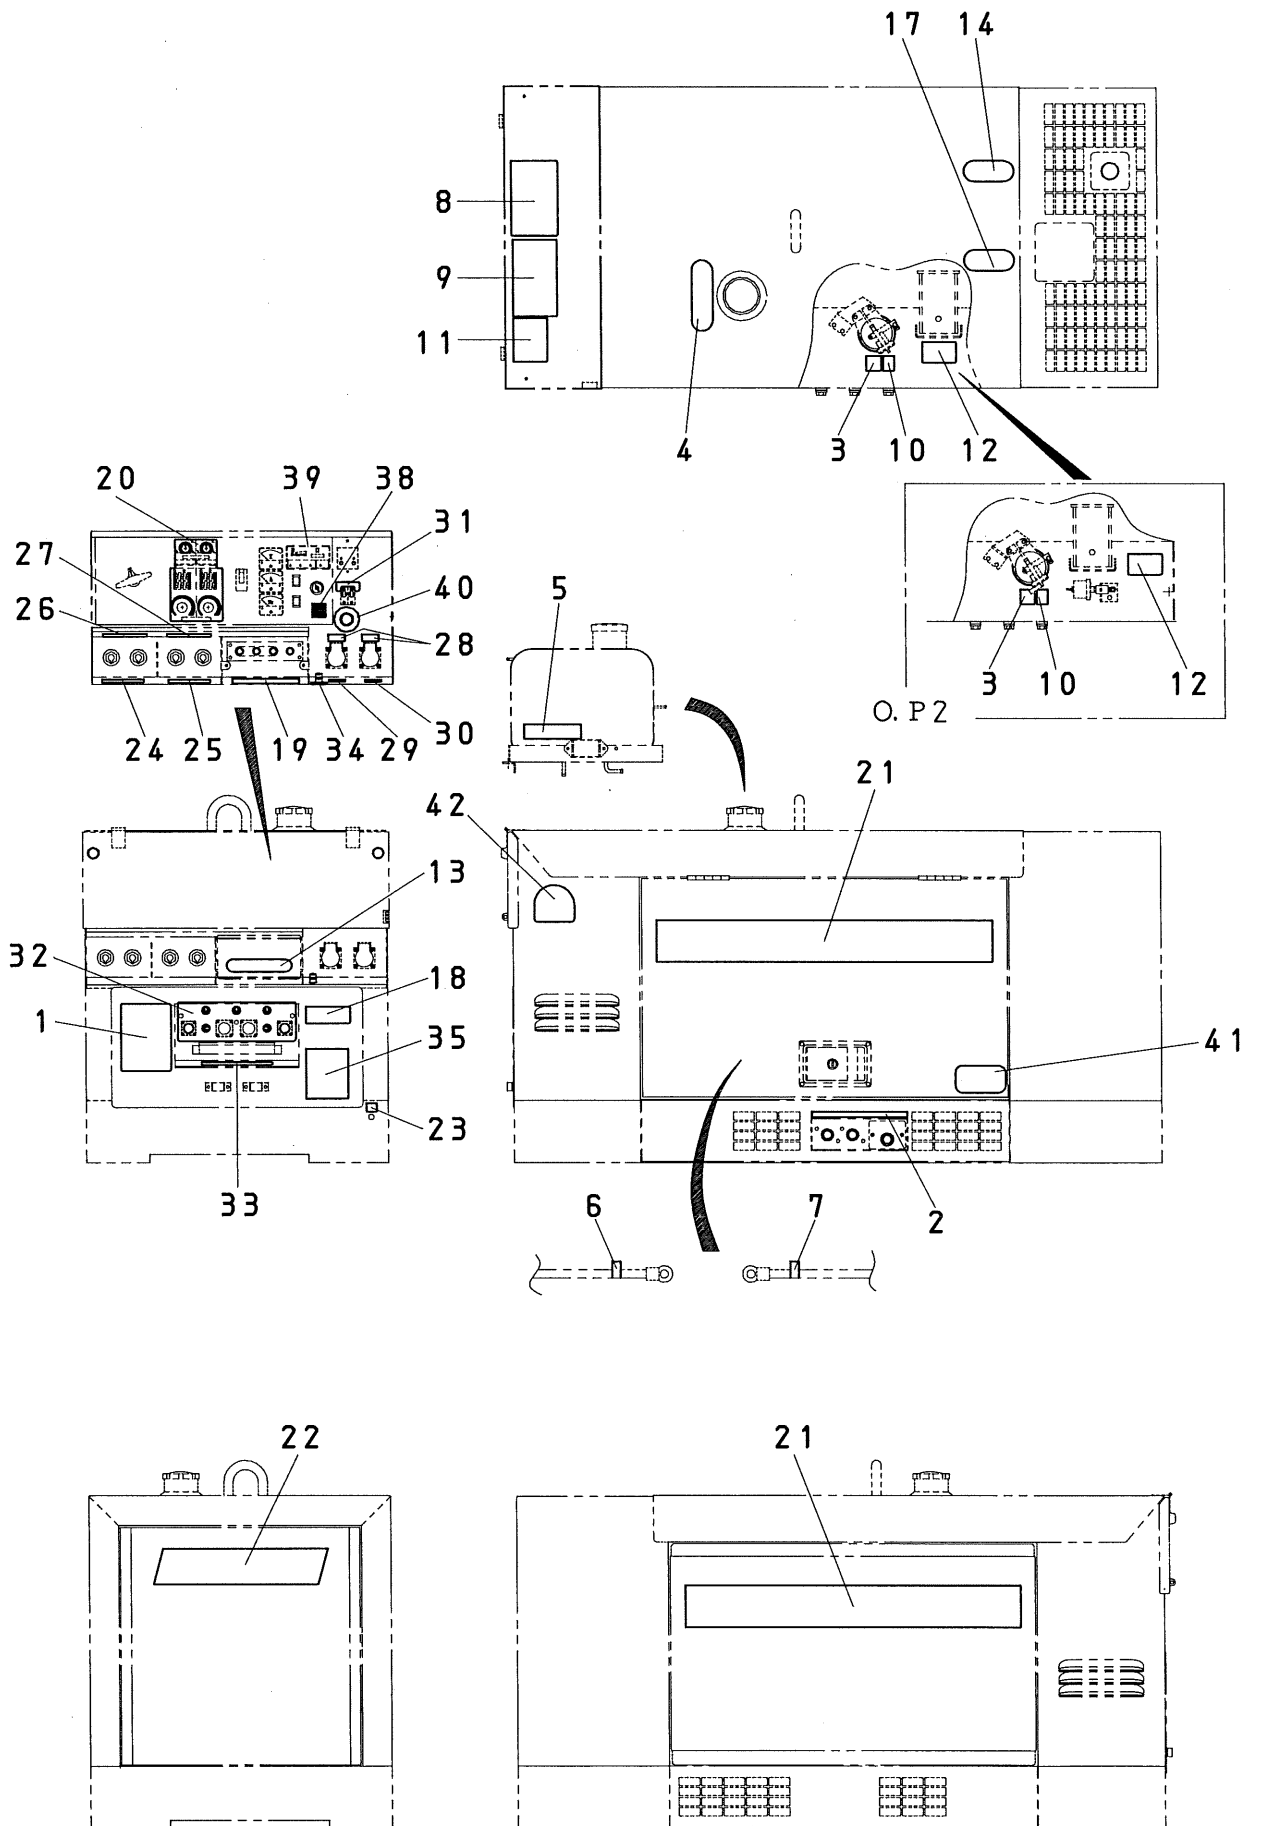

| Key No. | Parts No.     | Parts Name                    | Remarks     | Q'ty |   |   |   | Symbol | Serial No.          |
|---------|---------------|-------------------------------|-------------|------|---|---|---|--------|---------------------|
|         |               |                               |             | All  | A | B | C |        |                     |
|         |               | A=STD<br>B=O. P.              |             |      |   |   |   |        |                     |
| 1       | D 65311 00903 | Decal;Specification           | D6311 0090A | 1    |   |   |   |        | ~5725312            |
|         | D 65311 01003 | Decal;Specification           | D6311 0100  | 1    |   |   |   |        | 5725313~<br>5812029 |
|         | D 65311 01013 | Decal;Specification           | D6311 0101A | 1    |   |   |   |        | 5812030~<br>5836132 |
|         | D 65311 01023 | Decal;Specification           | D6311 0102  | 1    |   |   |   |        | 5836133~            |
| 2       | W 16306 45004 | Decal;Oil Drain               | S-1403      | 1    |   |   |   |        | ~5725312            |
|         | D 65510 02504 | Decal;Drain                   | D6510 0250  | 1    |   |   |   |        | 5725313~            |
| 3       | W 16306 10404 | Decal;Caution                 | S-1406      | 1    |   |   |   |        | ~5816625            |
|         | D 95015 00004 | Decal;Caution                 | D9015 0000  | 1    |   |   |   |        | 5816626~            |
| 4       | B 95055 00704 | Decal;Diesel Fuel             | B9055 0070A | 1    |   |   |   |        | ~5816625            |
|         | D 95045 00504 | Decal;Diesel Fuel             | D9045 0050  | 1    |   |   |   |        | 5816626~            |
| 5       | W 08206 50604 | Decal;Danger Explosive Gases  |             | 1    |   |   |   |        | ~5816625            |
|         | D 95043 00004 | Decal;Danger Explosive Gases  | D9043 0000A | 1    |   |   |   |        | 5816626~            |
| 6       | W 08006 89404 | Decal;+                       | S-2090      | 1    |   |   |   |        |                     |
| 7       | W 08006 89504 | Decal;-                       | S-2091      | 1    |   |   |   |        |                     |
| 8       | D 45520 04503 | Decal;Important "Check Daily" | D4520 0450  | 1    |   |   |   |        | ~5816625            |
|         | D 55510 07903 | Decal;Important "Check Daily" | D5510 0790A | 1    |   |   |   |        | 5816626~            |
| 9       | D 45520 04603 | Decal;Warning                 | D4520 0460  | 1    |   |   |   |        | ~5816625            |
|         | D 55510 08003 | Decal;Warning                 | D5510 0800A | 1    |   |   |   |        | 5816626~            |
| 10      | W 19806 80004 | Decal;Fuel Cock               | S-3704      | 1    |   |   |   |        |                     |
| 11      | D 95121 00404 | Decal;Safety instructions     | D9121 0040A | 1    |   |   |   |        | ~5816625            |
|         | D 95111 01004 | Decal;Safety instructions     | D9111 0100  | 1    |   |   |   |        | 5816626~            |
| 12      | B 95050 00304 | Decal;Caution                 | B9050 0030  | 1    |   |   |   |        | ~5816625            |

| Key No. | Parts No.     | Parts Name                    | Remarks    | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|-------------------------------|------------|------|---|---|---|--------|------------|
|         |               |                               |            | All  | A | B | C |        |            |
| 13      | D 95040 00204 | Decal;Caution                 | D9040 0020 | 1    |   |   |   |        | 5816626~   |
|         | D 95221 00304 | Decal;Danger High Voltage     | D9221 0030 | 1    |   |   |   |        | ~5816625   |
|         | D 95211 01104 | Decal;Danger High Voltage     | D9211 0110 | 1    |   |   |   |        | 5816626~   |
| 14      | D 95022 00004 | Decal;Warning                 | D9022 0000 | 1    |   |   |   |        | ~5816625   |
|         | D 95042 00504 | Decal;Warning                 | D9042 0050 | 1    |   |   |   |        | 5816626~   |
| 15      | B 95052 00204 | Decal;Caution Hot Parts       | B9052 0020 | 1    |   |   |   |        | ~5816625   |
| 16      | B 95050 00504 | Decal;Warning Moving Parts    | B9050 0050 | 1    |   |   |   |        | ~5816625   |
| 17      | B 95051 00304 | Decal;Warning Hot Coolant     | B9051 0030 | 1    |   |   |   |        | ~5816625   |
|         | D 95041 00104 | Decal;Warning Hot Coolant     | D9041 0010 | 1    |   |   |   |        | 5816626~   |
| 18      | B 95111 00304 | Decal;Warning                 | B9111 0030 | 1    |   |   |   |        | ~5816625   |
|         | D 95111 01104 | Decal;Warning                 | D9111 0110 | 1    |   |   |   |        | 5816626~   |
| 19      | W 08006 53104 | Decal;3-Phase Output Terminal | S-1429     | 1    |   |   |   |        | ~5725312   |
|         | D 65510 01904 | Decal;3-Phase Output Terminal | D6510 0190 | 1    |   |   |   |        | 5725313~   |
| 20      | D 65510 00602 | Decal;Control Panel           |            | 1    |   |   |   |        |            |
| 21      | D 65610 00003 | Decal;Model Name              |            | 2    |   |   |   |        | ~5758658   |
|         | D 55610 00903 | Decal;Model Name              |            | 2    |   |   |   |        | 5758659~   |
| 22      | E 95112 01203 | Decal;Denyo                   |            | 1    |   |   |   |        |            |
| 23      | W 08406 23704 | Decal;Ground for Bonnet       | S-2954     | 1    |   |   |   |        | ~5725312   |
|         | D 65510 02004 | Decal;Ground for Bonnet       | D6510 0200 | 1    |   |   |   |        | 5725313~   |
| 24      | D 55510 02104 | Decal;Welding Output Terminal | D5510 0210 | 1    |   |   |   |        | ~5725312   |
|         | D 65510 02304 | Decal;Welding Output Terminal | D6510 0230 | 1    |   |   |   |        | 5725313~   |
| 25      | D 55510 02204 | Decal;Welding Output Terminal | D5510 0220 | 1    |   |   |   |        | ~5725312   |
|         | D 65510 02404 | Decal;Welding Output Terminal | D6510 0240 | 1    |   |   |   |        | 5725313~   |

| Key No. | Parts No.     | Parts Name                           | Remarks     | Q'ty |   |   |   | Symbol | Serial No. |
|---------|---------------|--------------------------------------|-------------|------|---|---|---|--------|------------|
|         |               |                                      |             | All  | A | B | C |        |            |
| 26      | D 55510 01904 | Decal;Welding Output Terminal        | D5510 0190  | 1    |   |   |   |        | ~5725312   |
|         | D 65510 02104 | Decal;Welding Output Terminal        | D6510 0210  | 1    |   |   |   |        | 5725313~   |
| 27      | D 55510 02004 | Decal;Welding Output Terminal        | D5510 0200  | 1    |   |   |   |        | ~5725312   |
|         | D 65510 02204 | Decal;Welding Output Terminal        | D6510 0220  | 1    |   |   |   |        | 5725313~   |
| 28      | W 08006 62204 | Decal;AC 220V                        | S-867       | 2    |   |   |   |        |            |
| 29      | D 95210 01104 | Decal;Receptacle, 1-Phase power      | D9210 0110  | 1    |   |   |   |        |            |
| 30      | D 95210 01204 | Decal;Receptacle, 1-Phase power      | D9210 0120  | 1    |   |   |   |        |            |
| 31      | D 65510 00304 | Decal;AC Circuit Breaker             | D6510 0030  | 1    |   |   |   |        | ~5725312   |
|         | D 65510 02804 | Decal;AC Circuit Breaker             | D6510 0280  | 1    |   |   |   |        | 5725313~   |
| 32      | D 65510 00403 | Decal;Remote                         | D6510 0040  | 1    |   |   |   |        | ~5718014   |
|         | D 65510 01803 | Decal;Remote                         | D6510 0180  | 1    |   |   |   |        | 5718015~   |
| 33      | D 65510 00504 | Decal;Terminal Board                 | D6510 0050  | 1    |   |   |   |        | ~5718014   |
|         | D 65510 01704 | Decal;Terminal Board                 | D6510 0170  | 1    |   |   |   |        | 5718015~   |
| 34      | W 85006 13104 | Decal;Ground for Earth Leakage Relay | S-4738      |      |   | 1 |   |        | ~5725312   |
|         | D 65510 02904 | Decal;Ground for ELR                 | D6510 0290  |      |   | 1 |   |        | 5725313~   |
| 35      | W 85006 13304 | Decal;Caution Earth Leakage Relay    | S-4741A     |      |   | 1 |   |        | ~5816625   |
|         | D 95045 00604 | Decal;Caution Earth Leakage Relay    | D9045 0060  |      |   | 1 |   |        | 5816626~   |
| 36      | W 16306 47004 | Decal;Coolant Drain                  | S-1404      | 1    |   |   |   |        | ~5725312   |
| 37      | W 78106 80104 | Decal;Fuel Drain                     | S-3060      | 1    |   |   |   |        | ~5725312   |
| 38      | D 95111 00904 | Decal;EAC Mark                       |             | 1    |   |   |   |        | 5758659~   |
| 39      | B 95210 20703 | Decal;Operation Display              | B9210 2070A | 1    |   |   |   |        | 5762223~   |
| 40      | A 95210 06104 | Decal;Emergency Stop                 |             | 1    |   |   |   |        | 5812030~   |
| 41      | D 95042 00404 | Decal                                | D9042 0040  | 1    |   |   |   |        | 5816626~   |

480ESW

Name Plate Ass'y

| Key No. | Parts No.     | Parts Name         | Remarks    | Q' ty |   |   |   | Symbol | Serial No. |
|---------|---------------|--------------------|------------|-------|---|---|---|--------|------------|
|         |               |                    |            | All   | A | B | C |        |            |
| 42      | B 95111 03304 | Decal;Eco Products | B9111 0330 | 1     |   |   |   |        | 5816626~   |